EE-557 Semiconductor devices I

Optoelectronics devices

Mine Kaynak Sirit Electronics and Photonics Materials Program Koç University, Istanbul

Outline of the lecture

- Dynamics of carrier generation
- Optoelectronics devices

References

- S.M. Sze Physics, course materials for a Ten-Integrated-Microelectronics-Course, Springer, 2021, 4th ed. (semiconductor chips) (You-Are-Here-Book)

Carrier Generation and Recombination

Key questions

How are these principles applied to optoelectronic devices?

What does the band gap represent

How to convert E_g into wavelength?

Calculate the wavelength of a photon with energy 3.1 eV:

$$\lambda = \frac{hc}{E} = \frac{4.14 \times 10^{-15}\ \text{eV·s} \times 3 \times 10^{8}\ \text{m/s}}{3.1\ \text{eV}} = 400\ \text{nm}$$

Optoelectronic processes

1. **Band to band transition** (direct or fundamental absorption): Photon energy must be greater than the band gap energy of the semiconductor.
2. **Free carrier absorption**: Photon energy is absorbed by free carriers (electrons in the conduction band or holes in the valence band) and increases the energy of these excited carriers (increasing temperature).
3. **Impurity absorption**: Photon energy is absorbed by impurities (dopants) and ionizes them. Photon energy must be greater than the ionization energy of the impurity.
4. **Lattice absorption**: Photon energy is absorbed by the crystal lattice and increases the energy of lattice vibrations (phonons). Photon energy must be equal to the energy of the lattice vibrations (phonons).



- E_g can be varied by **compound semiconductors** and **alloy semiconductors**, we should work with these materials.
- Most interesting: The III-V compounds are all direct semiconductors and span a much larger range of wavelengths than Si: AlAs, GaAs, InP, GaP, InAs, InSb, GaSb, AlSb, and their alloys.
- Where the VBM is lower (more negative) than the CBM, the material is a semiconductor and direct.
- Two key effects that convert a photon to electrons and holes, and thereby dependent due to the propagation of photons.
- Another is a much stronger coupled (much more visible).

Light emitting diodes

A simplified picture

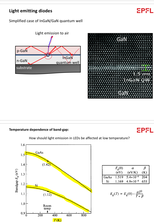

Photons in Future Electronics

Light emitting diodes

A simplified picture

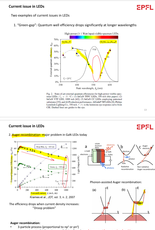

Photons in Future Electronics

Light emitting diodes

Improving the efficiency in emitting photons:

Internal quantum efficiency (IQE): ratio of emitted photons per electron-hole recombinations

$$\eta_{IQE} = \frac{R_{rad}}{R_{rad} + R_{nonrad}}$$



Quantum wells:

- materials with smaller band gap
- Increase the interaction between electrons and holes: more recombinations
- Photons are emitted with the energy of the smaller band gap material

Light emitting diodes

Quantum wells:

- In GaN system, quantum wells are typically made out of InGaN
- The In content determines the energy of the photons (color of the light)



Bandgap energy versus In composition for InGaN ternary within visible spectrum energy range

Light emitting diodes

Simplified case of InGaN/GaN quantum well

Temperature dependence of band gap

At high temperatures, the interatomic spacing increases when the amplitude of the atomic vibrations increases due to the increase in the thermal energy of the crystal.

The energy of the band gap decreases with increasing temperature and increase at low temperatures.

Temperature dependence of band gap

What happens for red LEDs? https://www.youtube.com/watch?v=GdBDNhmzrI

What happens for blue LEDs? https://www.youtube.com/watch?v=RFGmHVmxaE

Current issue in LEDs

Two examples of current issues in LEDs:

1. "Green gap": Quantum well efficiency drops significantly at longer wavelengths

Fig. 1. Internal quantum efficiency as a function of wavelength for typical commercial LEDs grown on sapphire substrates. The efficiency is relatively high for blue LEDs, but drops off rapidly for green, yellow, and red LEDs. This is known as the "green gap" problem. Data courtesy of Philips Lumileds Lighting Co. [1]. — Can be referenced as citation at the end of the slide.

Current issue in LEDs

2. **Auger recombination**: power problem in GaN LEDs today

The efficiency drops when current density increases: "droop problem"

Auger recombination:

- Carrier density proportional to n^3 or p^3.
- energy given to third carrier, **needs lots of carriers**, **shows up at large carrier densities**

How to produce white LED for lighting?

Combine different color emitters to produce white light

combine different color emitters to produce white light

J. Cho et al., Laser Photonics Rev. 11, No. 2, 1600147 (2017)

To produce white light, mix the correct ratio of colors.

How to produce white LED for lighting?

Transparent layer
Blue light
Blue-light-emitting quantum well
Phosphor
Yellow light
Phosphor-converted light
Phosphor-converted light
Blue light
Yellow light
Phosphor
Blue-light-emitting quantum well