


MSE 423 Fall 2025 – Week 13

In/homogeneous semiconductors



Russell Ohl

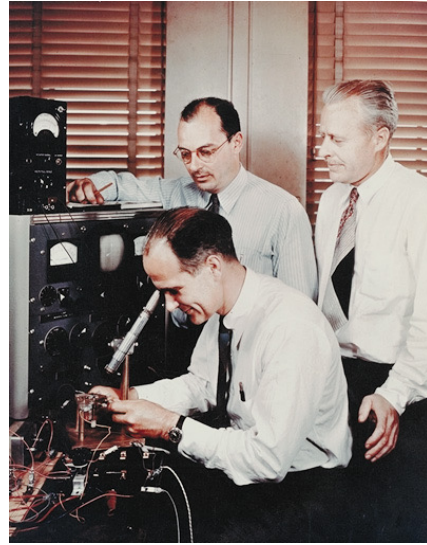

Shockley, Bardeen, and Brattain

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Last week

- Tight-binding (LCAO for a solid)
- Bloch sums for an atomic (“exploded”) crystal and for a real crystal
- From levels to bands
- How many bands are filled?
- Band structure of graphene, carbon nanotubes
- Semiconductors – basic electrical and optical properties

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Sb-doped Germanium



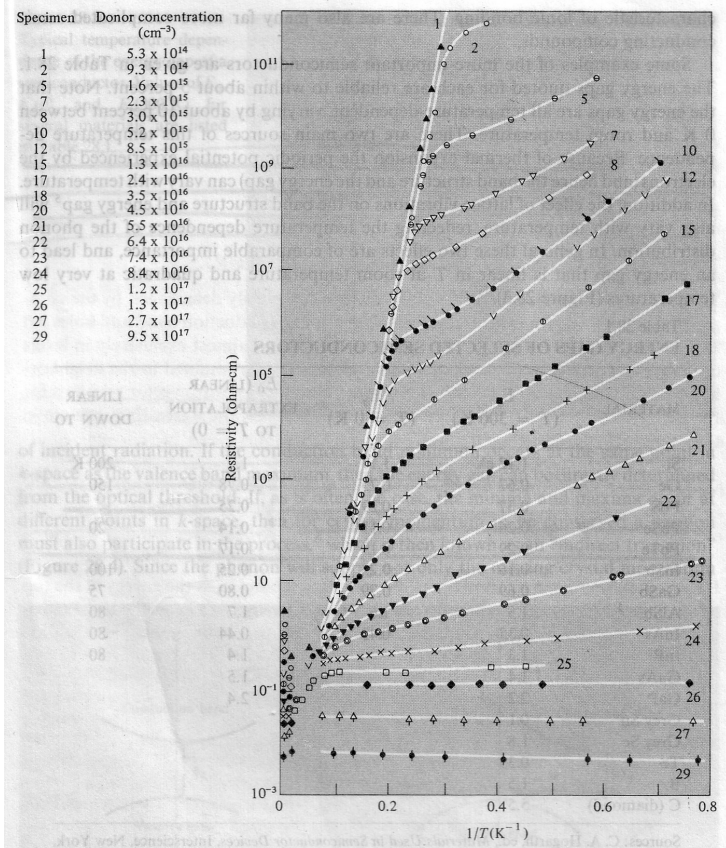


Figure 28.2 The resistivity of antimony-doped germanium as a function of $1/T$ for several impurity concentrations. (From H. J. Fritzsche, *J. Phys. Chem. Solids* 6, 69 (1958).)

MSE 423 Fundamentals o

Optical absorption in Ge

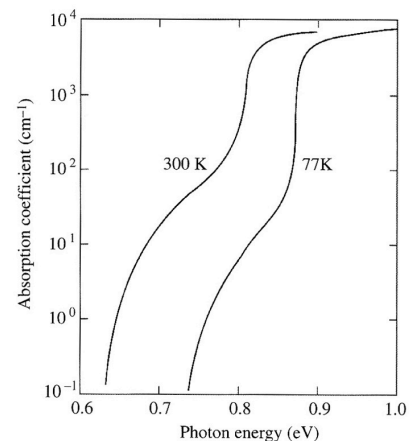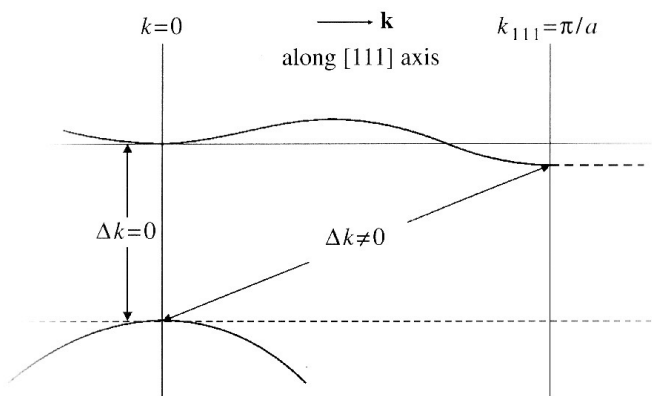

Density of carriers at thermal equilibrium


$$n_c(T) = \int_{\epsilon_c}^{\infty} d\epsilon g_c(\epsilon) \frac{1}{e^{(\epsilon-\mu)/k_B T} + 1}$$

$$p_v(T) = \int_{-\infty}^{\epsilon_v} d\epsilon g_v(\epsilon) \left(1 - \frac{1}{e^{(\epsilon-\mu)/k_B T} + 1} \right)$$

$$= \int_{-\infty}^{\epsilon_v} d\epsilon g_v(\epsilon) \left(\frac{1}{e^{(\mu-\epsilon)/k_B T} + 1} \right)$$

$$\frac{1}{e^{(\epsilon-\mu)/k_B T} + 1} \approx e^{-(\epsilon-\mu)/k_B T}, \quad \epsilon > \epsilon_c$$

$$\frac{1}{e^{(\mu-\epsilon)/k_B T} + 1} \approx e^{-(\mu-\epsilon)/k_B T}, \quad \epsilon < \epsilon_v$$

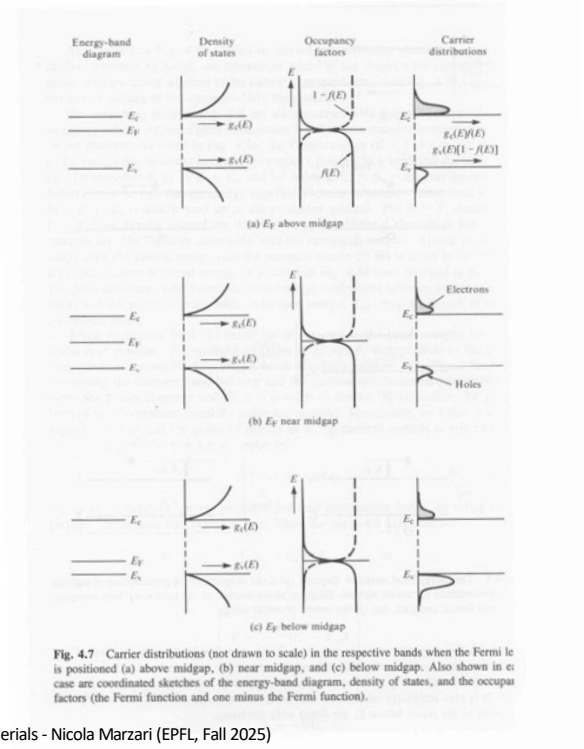

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)


Density of carriers at thermal equilibrium (non-degenerate sc)

$$n_c(T) = \int_{\epsilon_c}^{\infty} d\epsilon g_c(\epsilon) \frac{1}{e^{(\epsilon-\mu)/k_B T} + 1}$$

$$\approx \int_{\epsilon_c}^{\infty} d\epsilon g_c(\epsilon) e^{-(\epsilon-\mu)/k_B T}$$

$$= \left\{ \int_{\epsilon_c}^{\infty} d\epsilon g_c(\epsilon) e^{-(\epsilon-\epsilon_c)/k_B T} \right\} e^{-(\epsilon_c-\mu)/k_B T}$$

$$= N_c(T) e^{-(\epsilon_c-\mu)/k_B T}$$

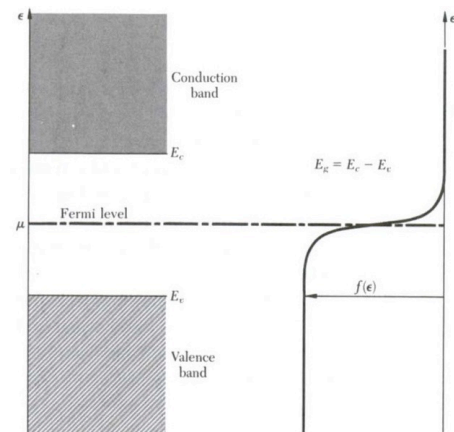

$$p_v(T) = \int_{-\infty}^{\epsilon_v} d\epsilon g_v(\epsilon) \left(1 - \frac{1}{e^{(\epsilon-\mu)/k_B T} + 1} \right) = \dots = P_v(T) e^{-(\mu-\epsilon_v)/k_B T}$$

Density of available states (isotropic effective mass)

$$g_{c,v}(\epsilon) = \sqrt{2|\epsilon - \epsilon_{c,v}|} \frac{m_{c,v}^{3/2}}{\hbar^3 \pi^2}$$

$$N_c(T) = \int_{\epsilon_c}^{\infty} d\epsilon g_c(\epsilon) e^{-(\epsilon - \epsilon_c)/K_B T}$$

$$P_v(T) = \int_{-\infty}^{\epsilon_v} d\epsilon g_v(\epsilon) e^{-(\epsilon_v - \epsilon)/K_B T}$$

$$N_c(T) = \frac{1}{4} \left(\frac{2m_c k_B T}{\pi \hbar^2} \right)^{3/2} \quad N_c(T) = 2.5 \left(\frac{m_c}{m} \right)^{3/2} \left(\frac{T}{300K} \right)^{3/2} 10^{19} / \text{cm}^3$$

$$P_v(T) = \frac{1}{4} \left(\frac{2m_v k_B T}{\pi \hbar^2} \right)^{3/2} \quad P_v(T) = 2.5 \left(\frac{m_v}{m} \right)^{3/2} \left(\frac{T}{300K} \right)^{3/2} 10^{19} / \text{cm}^3$$

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Miracle! Law of Mass Action

$$n_c(T) = N_c(T) e^{-(\epsilon_c - \mu)/K_B T}$$

$$p_v(T) = P_v(T) e^{-(\mu - \epsilon_v)/K_B T}$$

$$n_c(T) p_v(T) = N_c(T) P_v(T) e^{-\frac{(\epsilon_c - \epsilon_v)}{K_B T}}$$

$$= N_c(T) P_v(T) e^{-\frac{E_{gap}}{K_B T}}$$

This is a property of the material (does not depend on doping)


MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Intrinsic case

$$n_c(T) = p_v(T) \equiv n_i(T)$$

$$n_i = \sqrt{n_c p_v} = \sqrt{N_c P_v} e^{-E_g/2k_B T}$$

$$= 2.5 \left(\frac{m_c}{m}\right)^{\frac{3}{4}} \left(\frac{m_v}{m}\right)^{\frac{3}{4}} \left(\frac{T}{300K}\right)^{\frac{3}{2}} e^{-\frac{E_g}{2K_B T}} 10^{19}/cm^3$$

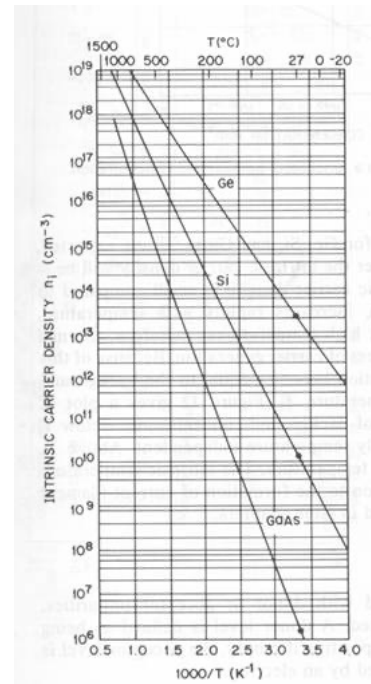

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Intrinsic case

$$n_c(T) = N_c(T) e^{-(\epsilon_c - \mu)/K_B T}$$

$$p_v(T) = P_v(T) e^{-(\mu - \epsilon_v)/K_B T}$$

$$1 = \frac{n_c(T)}{p_v(T)} = \frac{N_c(T)}{P_v(T)} e^{2\mu/K_B T} e^{(2\epsilon_v + E_g)/K_B T}$$


$$\mu = \mu_i = \epsilon_v + \frac{E_g}{2} + \frac{k_B T}{2} \ln \frac{P_v(T)}{N_c(T)}$$

$$= \epsilon_v + \frac{E_g}{2} + \frac{3}{4} K_B T \ln \left(\frac{m_v}{m_c} \right)$$

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Impurity levels

- Adding impurities can lead to controlled domination of one carrier type
 - n-type is dominated by electrons
 - p-type is dominated by holes
- Adding other impurities can degrade electrical properties

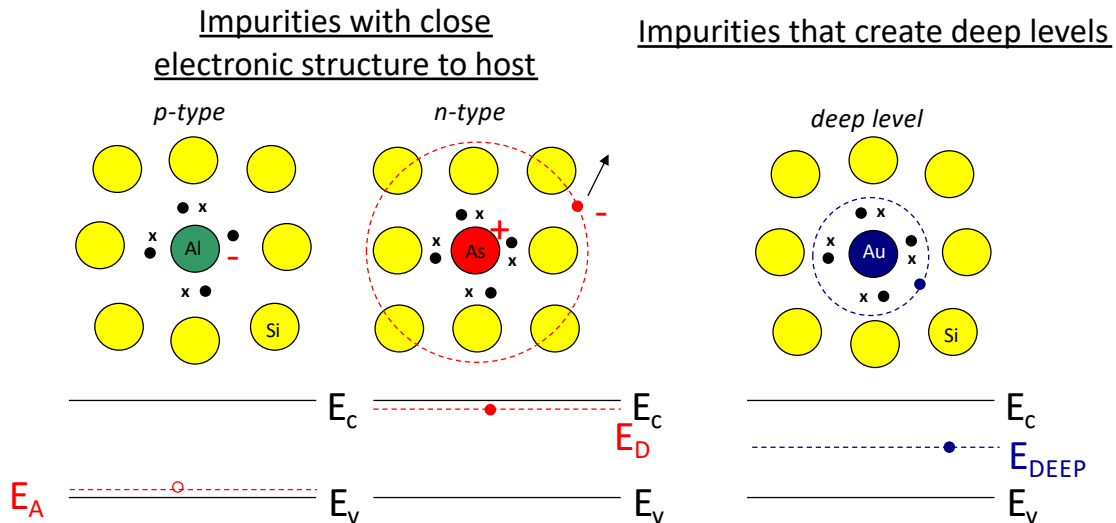

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Impurity states as “embedded” hydrogen atoms

- Consider the weakly bound 5th electron in phosphorus as a modified hydrogen atom
- For hydrogenic donors or acceptors, we can think of the electron or hole, respectively, as an orbiting electron around a net fixed charge
- We can estimate the energy to free the carrier into the conduction band or valence band by using a modified expression for the energy of an electron in the H atom

$$E_n = \frac{me^4}{8\epsilon_0^2 h^2 n^2} = -\frac{13.6}{n^2} \text{ (eV)}$$

$$E_n = \frac{me^4}{8\epsilon_0^2 h^2 n^2} \xrightarrow{\frac{e^2}{\epsilon_r} = e^2} \frac{m^* e^4}{8\epsilon_0^2 h^2 n^2} \frac{1}{\epsilon_r^2} = -\frac{13.6}{n^2} \frac{m^*}{m} \frac{1}{\epsilon^2}$$

Thus, for the ground state $n=1$, we can see already that since ϵ is of the order of ~ 10 , the binding energy of the carrier to the impurity atom is $< 0.1\text{eV}$

Expect that many carriers are then ionized at room T:

- B acceptor in Si: 0.046 eV
- P donor in Si: 0.044 eV
- As donor in Si: 0.049

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Impurity types, levels



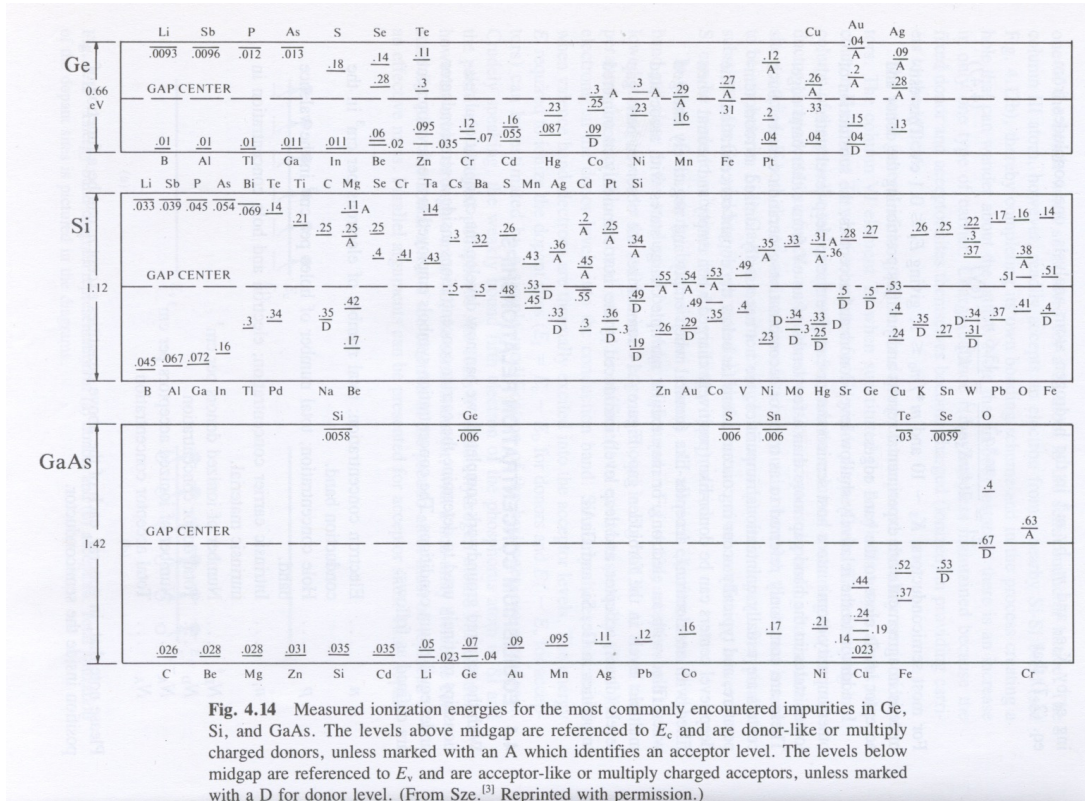


Fig. 4.14 Measured ionization energies for the most commonly encountered impurities in Ge, Si, and GaAs. The levels above midgap are referenced to E_c and are donor-like or multiply charged donors, unless marked with an A which identifies an acceptor level. The levels below midgap are referenced to E_v and are acceptor-like or multiply charged acceptors, unless marked with a D for donor level. (From Sze.^[3] Reprinted with permission.)

Temperature dependence of majority carriers

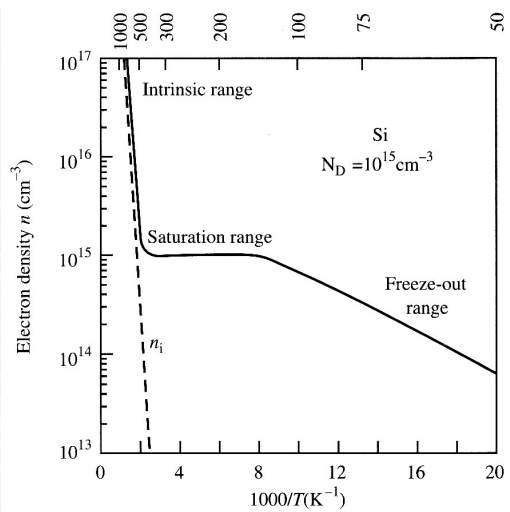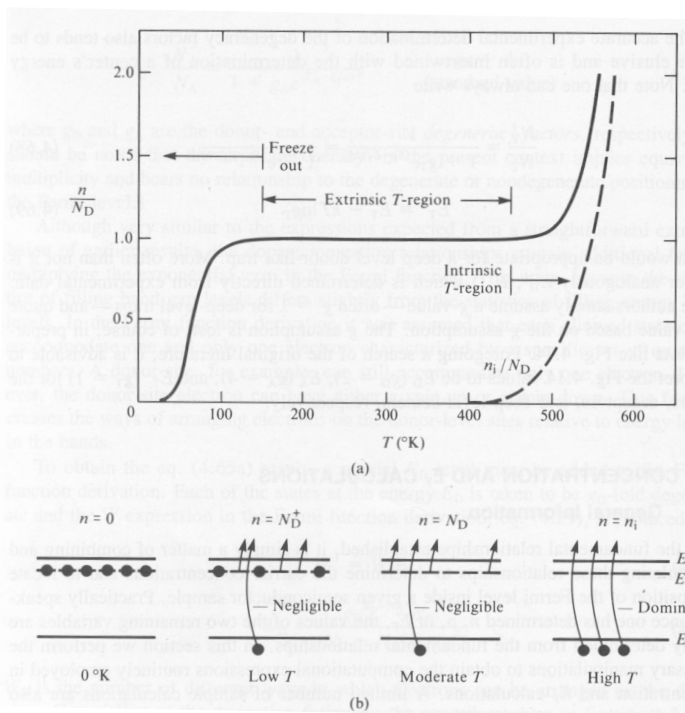

Inverse T plot

Conductivity in semiconductors

Conductivity in (doped) semiconductors can be computed as in metals once we know the density of charge carriers (at every T):

$$\sigma = n_c e \mu_e + p_v e \mu_p$$

Table 3 Carrier mobilities at room temperature, in cm²/V-s

Crystal	Electrons	Holes	Crystal	Electrons	Holes
Diamond	1800	1200	GaAs	8000	300
Si	1350	480	GaSb	5000	1000
Ge	3600	1800	PbS	550	600
InSb	800	450	PbSe	1020	930
InAs	30000	450	PbTe	2500	1000
InP	4500	100	AgCl	50	—
AlAs	280	—	KBr (100 K)	100	—
AlSb	900	400	SiC	100	10–20

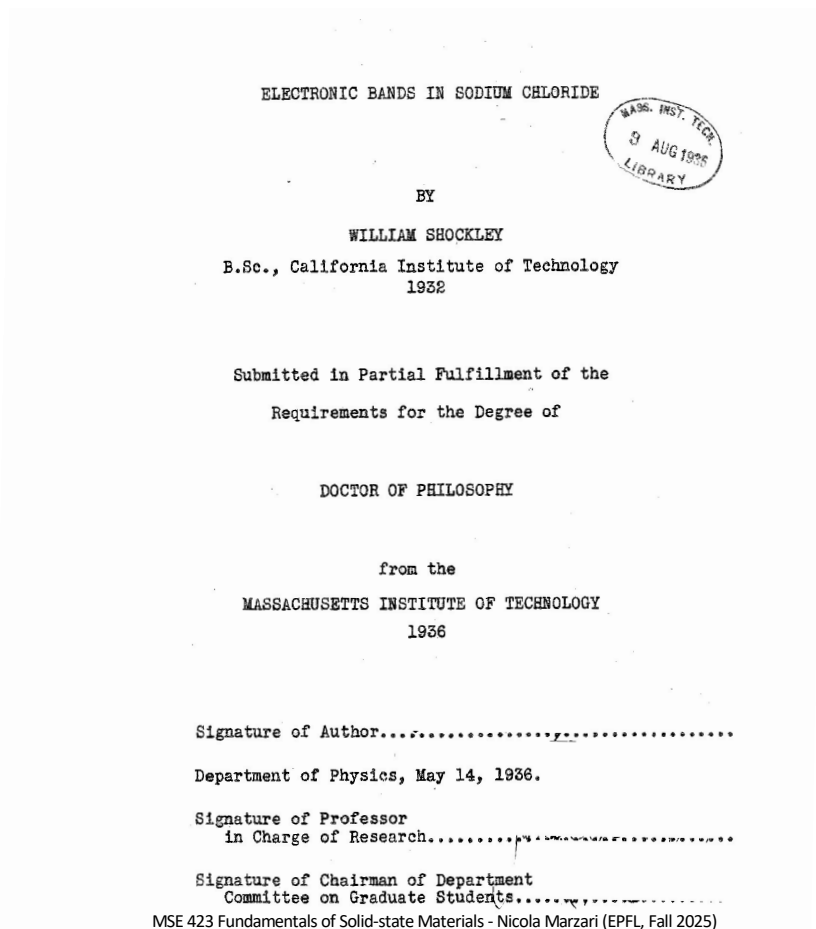


TABLE OF CONTENTS

	page
I. INTRODUCTION	1
II. THE FOCK EQUATIONS AND THE HARTREE APPROXIMATION	2
III. GENERAL REMARKS ABOUT THE POTENTIALS	23
IV. CALCULATION OF THE POTENTIAL AND THE RADIAL FUNCTIONS FOR THE FILLED BANDS	29
V. SOME THEOREMS INVOLVING CENTERS OF SYMMETRY	33
VI. FORMULATION OF THE BOUNDARY CONDITIONS	40
VII. Cl-Cl CASE	48
VIII. THE METHOD OF $k \rightarrow 0$	74
IX. METHODS OF CONSTRUCTING CONTOURS FOR THE FACE-CENTERED LATTICE	88
X. Na-Cl CUBE-CUBE JOINING	94
XI. Cl-Cl-Na JOINING	105
XII. SUMMARY OF THE WORK ON THE Cl ⁻ 3p BAND REMARKS ABOUT TOTAL ENERGY	116
XIII. CONCERNING EXCITATION	120
XIV. TEST OF THE SLATER CONDITIONS FOR FACE-CENTERED LATTICES	131

MSE 423 Fundamentals of Solid State Physics (EPFL, Fall 2025)

Equilibrium carrier densities of impure/extrinsic/doped semiconductors (simplified)

n-type doping: $N_d \gg N_a$

$$n_c \approx N_d \quad p_v = \frac{n_i^2}{N_d}$$

p-type doping: $N_a \gg N_d$

$$p_v \approx N_a \quad n_c = \frac{n_i^2}{N_a}$$

How does the chemical potential move?

n-type doping: $N_d \gg N_a$

$$\mu = \mu_i + k_B T \ln \left(\frac{N_d}{n_i} \right)$$

p-type doping: $N_a \gg N_d$

$$\mu = \mu_i - k_B T \ln \left(\frac{N_a}{n_i} \right)$$

$$N_{d/a} \gg n_i$$

Si: n and p type doping

At finite T

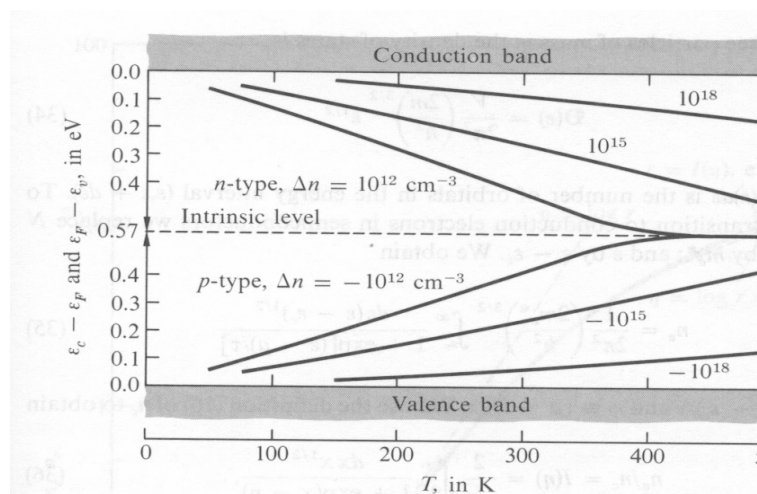


Figure 13.3 The Fermi level in silicon as a function of temperature, for various doping concentrations. The Fermi levels are expressed relative to the band edges. A small decrease of the energy gap with temperature has been neglected.

Semiconductor carrier engineering


- Silicon at room temperature
 - $n_i: \sim 10^{10} \text{cm}^{-3}$
 - add 10^{16}cm^{-3} ($\sim 1 \text{ppm}$) phosphorous donors: $n_c \sim N_d$
 - $n_c \sim 10^{16} \text{cm}^{-3}$, $p_v \sim 10^4$ (n_i^2/N_d)
 - conductivity is proportional to the # of carriers leading to 6 orders of magnitude change in conductivity!

Impurities at the ppm level drastically change the conductivity (6 orders of magnitude)

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

Basic electronics: the transistor

The first point contact transistor
William Shockley, John Bardeen, and Walter Brattain
Bell Laboratories, Murray Hill, New Jersey (1947)

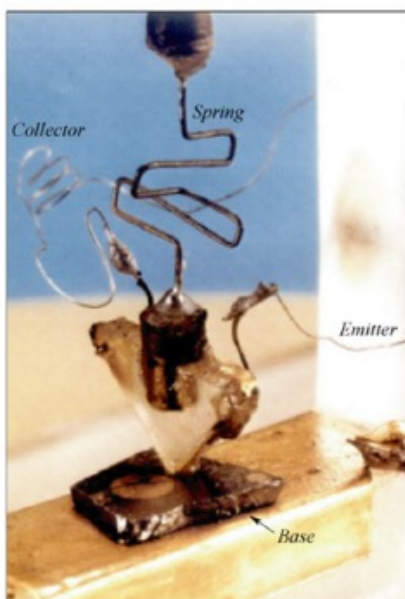

December 16, 1947 - Nobel Prize - 1956

Abrupt junction

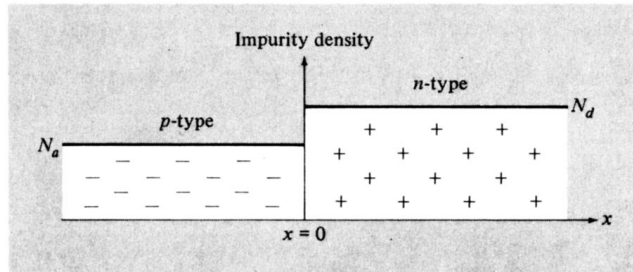


Figure 29.1

The impurity densities along a *p-n* junction in the case of an “abrupt junction,” for which donor impurities dominate at positive *x*, and acceptor impurities at negative *x*. The donors are represented by (+) to indicate their charge when ionized, and the acceptors by (-). For a junction to be abrupt, the region about $x = 0$ where the impurity concentrations change must be narrow compared with the “depletion layer” in which the carrier densities are nonuniform. (Typical plots of the carrier densities are superimposed on this figure in Figure 29.3.)

The p-n junction (diode)


p-type material at equilibrium n-type material at equilibrium

$$\begin{aligned} p_v &\sim N_A \\ n_c &\sim n_i^2 / N_A \end{aligned}$$

$$\begin{aligned} n_c &\sim N_D \\ p_v &\sim n_i^2 / N_D \end{aligned}$$


$$\mu_p = \mu_i - k_b T \ln \left(\frac{N_A}{n_i} \right)$$

$$\mu_n = \mu_i + k_b T \ln \left(\frac{N_D}{n_i} \right)$$


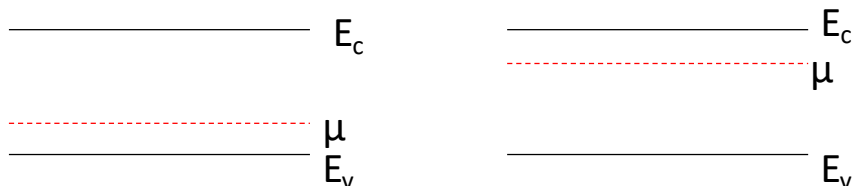


What happens when you join these together?

Joining p and n

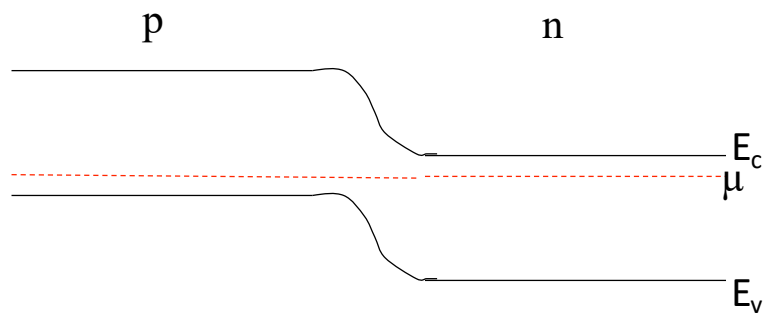

Carriers flow under driving force of diffusion until μ is horizontal

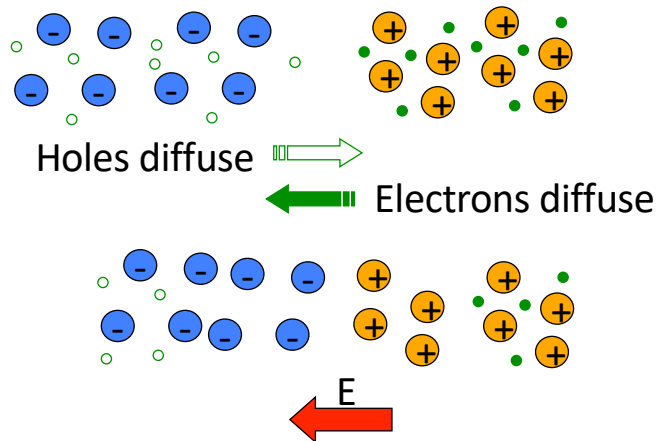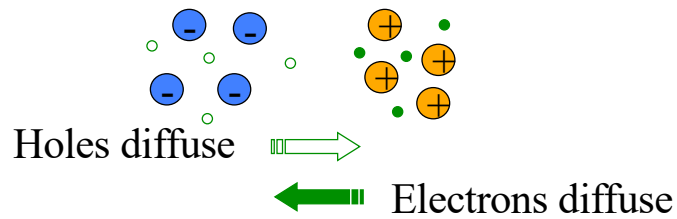

An electric field forms due to the deviation from charge neutrality

Therefore, a steady-state balance is achieved where diffusive flux of the carriers is balanced by the drift flux

Chemical potential

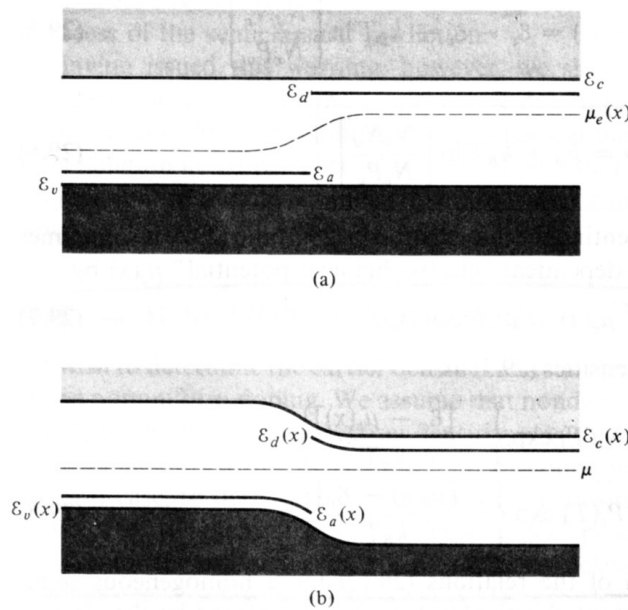


Figure 29.2


Two equivalent ways of representing the effect of the internal potential $\phi(x)$ on the electron and hole densities of a p - n junction. (a) The electrochemical potential $\mu_e(x) = \mu + e\phi(x)$ is plotted along the p - n junction. The carrier densities at any point x are those that would be found in a uniform semiconductor characterized by the fixed band and impurity energies ϵ_c , ϵ_v , ϵ_d , and ϵ_a , at a chemical potential equal to $\mu_e(x)$. (b) Here $\epsilon_c(x) = \epsilon_c - e\phi(x)$ is the energy of an electron wave packet localized about x formed from levels very near the conduction band minimum, and similarly for $\epsilon_v(x)$. The energies of the local impurity levels are $\epsilon_d(x) = \epsilon_d - e\phi(x)$ and $\epsilon_a(x) = \epsilon_a - e\phi(x)$. The (constant) chemical potential is also shown. The carrier densities at any point x are those that would be found in a uniform semiconductor characterized by band and impurity energies equal to $\epsilon_c(x)$, $\epsilon_d(x)$, $\epsilon_a(x)$, and $\epsilon_v(x)$ at the fixed chemical potential μ .

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

What is the built-in voltage V_{bi} ?


$$\mu_p = \mu_i - k_b T \ln\left(\frac{N_a}{n_i}\right) \quad \mu_n = \mu_i + k_b T \ln\left(\frac{N_D}{n_i}\right)$$

$$eV_{bi} = K_B T \ln\left(\frac{N_D N_A}{n_i^2}\right) = \mu_n - \mu_p$$

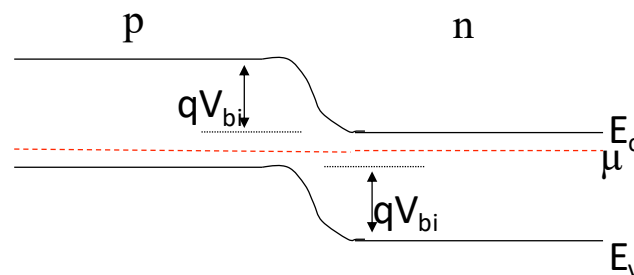


The built-in potential is also the one needed to align the Fermi levels!

Carrier concentration

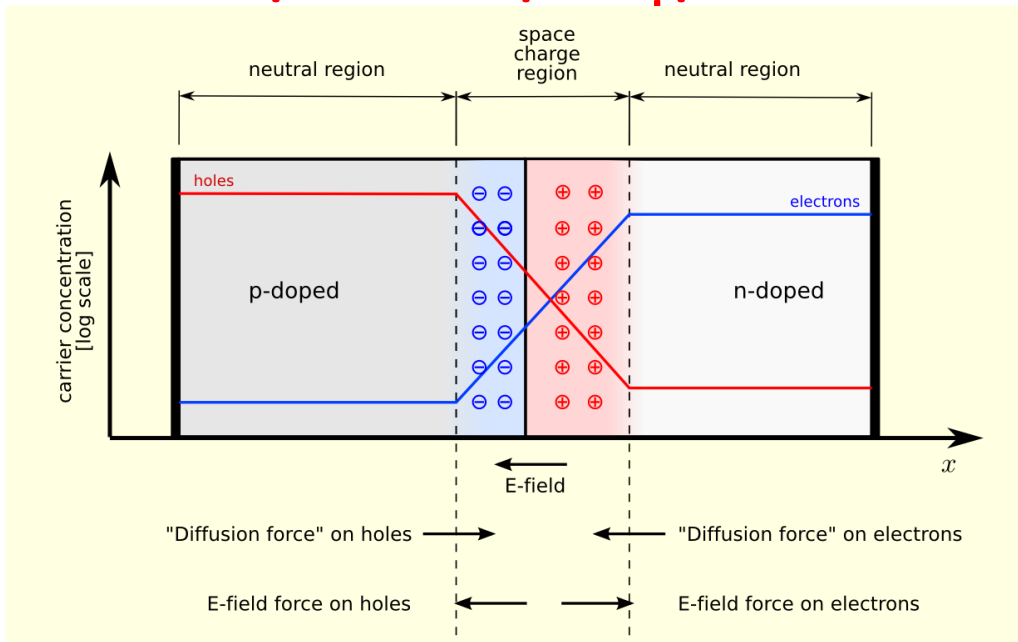

MSE 423 Fundamentals of Solid-state Materials - Nicola Marzari (EPFL, Fall 2025)

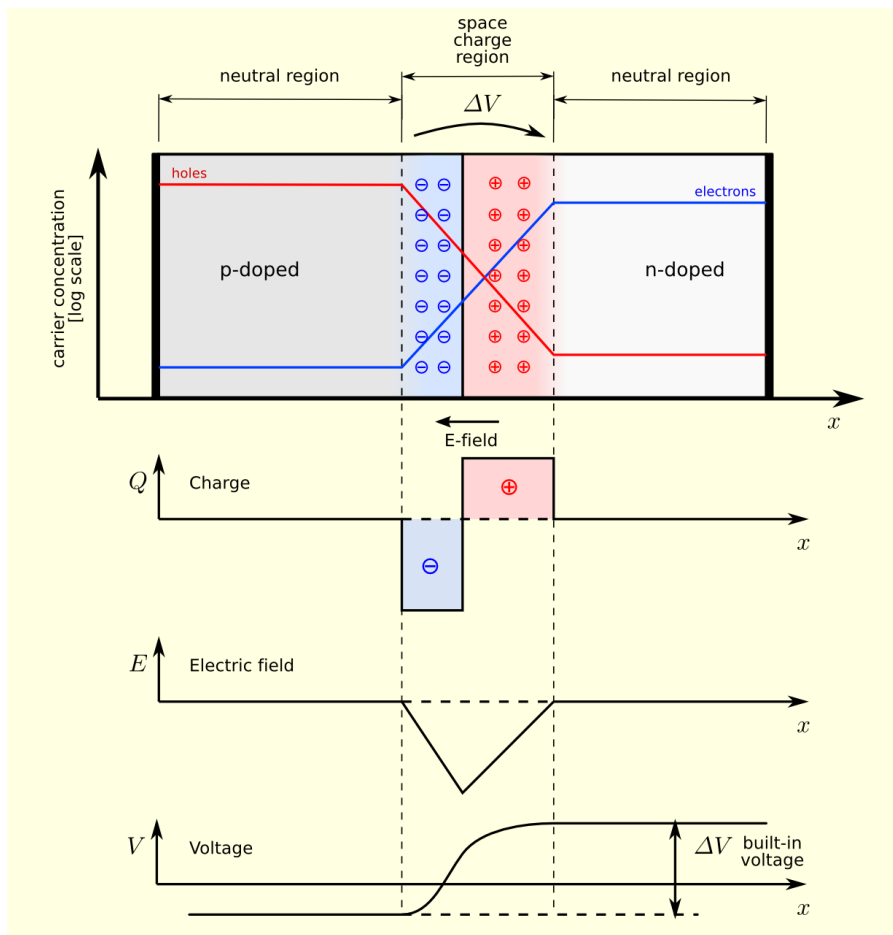

Operation under bias

Figure 29.4

The charge density ρ and potential ϕ in the depletion layer (a) for the unbiased junction, (b) for the junction with $V > 0$ (forward bias), and (c) for the junction with $V < 0$ (reverse bias). The positions $x = d_n$ and $x = -d_p$ that mark the boundaries of the depletion layer when $V = 0$ are given by the dashed lines. The depletion layer and change in ϕ are reduced by a forward bias and increased by a reverse bias.

