

A quantum engineer's guide to superconducting qubits

Cite as: Appl. Phys. Rev. **6**, 021318 (2019); <https://doi.org/10.1063/1.5089550>

Submitted: 20 January 2019 • Accepted: 03 May 2019 • Published Online: 17 June 2019

 P. Krantz,  M. Kjaergaard, F. Yan, et al.

COLLECTIONS

Paper published as part of the special topic on [Quantum Computing](#)

 This paper was selected as Featured



View Online



Export Citation



CrossMark

ARTICLES YOU MAY BE INTERESTED IN

[Improved superconducting qubit coherence using titanium nitride](#)

Applied Physics Letters **103**, 012602 (2013); <https://doi.org/10.1063/1.4813269>

[Characterization and reduction of microfabrication-induced decoherence in superconducting quantum circuits](#)

Applied Physics Letters **105**, 062601 (2014); <https://doi.org/10.1063/1.4893297>

[A method for building low loss multi-layer wiring for superconducting microwave devices](#)

Applied Physics Letters **112**, 063502 (2018); <https://doi.org/10.1063/1.5014033>



Applied Physics
Reviews

Read. Cite. Publish. Repeat.



A quantum engineer's guide to superconducting qubits

Cite as: Appl. Phys. Rev. **6**, 021318 (2019); doi: [10.1063/1.5089550](https://doi.org/10.1063/1.5089550)

Submitted: 20 January 2019 · Accepted: 3 May 2019 ·

Published Online: 17 June 2019



View Online



Export Citation



CrossMark

P. Krantz,^{1,2,a)}  M. Kjaergaard,¹  F. Yan,¹ T. P. Orlando,¹ S. Gustavsson,¹ and W. D. Oliver^{1,3,b)} 

AFFILIATIONS

¹Research Laboratory of Electronics, Massachusetts Institute of Technology, Cambridge, Massachusetts 02139, USA

²Wallenberg Centre for Quantum Technology (WACQT), Chalmers University of Technology, Gothenburg SE-41296, Sweden

³MIT Lincoln Laboratory, 244 Wood Street, Lexington, Massachusetts 02420, USA

Note: This paper is part of the Special Topic on Quantum Computing.

^{a)}Author to whom correspondence should be addressed: philipk@mit.edu

^{b)}william.oliver@mit.edu

ABSTRACT

The aim of this review is to provide quantum engineers with an introductory guide to the central concepts and challenges in the rapidly accelerating field of superconducting quantum circuits. Over the past twenty years, the field has matured from a predominantly basic research endeavor to a one that increasingly explores the engineering of larger-scale superconducting quantum systems. Here, we review several foundational elements—qubit design, noise properties, qubit control, and readout techniques—developed during this period, bridging fundamental concepts in circuit quantum electrodynamics and contemporary, state-of-the-art applications in gate-model quantum computation.

Published under license by AIP Publishing. <https://doi.org/10.1063/1.5089550>

TABLE OF CONTENTS

I. INTRODUCTION	2	4. Noise power spectral density (PSD)	14
A. Organization of this article	2	C. Common examples of noise	15
II. ENGINEERING QUANTUM CIRCUITS	3	1. Charge noise	15
A. From quantum harmonic oscillator to the		2. Magnetic flux noise	15
transmon qubit	3	3. Photon number fluctuations	15
B. Qubit Hamiltonian engineering	5	4. Quasiparticles	16
1. Tunable qubit: Split transmon	5	D. Operator form of qubit-environment interaction .	16
2. Toward larger anharmonicity: Flux qubit and		1. Connecting T_1 to $S(\omega)$	16
fluxonium.	7	2. Connecting T_ϕ to $S(\omega)$	16
C. Interaction Hamiltonian engineering.	8	3. Noise spectroscopy	17
1. Physical coupling: Capacitive and inductive ..	8	E. Engineering noise mitigation	18
2. Coupling axis: Transverse and longitudinal ...	9	1. Materials and fabrication improvements	18
III. NOISE, DECOHERENCE, AND ERROR		2. Design improvements	18
MITIGATION	10	3. Dynamical error suppression	18
A. Types of noise	10	4. Cryogenic engineering	18
1. Systematic noise	10	IV. QUBIT CONTROL	18
2. Stochastic noise	10	A. Boolean logic gates used in classical computers ..	19
3. Noise strength and qubit susceptibility	10	B. Quantum logic gates used in quantum computers	20
B. Modeling noise and decoherence	10	C. Comparing classical and quantum gates	20
1. Bloch sphere representation	10	1. Gate sets and gate synthesis	22
2. Bloch-Redfield model of decoherence	11	2. Addressing superconducting qubits	23
3. Modification due to $1/f$ -type noise	14	D. Single-qubit gates	23
		1. Capacitive coupling for X, Y control	23

2. Virtual Z gate	25
3. The DRAG scheme	25
E. The <i>i</i> SWAP two-qubit gate in tunable qubits. . .	26
1. Deriving the <i>i</i> SWAP unitary	26
2. Applications of the <i>i</i> SWAP gate	28
F. The CPHASE two-qubit gate in tunable qubits . .	28
1. Trajectory design for the CPHASE gate	29
2. The CPHASE gate for quantum error correction	30
3. Quantum simulation and algorithm demonstrations using CPHASE	30
G. Two-qubit gates using only microwaves	31
1. The operational principle of the CR gate . . .	31
2. Improvements to the CR gate and quantum error correction experiments using CR	32
3. Quantum simulation and algorithm demonstrations with the CR gate	32
4. Other microwave-only gates: bSWAP, MAP, and RIP	33
H. Gate implementations with tunable coupling . . .	34
V. QUBIT READOUT	34
A. Dispersive readout	35
B. Measuring the resonator amplitude and phase . . .	36
1. Representation of the readout signal	37
2. I-Q mixing	37
3. Homodyne demodulation	37
4. Heterodyne demodulation	38
C. Weak and strong qubit measurements: Impact of noise	39
D. “Purcell filters” for faster readout	40
E. Improve signal-to-noise ratio: Parametric amplification	42
1. Quantum-limited amplification processes . . .	42
2. Operation of Josephson parametric amplifiers	43
3. The traveling wave parametric amplifier	45
VI. SUMMARY AND OUTLOOK	46
A. Quantum annealing	46
B. Cavity based QIP	46
C. Cryogenics and software development	46
D. Quantum error correction	46
E. Quantum computational supremacy	47

I. INTRODUCTION

Quantum processors harness the intrinsic properties of quantum mechanical systems—such as quantum parallelism and quantum interference—to solve certain problems where classical computers fall short.^{1–6} Over the past two decades, rapid developments in the science and engineering of quantum systems have advanced the frontier in quantum computation, from the realm of scientific explorations on single isolated quantum systems toward the creation and manipulation of multiqubit processors.^{7,8} In particular, the requirements imposed by larger quantum processors have shifted the mindset within the community, from solely scientific discovery to the development of new, foundational engineering abstractions associated with the design, control, and readout of multiqubit quantum systems. The result is the emergence of a new discipline termed “quantum engineering,” which

serves to bridge basic sciences, mathematics, and computer science with fields generally associated with traditional engineering.

One prominent platform for constructing a multiqubit quantum processor involves superconducting qubits, in which information is stored in quantum degrees of freedom (DOFs) of nanofabricated, anharmonic oscillators (AHOs) constructed from superconducting circuit elements. In contrast to other platforms, e.g., electron spins in silicon^{9–14} and quantum dots,^{15–18} trapped ions,^{19–23} ultracold atoms,^{24–27} nitrogen-vacancies in diamonds,^{28,29} and polarized photons,^{30–33} where the quantum information is encoded in natural microscopic quantum systems, superconducting qubits are macroscopic in size and lithographically defined.

One remarkable feature of superconducting qubits is that their energy-level spectra are governed by circuit element parameters and thus are configurable; they can be designed to exhibit “atomlike” energy spectra with the desired properties. Therefore, superconducting qubits are also often referred to as “artificial atoms,” offering a rich parameter space of possible qubit properties and operation regimes, with predictable performance in terms of transition frequencies, anharmonicity, and complexity.

While there are many other excellent reviews on superconducting qubits, see, e.g., Refs. 34–43, this work specifically aims to introduce new quantum engineers (academic and industrial alike) to the terminology and state-of-the-art practices used in the rapidly accelerating field of superconducting quantum computing. The reader is assumed to be familiar with the basic concepts that span classical physics, quantum mechanics, and electrical engineering. In particular, readers will find it useful to have had previous exposure to classical mechanics, the Schrödinger equation, the Bloch sphere representation of qubit states, second quantization, basic concepts of superconductivity, electromagnetism, introductory circuit analysis, classical Boolean logic, linear dynamical systems, analog and digital signal processing, and familiarity with microwave components such as transmission lines and mixers. These topics will be introduced as they arise, but having basic prior knowledge will be helpful.

A. Organization of this article

This review is organized in the following four sections: first, in Sec. II, we explore the parameter space available when designing superconducting circuits. In particular, we look at the promising capacitively shunted planar qubit modalities and how these can be engineered with the desired properties, such as transition frequency, anharmonicity, and reduced susceptibility to various sources of noise. In this section, we also introduce several ways in which interactions between qubits can be engineered, in order to implement two-qubit entangling operations, needed for a universal gate set.

In Sec. III, we discuss systematic and stochastic noise, the concepts of noise strength and qubit noise susceptibility, and the common sources of noise which lead to decoherence in superconducting circuits. We introduce the Bloch-Redfield model of decoherence, characterized by longitudinal and transverse relaxation times T_1 and T_2 , and discuss the implications of $1/f$ noise. We then define the noise power spectral density (PSD), which is commonly used to characterize noise processes, and describe how it drives decoherence. Finally, we close the section with a review of coherent control methods used to mitigate certain types of coherence and reversible noise.

In Sec. IV, we provide a review of how single- and two-qubit operations are typically implemented in superconducting circuits, by using a combination of local magnetic flux control and microwave drives. In particular, we discuss the family of two-qubit gates arising from a capacitive coupling between qubits, and introduce several recent advances that have been demonstrated to achieve high-fidelity gates, as well as applications in quantum information processing that use these gates. The continued development of high-fidelity two-qubit gates in superconducting qubits is a highly active research area. For this reason, we include sufficient technical details that a reader may use this review as a starting point to critically assess the pros and cons of the various gates, as well as develop an appreciation for the types of gate-engineering already implemented in-state-of-the-art superconducting quantum processors.

Finally, in Sec. V, we discuss the physics and engineering associated with the dispersive readout technique, typically used to measure the individual qubit states in modern quantum processors. After a discussion of the theory behind dispersive coupling, we give an introduction to design of Purcell filters and the development of quantum-limited parametric amplifiers (PAs).

II. ENGINEERING QUANTUM CIRCUITS

In this section, we will demonstrate how quantum systems based on superconducting circuits can be engineered to achieve certain desired properties. Using the most common qubit modalities, we discuss how properties such as the qubit transition frequency, anharmonicity, and noise susceptibility can be tailored by the choice of circuit topology and element parameter values. We also discuss how to engineer the interactions between different quantum systems, in particular, the cases of qubit-qubit and qubit-resonator couplings.

A. From quantum harmonic oscillator to the transmon qubit

A quantum mechanical system is governed by the time-dependent Schrödinger equation

$$\hat{H}|\psi(t)\rangle = i\hbar \frac{\partial}{\partial t} |\psi(t)\rangle, \quad (1)$$

where $|\psi(t)\rangle$ is the state of the quantum system at time t , $\hbar$ is the reduced Planck's constant $h/2\pi$, and $\hat{H}$ is the “Hamiltonian” that describes the total energy of the system. The “hat” is used to indicate that $\hat{H}$ is a quantum operator. As the Schrödinger equation is a first-order linear differential equation, the temporal dynamics of the quantum system may be viewed as a straightforward example of a linear dynamical system with a formal solution

$$|\psi(t)\rangle = e^{-i\hat{H}t/\hbar} |\psi(0)\rangle. \quad (2)$$

The time-independent Hamiltonian $\hat{H}$ governs the time evolution of the system through the operator $e^{-i\hat{H}t/\hbar}$. Thus, just as with classical systems, determining the Hamiltonian of a system—whether the classical Hamiltonian H or its quantum counterpart $\hat{H}$ —is the first step to deriving its dynamical behavior. In Sec. IV, we consider the case when the Hamiltonian is time-dependent in the context of qubit control.

To understand the dynamics of a superconducting qubit circuit, it is natural to start with the classical description of a linear LC resonant circuit [Fig. 1(a)]. In this system, energy oscillates between

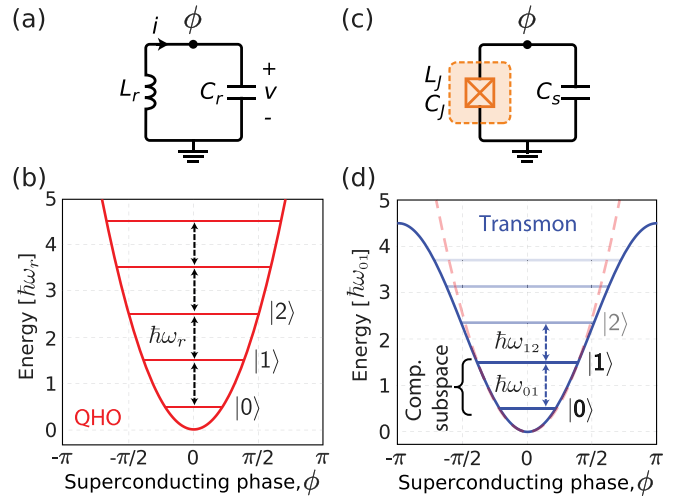


FIG. 1. (a) Circuit for a parallel LC-oscillator (quantum harmonic oscillator, QHO), with inductance L in parallel with capacitance, C . The superconducting phase on the island is denoted as ϕ , referencing the ground as zero. (b) Energy potential for the QHO, where energy levels are equidistantly spaced $\hbar\omega_r$ apart. (c) Josephson qubit circuit, where the nonlinear inductance L_J (represented by the Josephson-subcircuit in the dashed orange box) is shunted by a capacitance, C_s . (d) The Josephson inductance reshapes the quadratic energy potential (dashed red) into sinusoidal (solid blue), which yields nonequidistant energy levels. This allows us to isolate the two lowest energy levels $|0\rangle$ and $|1\rangle$, forming a computational subspace with an energy separation $\hbar\omega_{01}$, which is different than $\hbar\omega_{12}$.

electrical energy in the capacitor C and magnetic energy in the inductor L . In the following, we will arbitrarily associate the electrical energy with the “kinetic energy” and the magnetic energy with the “potential energy” of the oscillator. The instantaneous, time-dependent energy in each element is derived from its current and voltage

$$E(t) = \int_{-\infty}^t V(t')I(t')dt', \quad (3)$$

where $V(t')$ and $I(t')$ denote the voltage and current of the capacitor or inductor.

To derive the classical Hamiltonian, we follow the standard approach used in classical mechanics: the Lagrange-Hamilton formulation. Here, we represent the circuit elements in terms of one of its generalized circuit coordinates, charge or flux. In the following, we pick flux, defined as the time integral of the voltage

$$\Phi(t) = \int_{-\infty}^t V(t')dt'. \quad (4)$$

In this example, the voltage at the node is also the branch voltage across the element. In this section, we will simply refer to these as node voltages and fluxes for convenience. For a more detailed discussion of nodes and branches in this context, we refer the reader to Ref. 44.

Note that in the following, we could have exchanged our associations with kinetic energy (momentum coordinate) and potential energy (position coordinate), and instead start with the charge variable $Q(t)$, which is the time integral of the current $I(t)$.

By combining Eqs. (3) and (4), using the relations $V = L dI/dt$ and $I = C dV/dt$, and applying the integration by parts formula, we

can write down energy terms for the capacitor and inductor in terms of the node flux

$$\mathcal{T}_C = \frac{1}{2} C \dot{\Phi}^2, \quad (5)$$

$$\mathcal{U}_L = \frac{1}{2L} \Phi^2. \quad (6)$$

The Lagrangian is defined as the difference between the kinetic and potential energy terms and can thus be expressed in terms of Eqs. (5) and (6)

$$\mathcal{L} = \mathcal{T}_C - \mathcal{U}_L = \frac{1}{2} C \dot{\Phi}^2 - \frac{1}{2L} \Phi^2. \quad (7)$$

From the Lagrangian in Eq. (7), we can further derive the Hamiltonian using the Legendre transformation, for which we need to calculate the momentum conjugate to the flux, which in this case, is the charge on the capacitor

$$Q = \frac{\partial \mathcal{L}}{\partial \dot{\Phi}} = C \dot{\Phi}. \quad (8)$$

The Hamiltonian of the system is now defined as

$$H = Q\dot{\Phi} - \mathcal{L} = \frac{Q^2}{2C} + \frac{\Phi^2}{2L} \equiv \frac{1}{2} CV^2 + \frac{1}{2} LI^2, \quad (9)$$

as one would expect for an electrical LC circuit. Note that this Hamiltonian is analogous to that of a mechanical harmonic oscillator, with mass $m = C$ and resonant frequency $\omega = 1/\sqrt{LC}$, which expressed in position, x , and momentum, p , coordinates takes the form $H = p^2/2m + m\omega^2 x^2/2$.

The Hamiltonian described above is classical. In order to proceed to a quantum-mechanical description of the system, we need to promote the charge and flux coordinates to quantum operators, whereas the classical coordinates satisfy the Poisson bracket

$$\{f, g\} = \frac{\delta f}{\delta \Phi} \frac{\delta g}{\delta Q} - \frac{\delta g}{\delta \Phi} \frac{\delta f}{\delta Q} \quad (10)$$

$$\rightarrow \{\Phi, Q\} = \frac{\delta \Phi}{\delta \Phi} \frac{\delta Q}{\delta Q} - \frac{\delta Q}{\delta \Phi} \frac{\delta \Phi}{\delta Q} = 1 - 0 = 1, \quad (11)$$

the quantum operators similarly satisfy a “commutation relation”

$$[\hat{\Phi}, \hat{Q}] = \hat{\Phi} \hat{Q} - \hat{Q} \hat{\Phi} = i\hbar, \quad (12)$$

where the operators are indicated by hats. From this point forward, however, the hats on operators will be omitted for simplicity.

In a simple LC resonant circuit [Fig. 1(a)], both the inductor L and the capacitor C are linear circuit elements. Defining the reduced flux $\phi \equiv 2\pi\Phi/\Phi_0$ and the reduced charge $n = Q/2e$, we can write down the following quantum-mechanical Hamiltonian for the circuit

$$H = 4E_C n^2 + \frac{1}{2} E_L \phi^2, \quad (13)$$

where $E_C = e^2/(2C)$ is the charging energy required to add “each” electron of the Cooper-pair to the island and $E_L = (\Phi_0/2\pi)^2/L$ is the inductive energy, where $\Phi_0 = h/(2e)$ is the superconducting magnetic flux quantum. Moreover, the quantum operator n is the excess number of Cooper-pairs on the island, and ϕ —the reduced flux—is denoted the “gauge-invariant phase” across the inductor. These two

operators form a canonical conjugate pair, obeying the commutation relation $[\phi, n] = i$. We note that the factor 4 in front of the charging energy E_C is solely a historical artifact, namely, that this energy scale was first defined for single-electron systems and then adopted to two-electron Cooper-pair systems.

The Hamiltonian in Eq. (13) is identical to the one describing a particle in a one-dimensional quadratic potential, a quantum harmonic oscillator (QHO). We can treat ϕ as the generalized position coordinate, so that the first term is the kinetic energy and the second term is the potential energy. We emphasize that the functional form of the potential energy influences the eigensolutions. For example, the fact that this term is quadratic ($U_L \propto \phi^2$) in Eq. (13) gives rise to the shape of the potential in Fig. 1(b). The solution to this eigenvalue problem gives an infinite series of eigenstates $|k\rangle$, ($k = 0, 1, 2, \dots$), whose corresponding eigenenergies E_k are all equidistantly spaced, i.e., $E_{k+1} - E_k = \hbar\omega_r$, where $\omega_r = \sqrt{8E_L E_C}/\hbar = 1/\sqrt{LC}$ denotes the resonant frequency of the system, see Fig. 1(b). We may represent these results in a more compact form (second quantization) for the quantum harmonic oscillator (QHO) Hamiltonian

$$H = \hbar\omega_r \left(a^\dagger a + \frac{1}{2} \right), \quad (14)$$

where $a^\dagger$ (a) is the creation (annihilation) operator of a single excitation of the resonator. The Hamiltonian in Eq. (14) is written as energy. It is, however, often preferred to divide by $\hbar$ so that the expression has units of radian frequency, since we will later resonantly drive transitions at a particular frequency or reference the rate at which two systems interact with one another. Therefore, from here on, $\hbar$ will be omitted.

The original charge number and phase operators can be expressed as $n = n_{\text{zpf}} \times i(a - a^\dagger)$ and $\phi = \phi_{\text{zpf}} \times (a + a^\dagger)$, where $n_{\text{zpf}} = [E_L/(32E_C)]^{1/4}$ and $\phi_{\text{zpf}} = (2E_C/E_L)^{1/4}$ are the “zero-point fluctuations” of the charge and phase variables, respectively. Quantum mechanically, the quantum states are represented as wavefunctions that are generally distributed over a range of values of n and ϕ and, consequently, the wavefunctions have nonzero standard deviations. Such wavefunction distributions are referred to as “quantum fluctuations,” and they exist, even in the ground state, where they are called zero-point fluctuations.

The linear characteristics of the QHO have a natural limitation in its applications for processing quantum information. Before the system can be used as a qubit, we need to be able to define a computational subspace consisting of only two energy states (usually the two-lowest energy eigenstates) in between which transitions can be driven without also exciting other levels in the system. Since many gate operations, such as single-qubit gates (Sec. IV), depend on frequency selectivity, the equidistant level-spacing of the QHO, illustrated in Fig. 1(b), poses a practical limitation.⁴²⁷

To mitigate the problem of unwanted dynamics involving non-computational states, we need to add anharmonicity (or nonlinearity) into our system. In short, we require the transition frequencies $\omega_q^{0 \rightarrow 1}$ and $\omega_q^{1 \rightarrow 2}$ be sufficiently different to be individually addressable. In general, the larger the anharmonicity the better it is. In practice, the amount of anharmonicity sets a limit on how short the pulses used to drive the qubit can be. This is discussed in detail in Sec. IV D 3.

To introduce the nonlinearity required to modify the harmonic potential, we use the Josephson junction—a nonlinear, dissipationless

circuit element that forms the backbone in superconducting circuits.^{46,47} By replacing the linear inductor of the QHO with a Josephson junction, playing the role of a nonlinear inductor, we can modify the functional form of the potential energy. The potential energy of the Josephson junction can be derived from Eq. (3) and the two Josephson relations

$$I = I_c \sin(\phi), \quad V = \frac{\hbar}{2e} \frac{d\phi}{dt}, \quad (15)$$

resulting in a modified Hamiltonian

$$H = 4E_C n^2 - E_J \cos(\phi), \quad (16)$$

where $E_C = e^2/(2C_\Sigma)$, $C_\Sigma = C_s + C_J$ is the total capacitance, including both shunt capacitance C_s and the self-capacitance of the junction C_J , and $E_J = I_c \Phi_0/2\pi$ is the Josephson energy, with I_c being the critical current of the junction.⁴²⁸ After introducing the Josephson junction in the circuit, the potential energy no longer takes a manifestly parabolic form (from which the harmonic spectrum originates), but rather features a cosinusoidal form, see the second term in Eq. (16), which makes the energy spectrum nondegenerate. Therefore, the Josephson junction is the key ingredient that makes the oscillator anharmonic and thus allows us to identify a uniquely addressable quantum two-level system, see Fig. 1(d).

Once the nonlinearity has been added, the system dynamics is governed by the dominant energy in Eq. (16), reflected in the E_J/E_C ratio. Over time, the superconducting qubit community has converged toward circuit designs with $E_J \gg E_C$. In the opposite case when $E_J \leq E_C$, the qubit becomes highly sensitive to charge noise, which has proven more challenging to mitigate than flux noise, making it very hard to achieve high coherence. Another motivation is that current technologies allow for more flexibility in engineering the inductive (or potential) part of the Hamiltonian. Therefore, working in the $E_J \leq E_C$ limit, makes the system more sensitive to the change in the potential Hamiltonian. Therefore, we will focus here on the state-of-the-art qubit modalities that fall in the regime $E_J \gg E_C$. For readers who are interested in the physics in the $E_J \leq E_C$ regime, such as the earlier Cooper-pair box charge qubit, we refer to Refs. 48–51.

To access the $E_J \gg E_C$ regime, one preferred approach is to make the charging E_C small by shunting the junction with a large capacitor, $C_s \gg C_J$, effectively making the qubit less sensitive to charge noise—a circuit commonly known as the transmon qubit.⁵² In this limit, the superconducting phase ϕ is a good quantum number, i.e., the spread (or quantum fluctuation) of ϕ values represented by the quantum wavefunction is small. The low-energy eigenstates are therefore, to a good approximation, localized states in the potential well, see Fig. 1(d). We may gain more insight by expanding the potential term of Eq. (16) into a power series (since ϕ is small), that is

$$E_J \cos(\phi) = \frac{1}{2} E_J \phi^2 - \frac{1}{24} E_J \phi^4 + \mathcal{O}(\phi^6). \quad (17)$$

The leading quadratic term in Eq. (17) alone will result in a QHO, recall Eq. (13). The second term, however, is quartic which modifies the eigensolution and disrupts the otherwise harmonic energy structure. Note that, the negative coefficient of the quartic term indicates that the anharmonicity $\alpha = \omega_q^{1-2} - \omega_q^{0-1}$ is negative and its limit in magnitude thus cannot be made arbitrarily large. For the case of the transmon, $\alpha = -E_C$ is usually designed to be 100–300 MHz, as

required to maintain a desirable qubit frequency $\omega_q = (\sqrt{8E_J E_C} - E_C)/\hbar = 3\text{--}6$ GHz, while keeping an energy ratio sufficiently large ($E_J/E_C \geq 50$) to suppress charge sensitivity.⁵² Fortunately, the charge sensitivity is exponentially suppressed for an increased E_J/E_C , while the reduction in anharmonicity only scales as a weak power law, leading to a workable device.

Including terms up to fourth order and using the QHO eigenbases, the system Hamiltonian resembles that of a Duffing oscillator

$$H = \omega_q a^\dagger a + \frac{\alpha}{2} a^\dagger a^\dagger a a. \quad (18)$$

Since $|\alpha| \ll \omega_q$, we can see that the transmon qubit is basically a weakly anharmonic oscillator (AHO). If excitation to higher noncomputational states is suppressed over any gate operations, either due to a large enough $|\alpha|$ or due to robust control techniques such as the derivative reduction by adiabatic gate (DRAG) pulse, see Sec. IV D 3, we may effectively treat the AHO as a quantum two-level system, simplifying the Hamiltonian to

$$H = \omega_q \frac{\sigma_z}{2}, \quad (19)$$

where σ_z is the Pauli-z operator. However, one should always keep in mind that higher levels physically exist.⁵³ Their influence on the system dynamics should be taken into account when designing the system and its control processes. In fact, there are many cases where the higher levels have proven useful to implement more efficient gate operations.⁵⁴

In addition to reducing the charge dispersion, the use of a large shunt capacitor also enables us to engineer the electric field distribution of the quantum system, and thus the participation of surface loss mechanisms. In the development of the 3D transmon,⁵⁵ e.g., a 2D transmon coupled to a 3D cavity, it was demonstrated that by making the gap between the two lateral capacitor plates large (compared to the film thickness) the coherence time increases since a smaller portion of the electric field interacts with the lossy interfaces, e.g., metal-substrate and substrate-vacuum interfaces, which has been studied extensively.^{56–61}

B. Qubit Hamiltonian engineering

1. Tunable qubit: Split transmon

To implement fast gate operations with high-fidelity, as needed to implement quantum logic, many (though not all⁶³) of the quantum processor architectures implemented today feature tunable qubit frequencies.^{64–67} For instance, in some cases, we need to bring two qubits into resonance to exchange (swap) energy, while we also need the capability of separating them during idling periods to minimize their interactions. To do this, we need an external parameter which allows us to access one of the degrees of freedom of the system in a controllable fashion.

One widely used technique is to replace the single Josephson junction with a loop interrupted by two identical junctions—forming a DC superconducting quantum interference device (DC-SQUID).⁶⁸ Due to the interference between the two arms of the SQUID, the effective critical current of the two parallel junctions can be decreased by applying a magnetic flux threading the loop, see Fig. 2(a). Due to the fluxoid quantization condition, the algebraic sum of branch flux of all

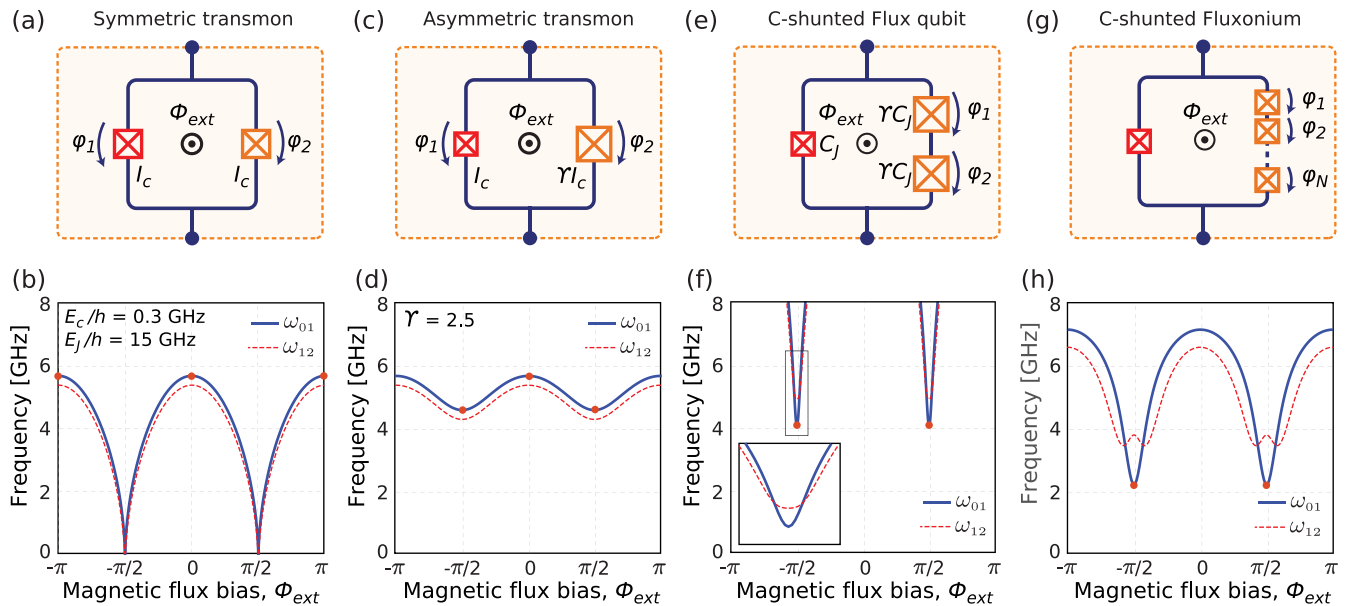


FIG. 2. Modular qubit circuit representations for capacitively shunted qubit modalities [orange box Fig. 1(c)] and the corresponding qubit transition frequencies for the two lowest energy states as a function of the applied magnetic flux in units of Φ_0 . (a) and (b) Symmetric transmon qubit, with Josephson energy E_J is shunted with a capacitor yielding a charging energy E_C . (c) and (d) Asymmetric transmon qubit, with junction asymmetry $\gamma = E_{J2}/E_{J1} = 2.5$. (e) and (f) Capacitively shunted flux qubit, where a small principle junction (red) is shunted with two larger junctions (orange). Parameters are the same as Yan *et al.*⁵² (g) and (h) C-shunted fluxonium qubit, where the small junction is inductively shunted with a large array of N junctions.

of the inductive elements along the loop plus the externally applied flux equal an integer number of superconducting flux quanta, that is

$$\varphi_1 - \varphi_2 + 2\varphi_e = 2\pi k, \quad (20)$$

where $\varphi_e = \pi\Phi_{\text{ext}}/\Phi_0$. Using this condition, we can eliminate one degree of freedom and treat the SQUID-loop as a single junction, but with the important modification that E_J is tunable (via the SQUID critical current) by means of the external flux Φ_{ext} . The effective Hamiltonian of the so-called split transmon (ignoring the constant) is

$$H = 4E_C n^2 - \underbrace{2E_J |\cos(\varphi_e)|}_{E'_J(\varphi_e)} \cos(\phi). \quad (21)$$

We can see that Eq. (21) is analogous to Eq. (16), with E_J replaced by $E'_J(\varphi_e) = 2E_J |\cos(\varphi_e)|$. The magnitude of the net, effective Josephson energy E'_J has a period of Φ_0 in applied flux and spans from 0 to its maximum value $2E_J$. Therefore, the qubit frequency can be tuned periodically with Φ_{ext} , see Fig. 2(b).

While the split transmon enables frequency tunability by the externally applied magnetic field, it also introduces sensitivity to random flux fluctuations, known as flux noise. At any working point, the slope of the qubit spectrum, $\partial\omega_q/\partial\Phi_{\text{ext}}$, indicates to first order how strongly this flux noise affects the qubit frequency. The sensitivity is generally nonzero, except at multiples of the flux quantum, $\Phi_{\text{ext}} = k\Phi_0$, where k is an integer, where $\partial\omega_q/\partial\Phi_{\text{ext}} = 0$.

One recent development has focused on reducing the qubit sensitivity to flux noise, while maintaining sufficient tunability to operate our quantum gates. The idea is to make the two junctions in the split transmon asymmetric,⁶⁹ see Fig. 2(c). This yields the following Hamiltonian

$$H = 4E_C n^2 - \underbrace{E_{J\Sigma} \sqrt{\cos^2(\varphi_e) + d^2 \sin^2(\varphi_e)}}_{E'_J(\varphi_e)} \cos(\phi), \quad (22)$$

where $E_{J\Sigma} = E_{J1} + E_{J2}$ and $d = (\gamma - 1)/(\gamma + 1)$ is the junction asymmetry parameter, with $\gamma = E_{J2}/E_{J1}$. Again, we can treat the two junctions as a single-junction transmon, with an effective Josephson energy $E'_J(\varphi_e)$. In particular, we can recognize the two special cases; for $d = 0$, the Hamiltonian in Eq. (22) reduces to the symmetric case with $E'_J(\varphi_e) = E_{J\Sigma} |\cos(\varphi_e)|$, as in Eq. (21) with $E_{J\Sigma} = 2E_J$. In the other limit, when $|d| \rightarrow 1$, $E'_J(\varphi_e) \rightarrow E_{J\Sigma}$ and the flux-tunability of the Josephson energy vanishes, which is equivalent to the single junction case, recall Eq. (16).

From the discussion above we see that going from symmetric to asymmetric transmons does not change the circuit topology. This seemingly trivial modification, however, has a profound impact for practical applications. As we can see from the qubit spectra, Fig. 2(d), the flux sensitivity is suppressed across the entire tunable frequency range. For example, the performance of the cross-resonance gate is optimized with a certain frequency detuning between two qubits.⁷⁰ Therefore, by using an asymmetric transmon, a small frequency-tuning range is introduced that is sufficient to compensate for fabrication variations, without introducing unnecessary large susceptibility to flux noise and thus maintaining high coherence. For another example, a surface code scheme based on the adiabatic controlled phase (CPHASE)-gate requires specific frequency configuration among qubits in order to avoid frequency crowding issues, and asymmetric transmons fit well with its well-defined frequency range.⁷¹ In general, as the quantum processors scale up and fabrication improves, asymmetric transmons are likely to be found in wider applications in the future.

2. Toward larger anharmonicity: Flux qubit and fluxonium

We see that split transmon qubits, be it symmetric or not, still share the same topology as the single junction version, yielding a sinusoidal potential. Therefore, the degree to which the properties of these qubits can be engineered has not fundamentally changed. In particular, the limited anharmonicity in transmon-type qubits intrinsically causes significant residual excitation to higher-energy states, undermining the performance of gate operations. To go beyond this, it is necessary to introduce additional complexity into the circuit.

One outstanding development in this regard is the invention of the flux qubit,^{72,73} where the qubit loop is interrupted by three (or four) junctions, see Fig. 2(e). On one branch is one smaller junction; on the other branch are two identical junctions, both a factor γ larger in size compared to the small junction. The addition of one more junction as compared to the split transmon is nontrivial, as it changes the circuit topology and reshapes the potential energy profile.

Each junction is associated with a phase variable, and the fluxoid quantization condition again allows us to eliminate one degree of freedom. Consequently, we have a two-dimensional potential landscape, which in comparison to the simpler topology of the transmon, complicates the problem both conceptually and computationally. Fortunately, under the assumed setting that the array junctions are larger in size ($\gamma > 1$), it is usually a good approximation to treat the problem as a particle moving in a quasi-1D potential, which also helps us gain more insight and intuition about the system and draw qualitative conclusions. The Hamiltonian under this “quasi-1D approximation” reads

$$H \approx 4E_C n^2 - E_J \cos(2\phi + \varphi_e) - 2\gamma E_J \cos(\phi). \quad (23)$$

Note that the phase variable in Eq. (23) is the sum of the branch phases across the two array junctions, $\phi = (\varphi_1 + \varphi_2)/2$, assuming the same current direction across φ_1 and φ_2 . The external magnetic flux is denoted $\varphi_e = 2\pi\Phi_{\text{ext}}/\Phi_0$. The second term in Eq. (23) is contributed by the small junction with Josephson energy E_J , whereas the third term takes into account the two array junctions, together with Josephson energy $2\gamma E_J$. Clearly, the sum of these two terms no longer has the characteristics of a simple sinusoid, and the final potential profile as well as the corresponding eigenstates depend on both the external flux φ_e and the junction area ratio γ .

The most common working point for this system is when $\varphi_e = \pi + 2\pi k$, where k is an integer—that is when half a superconducting flux quantum threads the qubit loop. At this flux bias point, the qubit spectrum reaches its minimum, and the qubit frequency is first-order insensitive to flux noise, see Fig. 2(f). This point is often referred to as “the flux degeneracy point,” where flux qubits tend to have the optimal coherence time.

At this operation point, the potential energy may assume a single-well ($\gamma \geq 2$) or a double-well ($\gamma < 2$) profile. The single-well case shares some similarities with the transmon qubit, where the quadratic and quartic terms of the Hamiltonian determines the harmonic and anharmonicity, respectively. The capacitively shunted flux qubit (CSFQ)^{62,74} was explored in this regime, demonstrating long coherence and decently high anharmonicity. Note that as opposed to the transmon qubit, the anharmonicity of the CSFQ is “positive” ($\alpha > 0$). While the improvement in anharmonicity can be associated

with reshaping the energy potential, the improved coherence over the first flux qubits can be attributed to the introduction of the capacitive shunt, similar to the modified Cooper-pair box leading to the transmon qubit.

The double-well case obtained for $\gamma < 2$ was demonstrated and investigated much earlier.^{72,73} The intuitive picture based on circulating current states—so it gets the name persisting-current flux qubit (PCFQ)—gives a satisfying physical description of the qubit degrees of freedom. However, from the perspective of a quantum engineer, the qubit properties are of more interest, even if sometimes we may lose physical intuition about the system in certain regimes; such as when $\gamma \approx 2$ and there are no clear circulating current states. The most important feature of the PCFQ is that its anharmonicity can be much greater than the transmon and CSFQ and the transition matrix elements $|\langle 1|\hat{n}|0\rangle|$, $|\langle 1|\hat{\phi}|0\rangle|$ become considerably smaller given equivalent E_J/E_C . Therefore, a longer relaxation time can be expected. These features have been demonstrated even more prominently in its close relative, the fluxonium qubit.⁷⁵

The flux qubit is a striking example that illustrates how one dramatically can engineer the qubit properties through the choice of various circuit parameters. The introduction of array junctions and consequent biharmonic profile generates rich dynamics as well as broad applications. An extension of this idea is the fluxonium qubit, which generated substantial interest recently, due partly to its capability of engineering the transition matrix elements to achieve millisecond T_1 time, and due partly to the invention of novel gate schemes applicable to such well-protected qubits.^{76,77}

Compared to flux qubits, which usually contain two or three array junctions,⁷⁸ the number of array junctions in the fluxonium qubit is dramatically increased,^{75,79} in some cases, to the order of 100, see Fig. 2(g). Following the same quasi-1D approximation as for the flux qubit, the last term in Eq. (23) becomes $-N\gamma E_J \cos(\phi/N)$, where N denotes the number of array junctions. For large N , the argument in the cosine term ϕ/N becomes sufficiently small that a second order expansion is a good approximation. This results in the fluxonium Hamiltonian

$$H \approx 4E_C n^2 - E_J \cos(\phi + \varphi_e) + \frac{1}{2} E_L \phi^2, \quad (24)$$

where $E_L = (\gamma/N)E_J$ is the inductive energy of the effective inductance contributed by the junction array—often known as superinductance due to its large value.^{79–81} Therefore, we can treat the potential energy as a quadratic term modulated by a sinusoidal term, similar to that of an rf-SQUID type flux qubit.⁸² However, the kinetic inductance of the Josephson junction array is in general much larger than the geometric inductance of the wire in an rf-SQUID.

Depending on the relative magnitude of E_J and E_L , the fluxonium system could involve plasmon states (in the same well) and fluxon states (in different wells). There are a variety of schemes to utilize them for quantum information processing. Generally, the spectrum of the transition between the lowest energy states is similar to that of the flux qubit, see Fig. 2(h). Both long coherence and high anharmonicity can be expected at the flux sweet spot.

Lastly, we want to point out a further extension—the $0-\pi$ qubit—which has even stronger topological protection from noise.^{83,84} However, the strongly suppressed sensitivity to external fluctuations also makes it hard to manipulate.

C. Interaction Hamiltonian engineering

To generate entanglement between individual quantum systems—it is necessary to engineer an interaction Hamiltonian that connects degrees of freedom in those individual systems. In this section, we discuss the physical coupling mechanism and its representation in the qubit eigenbasis. The use of coupling to form 2-qubit gates is discussed in Sec. IV.

1. Physical coupling: Capacitive and inductive

The Hamiltonian of two coupled systems takes a generic form

$$H = H_1 + H_2 + H_{\text{int}}, \quad (25)$$

where H_1 and H_2 denote the Hamiltonians of the individual quantum systems, which could be any combination of the qubit circuits mentioned in Secs. II A and II B. The last term, H_{int} , is the interaction Hamiltonian, which couples the variables of both systems. In superconducting circuits, the physical form of the coupling energy is either an electric or magnetic field (or a combination thereof).

To achieve capacitive coupling, a capacitor is placed between the voltage nodes of the two participating circuits, yielding an interaction Hamiltonian H_{int} of the form

$$H_{\text{int}} = C_g V_1 V_2, \quad (26)$$

where C_g is the coupling capacitance and $V_1(V_2)$ is the voltage operator of the corresponding voltage node being connected. Figure 3(a) illustrates a realistic example of a direct capacitive coupling between the top nodes of two transmon qubits. Circuit quantization in the limit of $C_g \ll C_1, C_2$ yields

$$H = \sum_{i=1,2} [4E_{C,i} n_i^2 - E_{J,i} \cos(\phi_i)] + 4e^2 \frac{C_g}{C_1 C_2} n_1 n_2, \quad (27)$$

where the expressions in brackets are the two Hamiltonians of the individual qubits, [see Eq. (16)], and we take $V_i = (2e/C_i)n_i$ in Eq. (26). From Eq. (27), we see that the coupling energy depends on the coupling capacitance as well as the matrix elements of the voltage operators. The dependencies are bilinear in the perturbative limit ($C_g \ll C_1, C_2$).

To implement the coupling capacitance, one only need bring the edges of the capacitor pads into close proximity, as has been demonstrated in-state-of-the-art planar designs.⁸⁵ The coupling capacitance is determined by the planar capacitor geometry as well as the surrounding environment, such as the dielectric constant of the substrate and the ground plane proximity.


In the case of inductive coupling, a mutual inductance shared by two loops is the coupling mechanism, yielding an interaction Hamiltonian of the form

$$H_{\text{int}} = M_{12} I_1 I_2, \quad (28)$$


where M_{12} denotes the mutual inductance and $I_1(I_2)$ is the current-operator of the loop current. A typical example is two closely positioned (rf-SQUID type) flux qubits, as illustrated in Fig. 3(c). The system Hamiltonian can be expressed as

$$H = \sum_{i=1,2} \left[4E_{C,i} n_i^2 + \frac{1}{2} E_{L,i} \phi_i^2 - E_{J,i} \cos(\phi_i) \right] + M_{12} I_{c1} \sin(\phi_1) I_{c2} \sin(\phi_2), \quad (29)$$


(a) Direct capacitive coupling

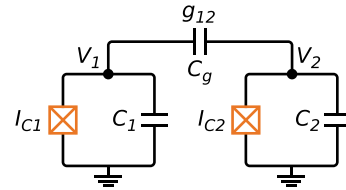

(b) Capacitive coupling via coupler

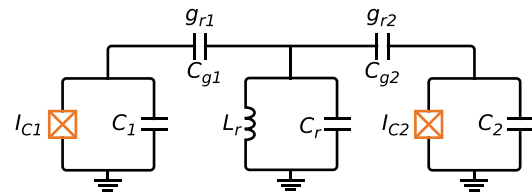

(c) Direct inductive coupling

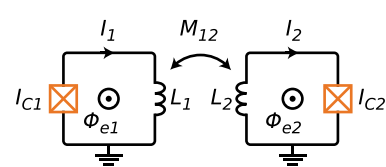

(d) Inductive coupling via coupler

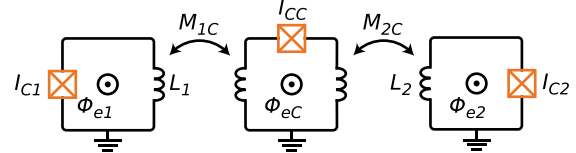


FIG. 3. Schematic of capacitive and inductive coupling schemes between two superconducting qubits, labeled 1 and 2. (a) Direct capacitive coupling, where the voltage nodes of two qubits V_1 and V_2 are connected by a capacitance C_g . (b) Capacitive coupling via a coupler in the form of a linear resonator. (c) Direct inductive coupling, where the two qubits are coupled via mutual inductance, M_{12} . (d) Inductive coupling via mutual inductances M_{1c} and M_{2c} to a frequency-tunable coupler.

where the individual qubit Hamiltonians are identical to that of the fluxonium in Eq. (24), and the current operators, $I_i = I_{ci} \sin(\phi_i)$ with $i \in 1, 2$, is the familiar DC-Josephson relation for each junction, see Eq. (15). In this case, the strength of the inductive coupling energy depends on the mutual inductance as well as the matrix element of the current operators.

To realize a mutual inductance, two looped circuits are brought into close proximity to one another, or, to make them stronger, overlapping with each other,⁸⁶ and even may share the same wire or Josephson junction inductor.^{87–90} In the case of a Josephson junction, and for certain metals, the inductance is dominated by “kinetic inductance” contributions, rather than solely geometric inductance.^{91,92} Kinetic inductance arises from the mechanical, inertial mass of the charge carriers, but is only practically witnessed in very high-conductance materials like superconductors. A primary feature of kinetic inductance is that its values can vastly exceed those of conventional geometric inductances, which are generally limited by electromagnetic considerations.⁷⁹

2. Coupling axis: Transverse and longitudinal

Regardless of its physical realization, the effect of a coupling on system dynamics is determined by its form as represented in the eigenbasis of the individual systems. That is, how H_{int} appears in the representation spanned by the eigenbasis of $H_1 \otimes H_2$.

Let us start with the previous example of two capacitively coupled transmon qubits [Fig. 3(a)]. Using second quantization, the system Hamiltonian in Eq. (27) can be expressed as

$$H = \sum_{i \in 1,2} \left[\omega_i a_i^\dagger a_i + \frac{\alpha_i}{2} a_i^\dagger a_i^\dagger a_i a_i \right] - g(a_1 - a_1^\dagger)(a_2 - a_2^\dagger), \quad (30)$$

where the expression within brackets represent the Duffing oscillator Hamiltonian for the qubits and g is the coupling energy. Since we define $V \propto n \propto i(a - a^\dagger)$, and consequently $I \propto \phi \propto (a + a^\dagger)$, the original $n_1 n_2$ -term becomes what is shown in Eq. (30). Such a coupling is called “transverse,” because the coupling Hamiltonian has nonzero matrix elements only at off-diagonal positions with respect to both oscillators, i.e., ${}_i \langle k | a_i - a_i^\dagger | k \rangle_i = 0$ for any integer k and for $i \in 1, 2$, and in this case, ${}_i \langle k \pm 1 | a_i - a_i^\dagger | k \rangle_i \neq 0$.

If we can ignore higher energy levels ($k \geq 2$) either because of sufficient anharmonicity or through careful control protocols that ensure these levels never have influence, we may truncate the Hamiltonian in Eq. (30) to

$$H = \sum_{i \in 1,2} \frac{1}{2} \omega_i \sigma_{z,i} + g \sigma_{y,1} \sigma_{y,2}. \quad (31)$$

This is a Hamiltonian of two spins, coupled by an exchange interaction. As we will see in Sec. IV D 1, such a Hamiltonian is most commonly used in contemporary implementations and can generate various types of two-qubit entangling gates. Note that, more often, we see that the interaction term is expressed in $\sigma_x \sigma_x$ instead of $\sigma_y \sigma_y$. The choice in the context here is arbitrary and does not change the dynamics. However, when both capacitive and inductive couplings are present in the system, both $\sigma_x \sigma_x$ and $\sigma_y \sigma_y$ may be needed. In this case, the voltage operator $V \propto i(a - a^\dagger)$ (reduced to σ_y after two-level approximation in the lab frame) is transversal to the current operator $I \propto (a + a^\dagger)$ (reduced to σ_x) and both of them may be transverse to the qubit. A similar example is demonstrated between a qubit and a resonator by Lu *et al.*⁹³

Transverse coupling can be engineered between a qubit and a harmonic oscillator, see Fig. 3(b). In this case, the Hamiltonian becomes

$$H = \frac{1}{2} \omega_q \sigma_z + \omega_r a^\dagger a + g(\sigma_+ a + \sigma_- a^\dagger), \quad (32)$$

where ω_q and ω_r denote the qubit and resonator frequencies, and $\sigma_+ = |0\rangle\langle 1|$ and $\sigma_- = |1\rangle\langle 0|$ describes the processes of exciting and de-exciting the qubit, respectively. Here, we have assumed that the coupling is in the dispersive limit, i.e., $g \ll \omega_q, \omega_r$, hence ignoring the double (de)excitation terms proportional to $\sigma_+ a^\dagger$ and $\sigma_- a$, which under typical operation regimes oscillate sufficiently fast to average to zero. The Hamiltonian in Eq. (32), is the standard model used for describing how a two-level atom interacts with a resonant cavity that houses it. Such a structure is also known as cavity quantum electrodynamics (cQED), and it is extended to the circuit version here. It

has many useful applications in superconducting quantum information architectures, such as high-fidelity readout,⁹⁴ see Sec. V, cavity buses,⁹⁵ quantum memory,^{96,97} quantum computation with cat states,^{98–100} etc.

Here, we briefly mention the use of a cavity or resonator to mediate coupling between two qubits, which may be physically well-separated (≈ 1 cm). Since most superconducting resonators are in the GHz frequency range, they can be made much longer than any dimension of a qubit circuit (≈ 1 mm). One can use such a resonator to mediate coupling between two or more otherwise noninteracting qubits. An example is shown in Fig. 3(b), where two transmon qubits are both capacitively coupled to the center resonator. The two-level system Hamiltonian is:

$$H = \sum_{i=1,2} \left(\omega_i a_i^\dagger a_i + \frac{\alpha_i}{2} a_i^\dagger a_i^\dagger a_i a_i \right) + \omega_r a_r^\dagger a_r + g_{1r}(a_1^\dagger a_r + a_1 a_r^\dagger) + g_{2r}(a_2^\dagger a_r + a_2 a_r^\dagger). \quad (33)$$

It can be shown that in the dispersive limit, i.e., $g_{ir} \ll |\omega_i - \omega_r|$, the resonator can—after proper transformation and approximation—be treated as an isolated system, and the composite system simplified to two transversely coupled qubits, see Eq. (31).

We now turn to the previous example of two inductively coupled flux qubits, see Fig. 3(c). Assume that the double-well potential [Fig. 2(g)] has a relatively high interwell barrier, which leads to an exponentially small qubit transition frequency at the energy degeneracy point, ($\Phi_e = \pi$). Around this degeneracy point, the off-diagonal matrix element of $\sin(\phi)$ is zero, i.e., the ground and excited states are localized in different wells and $\langle 1 | \sin(\phi) | 1 \rangle - \langle 0 | \sin(\phi) | 0 \rangle \neq 0$. We can then rewrite the Hamiltonian in Eq. (29) as

$$H = \sum_{i=1,2} \frac{1}{2} \omega_i \sigma_{z,i} + g \sigma_{z,1} \sigma_{z,2}. \quad (34)$$

Now, the coupling axis is the same as the qubit quantization axes and therefore termed “longitudinal coupling.” Note, however, that the physical $\sigma_x \sigma_x$ and $\sigma_z \sigma_z$ couplings can change in the qubit frame.

Longitudinal coupling is an important type of interaction, because it can generate entanglement without energy exchange. Moreover, it is found a necessary ingredient in the application of quantum annealing, where certain hard combinatorial optimization problems can be modeled by the Ising Hamiltonian in Eq. (34) and finding its ground state would solve this problem.

An intermediate qubit mode may also be used as a coupler in the longitudinal case. In Fig. 3(d), an additional rf-SQUID is used to mediate the coupling. The coupling strength can be tuned by the flux bias of the coupler SQUID.¹⁰¹ Note that a tunable coupler may also be realized in a structure with capacitive couplings.⁶³ A tunable coupler is useful because it provides a wide range of coupling strengths,¹⁰² a high on-off ratio¹⁰³ for reducing gate error-rates, and more ways of achieving high-fidelity entangling gates.^{67,104–106} The trade-off is an additional control line.

In addition to the pure transversal and longitudinal qubit-qubit interactions, there are also examples of mixed types of interaction Hamiltonians¹⁰⁷

$$H = \frac{1}{2} \omega_q \sigma_z + \omega_r a^\dagger a + g \sigma_z (a + a^\dagger), \quad (35)$$

which are longitudinal with respect to a qubit, but transverse with respect to a harmonic oscillator in a qubit-resonator system. Such a model is called longitudinal but one should note that it is only longitudinal to one participating system. It is hard to engineer physically longitudinal coupling with respect to a harmonic oscillator, since either the E -field (V) or the B -field (I) is transverse with respect to the eigen field of the harmonic oscillator. Note, however, that a transversal model such as in Eq. (32) may be transformed into a longitudinal one in certain operating regimes, see Sec. V.

In some applications, such as for quantum annealing, both longitudinal and transverse couplings are desired ($\sigma_z\sigma_z$ coupling for mapping the problem and $\sigma_x\sigma_x$ coupling for enhancing the annealing performance) and require independent control.

III. NOISE, DECOHERENCE, AND ERROR MITIGATION

Random, uncontrollable physical processes in the qubit control and measurement equipment or in the local environment surrounding the quantum processor are sources of noise that lead to decoherence and reduce the operational fidelity of the qubits. In this section, we introduce the basics of noise leading to decoherence in superconducting circuits, and we discuss coherent control methods to mitigate certain types of noise.

A. Types of noise

In a closed system, the dynamical evolution of a qubit state is deterministic. That is, if we know the starting state of the qubit and its Hamiltonian, then we can predict the state of the qubit at any time in the future. However, in open systems, the situation changes. The qubit now interacts with uncontrolled degrees of freedom in its environment, which we refer to as fluctuations or noise. In the presence of noise, as time progresses, the qubit state looks less and less like the state we would have predicted and, eventually, the state is lost. There are many different sources of noise that affect quantum systems, and they can be categorized into two primary types: systematic noise and stochastic noise.

1. Systematic noise

Systematic noise arises from a process that is traceable to a fixed control or readout error. For example, we apply a microwave pulse to the qubit that we believe will impart a 180° rotation. However, the control field is not tuned properly and, rather than rotating the qubit 180° , the pulse slightly over-rotates or under-rotates the qubit by a fixed amount. The underlying error is “systematic,” and it therefore leads to the same rotation error each time it is applied. However, when such erroneous pulses are used in practice in a variety of control sequences, the observed results may appear to be influenced by random noise. This is because the pulse is generally not applied in the same way for each experiment: it could be applied a different number of times, interspersed with different pulses in different orders, and therefore generally differs from experiment to experiment. However, once systematic errors are identified, they can generally be corrected through proper calibration or the use of improved hardware.

2. Stochastic noise

The second type of noise is stochastic noise, arising from random fluctuations of parameters that are coupled to our qubit.¹⁰⁸ For example, thermal noise of a $50\ \Omega$ resistor in the control lines leading to the qubit will have voltage and current fluctuations—Johnson noise—with a noise power that is proportional to both temperature and bandwidth. Or, the oscillator that provides the carrier for a qubit control pulse may have amplitude or phase fluctuations. Additionally, randomly fluctuating electric and magnetic fields in the local qubit environment—e.g., on the metal surface, on the substrate surface, at the metal-substrate interface, or inside the substrate—can couple to the qubit. This creates unknown and uncontrolled fluctuations of one or more qubit parameters, and this leads to qubit decoherence.

3. Noise strength and qubit susceptibility

The degree to which a qubit is affected by noise is related to the amount of noise impinging on the qubit, and the qubit’s susceptibility to that noise. The former is often a question of materials science and fabrication; that is, can we make devices with lower levels of noise. Or, it may be related to the quality of the control electronics and cryogenic engineering to limit the levels of noise on the control lines that necessarily connect to the qubits to control them. The latter—qubit susceptibility—is a question of qubit design. Qubits can be designed to trade-off sensitivity to one type of noise at the expense of increased sensitivity to other types of noise. Thus, materials science, fabrication engineering, electronics design, cryogenic engineering, and qubit design all play a role in creating devices with high coherence. In general, one should strive to eliminate the sources of noise, and then design qubits that are insensitive to the residual noise.

The qubit response to noise depends on how the noise couples to it—either through a longitudinal or a transverse coupling as referenced to the qubit quantization axis. This can be visualized using a Bloch Sphere picture of the qubit state, as illustrated in Fig. 4 and discussed in detail in Sec. III B.

B. Modeling noise and decoherence

1. Bloch sphere representation

The “Bloch sphere” is a unit sphere used to represent the quantum state of a two-level system (qubit). Figure 4(a) shows a Bloch sphere with a “Bloch vector” representing the state $|\psi\rangle = \alpha|0\rangle + \beta|1\rangle$. If we visualize the Bloch sphere as the planet Earth, then by convention, the north pole represents state $|0\rangle$ and the south pole state $|1\rangle$. For pure quantum states such as $|\psi\rangle$, the Bloch vector is of unit length, $|\alpha|^2 + |\beta|^2 = 1$, connecting the center of the sphere to any point on its surface.

The z -axis connects the north and south poles. It is called the “longitudinal axis,” since it represents the “qubit quantization axis” for the states $|0\rangle$ and $|1\rangle$ in the qubit eigenbasis. In turn, the x - y plane is the “transverse plane” with “transverse axes” x and y . In this Cartesian coordinate system, the unit Bloch vector $\vec{a} = (\sin\theta\cos\phi, \sin\theta\sin\phi, \cos\theta)$ is represented using the polar angle $0 \leq \theta \leq \pi$ and the azimuthal angle $0 \leq \phi < 2\pi$, as illustrated in Fig. 4(a). Following our convention, state $|0\rangle$ at the north pole is associated with $+1$, and state $|1\rangle$ (the south pole) with -1 . We can similarly represent the quantum state using the angles θ and ϕ ,

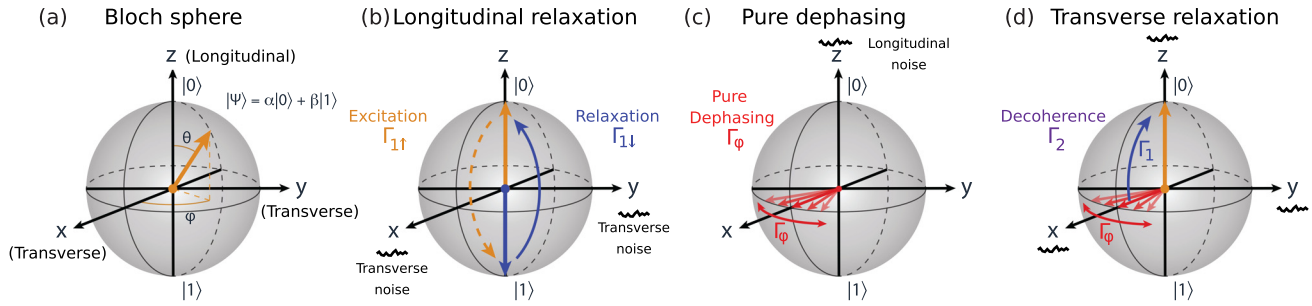


FIG. 4. Transverse and longitudinal noise represented on the Bloch sphere. (a) Bloch sphere representation of the quantum state $|\psi\rangle = \alpha|0\rangle + \beta|1\rangle$. The qubit quantization axis—the z axis—is “longitudinal” in the qubit frame, corresponding to σ_z terms in the qubit Hamiltonian. The x - y plane is “transverse” in the qubit frame, corresponding to σ_x and σ_y terms in the qubit Hamiltonian. (b) Longitudinal relaxation results from the energy exchange between the qubit and its environment, due to transverse noise that couples to the qubit in the x - y plane and drives transitions $|0\rangle \leftrightarrow |1\rangle$. A qubit in-state $|1\rangle$ emits energy to the environment and relaxes to $|0\rangle$ with a rate $\Gamma_{1\downarrow}$ (blue arched arrow). Similarly, a qubit in-state $|0\rangle$ absorbs energy from the environment, exciting it to $|1\rangle$ with a rate $\Gamma_{1\uparrow}$ (orange arched arrow). In the typical operating regime $k_B T \ll \hbar\omega_q$, the up-rate is suppressed, leading to the overall decay rate $\Gamma_1 \approx \Gamma_{1\downarrow}$. (c) Pure dephasing in the transverse plane arises from longitudinal noise along the z axis that fluctuates the qubit frequency. A Bloch vector along the x -axis will diffuse clockwise or counterclockwise around the equator due to the stochastic frequency fluctuations, depolarizing the azimuthal phase with a rate Γ_ϕ . (d) Transverse relaxation results in a loss of coherence at a rate $\Gamma_2 = \Gamma_1/2 + \Gamma_\phi$, due to a combination of energy relaxation and pure dephasing. Pure dephasing leads to decoherence of the quantum state $(1/\sqrt{2})(|0\rangle + |1\rangle)$, initially pointed along the x -axis. Additionally, the excited state component of the superposition state may relax to the ground state, a phase-breaking process that loses the orientation of the vector in the x - y plane.

$$|\psi\rangle = \alpha|0\rangle + \beta|1\rangle = \cos\frac{\theta}{2}|0\rangle + e^{i\phi}\sin\frac{\theta}{2}|1\rangle. \quad (36)$$

The Bloch vector is stationary on the Bloch sphere in the “rotating frame picture.” If state $|1\rangle$ has a higher energy than state $|0\rangle$ (as it generally does in superconducting qubits), then in a stationary frame, the Bloch vector would precess around the z -axis at the qubit frequency $(E_1 - E_0)/\hbar$. Without loss of generality (and much easier to visualize), we instead “choose” to view the Bloch sphere in a reference frame where the x and y -axes also rotate around the z -axis at the qubit frequency. In this “rotating frame,” the Bloch vector appears stationary as written in Eq. (36). The rotating frame will be described in detail in Sec. IV D 1 in the context of single-qubit gates.

For completeness, we note that the density matrix $\rho = |\psi\rangle\langle\psi|$ for a pure state $|\psi\rangle$ is equivalently

$$\rho = \frac{1}{2}(I + \vec{a} \cdot \vec{\sigma}) = \frac{1}{2} \begin{pmatrix} 1 + \cos\theta & e^{-i\phi}\sin\theta \\ e^{i\phi}\sin\theta & 1 - \cos\theta \end{pmatrix} \quad (37)$$

$$= \begin{pmatrix} \cos^2\frac{\theta}{2} & e^{-i\phi}\cos\frac{\theta}{2}\sin\frac{\theta}{2} \\ e^{i\phi}\cos\frac{\theta}{2}\sin\frac{\theta}{2} & \sin^2\frac{\theta}{2} \end{pmatrix} \quad (38)$$

$$= \begin{pmatrix} |\alpha|^2 & \alpha\beta^* \\ \alpha^*\beta & |\beta|^2 \end{pmatrix} \quad (39)$$

where I is the identity matrix, and $\vec{\sigma} = [\sigma_x, \sigma_y, \sigma_z]$ is a vector of Pauli matrices. If the Bloch vector $\vec{a}$ is a unit vector, then ρ represents a pure state ψ and $\text{Tr}(\rho^2) = 1$. More generally, the Bloch sphere can be used to represent “mixed states,” for which $|\vec{a}| < 1$; in this case, the Bloch vector terminates at points “inside” the unit sphere, and $0 \leq \text{Tr}(\rho^2) < 1$. To summarize, the surface of the unit sphere represents pure states, and its interior represents mixed states.⁶

2. Bloch-Redfield model of decoherence

Within the standard Bloch-Redfield^{109–111} picture of two-level system dynamics, noise sources weakly coupled to the qubits have

short correlation times with respect to the system dynamics. In this case, the relaxation processes are characterized by two rates (see Fig. 4),

$$\text{longitudinal relaxation rate : } \Gamma_1 \equiv \frac{1}{T_1}, \quad (40)$$

$$\text{transverse relaxation rate : } \Gamma_2 \equiv \frac{1}{T_2} = \frac{\Gamma_1}{2} + \Gamma_\phi, \quad (41)$$

which contains the pure dephasing rate Γ_ϕ . We note that the definition of Γ_2 as a sum of rates presumes that the individual decay functions are exponential, which occurs for Lorentzian noise spectra (centered at $\omega = 0$) such as white noise (short correlation times) with a high-frequency cutoff.

The impact of noise on the qubit can be visualized on the Bloch sphere in Fig. 4(a). For an initial state ($t = 0$)

$$|\psi\rangle = \alpha|0\rangle + \beta|1\rangle, \quad (42)$$

the Bloch-Redfield density matrix ρ_{BR} for the qubit is written^{112,113}

$$\rho_{\text{BR}} = \begin{pmatrix} 1 + (|\alpha|^2 - 1)e^{-\Gamma_1 t} & \alpha\beta^* e^{i\delta\omega t} e^{-\Gamma_2 t} \\ \alpha^*\beta e^{-i\delta\omega t} e^{-\Gamma_2 t} & |\beta|^2 e^{-\Gamma_1 t} \end{pmatrix}. \quad (43)$$

There are a few important distinctions between Eqs. (43) and (39), which we list here and then describe in more detail in Secs. III B 2 a–III B 2 c.

- First, we have introduced the “longitudinal decay function” $\exp(-\Gamma_1 t)$, which accounts for longitudinal relaxation of the qubit.
- Second, we introduced the “transverse decay function” $\exp(-\Gamma_2 t)$, which accounts for transverse decay of the qubit.
- Third, we have introduced an explicit phase accrual $\exp(i\delta\omega t)$, where $\delta\omega = \omega_q - \omega_d$, which generalizes the Bloch sphere picture to account for cases where the qubit frequency ω_q differs from the rotating-frame frequency ω_d , as we will see later when discussing measurements of T_2 using Ramsey interferometry,^{114,115} and in Sec. IV D 1, in the context of single-qubit gates.
- Fourth, we have constructed the matrix such that for $t \gg (T_1, T_2)$, the upper-left matrix element will approach a unit value, indicating

that all populations relax to the ground state, while the other three matrix elements decay to zero. This is related to the assumption that the environmental temperature is low enough that thermal excitations of the qubit from the ground to the excited state rarely occur.

a. Longitudinal relaxation. The longitudinal relaxation rate Γ_1 describes depolarization along the qubit quantization axis, often referred to as “energy decay” or “energy relaxation.” In this language, a qubit with polarization $p = 1$ is entirely in the ground state ($|0\rangle$) at the north pole, $p = -1$ is entirely in the excited state ($|1\rangle$) at the south pole, and $p = 0$ is a completely depolarized mixed state at the center of the Bloch sphere.

As illustrated in Fig. 4(b), longitudinal relaxation is caused by “transverse noise,” via the x - or y -axis, with the intuition that off-diagonal elements of an interaction Hamiltonian are needed to connect and drive transitions between states $|0\rangle$ and $|1\rangle$.

Depolarization occurs due to energy exchange with an environment, generally leading to both an “up transition rate” $\Gamma_{1\uparrow}$ (excitation from $|0\rangle$ to $|1\rangle$), and a “down transition rate” $\Gamma_{1\downarrow}$ (relaxation from $|1\rangle$ to $|0\rangle$). Together, these form the longitudinal relaxation rate Γ_1

$$\Gamma_1 \equiv \frac{1}{T_1} = \Gamma_{1\downarrow} + \Gamma_{1\uparrow}. \quad (44)$$

T_1 is the $1/e$ decay time in the exponential decay function in Eq. (43), and it is the characteristic time scale over which the qubit population will relax to its steady-state value. For superconducting qubits, this steady-state value is generally the ground state, due to Boltzmann statistics and typical operating conditions. Boltzmann equilibrium statistics lead to the “detailed balance” relationship $\Gamma_{1\uparrow} = \exp(-\hbar\omega_q/k_B T) \Gamma_{1\downarrow}$, where T is the temperature and k_B is the Boltzmann constant, with an equilibrium qubit polarization approaching $p = \tanh(\hbar\omega_q/2k_B T)$. Typical qubits are designed at frequency $\omega_q/2\pi \approx 5$ GHz and are operated at dilution refrigerator temperatures $T \approx 20$ mK. In this limit, the up-rate $\Gamma_{1\uparrow}$ is exponentially suppressed by the Boltzmann factor $\exp(-\hbar\omega_q/k_B T)$, and so only the down-rate $\Gamma_{1\downarrow}$ contributes significantly, relaxing the population to the ground state. Thus, qubits generally spontaneously lose energy to their cold environment, but the environment rarely introduces a qubit excitation. As a result, the equilibrium polarization approaches unity [see Eq. (43)].^{116,117}

Only noise at the qubit frequency mediates qubit transitions, whether absorption or emission, and this noise is generally “well behaved” (short correlation time, many modes weakly coupled to qubit, no divergences) around the qubit frequency for superconducting qubits. The intuition is that qubit-transition linewidths are relatively narrow in frequency, and so the noise generally does not vary much over this narrow frequency range. Although there are a few notable exceptions, for example, qubit decay in the presence of hot quasiparticles,^{118–120} which can lead to nonexponential decay functions, longitudinal depolarization measurements generally present exponential decay functions consistent with the Bloch-Redfield picture.

An example of a T_1 measurement is shown in Fig. 5(a). The qubit is prepared in its excited state using an X_π -pulse, and then left to spontaneously decay to the ground state for a time τ , after which the qubit is measured. A single measurement will project the quantum state into either state $|0\rangle$ or state $|1\rangle$, with probabilities that correspond to the

qubit polarization. To make an estimate of this polarization, one needs to identically prepare the qubit and repeat the experiment many times. This is analogous to flipping a coin: any single flip will yield heads or tails, but the probability of obtaining a heads or tails can be estimated by flipping the coin many times and taking the ensemble average. The resulting exponential decay has a characteristic time $T_1 = 85 \mu\text{s}$.

b. Pure dephasing. The “pure dephasing” rate Γ_ϕ describes depolarization in the x - y plane of the Bloch sphere. It is referred to as “pure dephasing,” to distinguish it from other phase-breaking processes such as energy excitation or relaxation.

As illustrated in Fig. 4(c), pure dephasing is caused by “longitudinal noise” that couples to the qubit via the z -axis. Such longitudinal noise causes the qubit frequency ω_q to fluctuate, such that it is no longer equal to the rotating frame frequency ω_d , and causes the Bloch vector to precess forward or backward in the rotating frame. Intuitively, we can imagine identically preparing several instances of the Bloch vector along the x -axis. For each instance, the stochastic fluctuations of qubit frequency will result in a different precession frequency, resulting in a net fanout of the Bloch vector in the x - y plane. This eventually leads to a complete depolarization of the azimuthal angle ϕ . Note that this stochastic effect will be captured in the transverse relaxation rate Γ_2 (Sec. III B 2 c); it is “not” the deterministic term $\exp(\pm i\delta\omega t)$ that appears in Eq. (43), which represents intentional detuning of the qubit reference frame.

There are a few important distinctions between pure dephasing and energy relaxation. First, in contrast to energy relaxation, pure dephasing is not a resonant phenomenon; noise at any frequency can modify the qubit frequency and cause dephasing. Thus, qubit dephasing is subject to broadband noise. Second, since pure dephasing is elastic (there is no energy exchange with the environment), it is in principle “reversible.” That is, the dephasing can be “undone”—with quantum information being preserved—through the application of unitary operations, e.g., dynamical decoupling pulses,⁷⁸ see Sec. III D 2.

The degree to which the quantum information can be retained depends on many factors, including the bandwidth of the noise, the rate of dephasing, the rate at which unitary operations can be performed, etc. This should be contrasted with spontaneous energy relaxation, which is an “irreversible” process. Intuitively, once the qubit emits energy to the environment and its myriad uncontrollable modes, the quantum information is essentially lost with no hope for its recovery and reconstitution back into the qubit.

c. Transverse relaxation. The transverse relaxation rate $\Gamma_2 = \Gamma_1/2 + \Gamma_\phi$ describes the loss of coherence of a superposition state, for example $(1/\sqrt{2})(|0\rangle + |1\rangle)$, pointed along the x -axis on the equator of the Bloch sphere as illustrated in Fig. 4(d). Decoherence is caused in part by longitudinal noise, which fluctuates the qubit frequency and leads to pure dephasing Γ_ϕ (red). It is also caused by transverse noise, which leads to energy relaxation of the excited-state component of the superposition state at a rate Γ_1 (blue). Such a relaxation event is also a phase-breaking process, because once it occurs, the Bloch vector points to the north pole, $|0\rangle$, and there is no longer any knowledge of which direction the Bloch vector *had* been pointing along the equator; the relative phase of the superposition state is lost.

Transverse relaxation T_2 can be measured using Ramsey interferometry, as shown and described in Fig. 5(b). The protocol positions

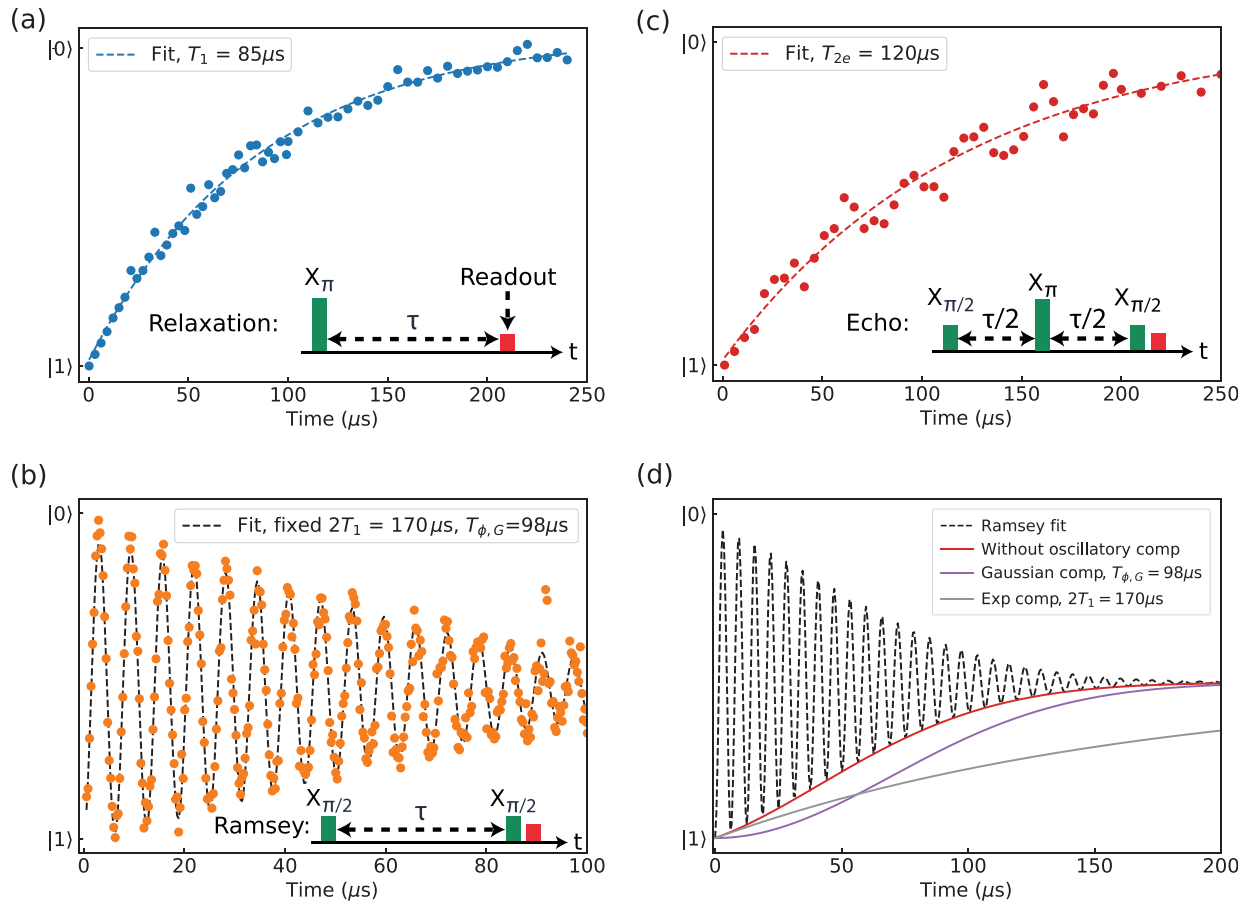


FIG. 5. Characterizing longitudinal (T_1) and transverse (T_2) relaxation times of a transmon qubit. (a) Longitudinal relaxation (energy relaxation) measurement. The qubit is prepared in the excited state using an X_{π} -pulse and measured after a waiting time τ . For each value τ , this procedure is repeated to obtain an ensemble average of the qubit polarization: +1 corresponding to $|0\rangle$ and -1 corresponding to $|1\rangle$. The resulting exponential decay function has a characteristic time $T_1 = 85 \mu\text{s}$. (b) Transverse relaxation (decoherence) measurement via Ramsey interferometry. The qubit is prepared on the equator using an $X_{\pi/2}$ -pulse, intentionally detuned from the qubit frequency by $\delta\omega$, causing the Bloch vector to precess in the rotating frame at a rate $\delta\omega$ around the z-axis. After a time τ , a second $X_{\pi/2}$ pulse then projects the Bloch vector back on to the z axis, effectively mapping its former position on the equator to a position on the z axis. The oscillations decay with an approximately (but not exactly) exponential decay function, with a characteristic time $T_2^* = 95 \mu\text{s}$. (c) Transverse relaxation (decoherence) measurement via a Hahn echo experiment.¹¹⁹ The qubit is prepared and measured in the same manner as the Ramsey interferometry experiment, except that a single X_{π} pulse is applied midway through the free-evolution time τ . The decay function is approximately exponential, with a characteristic time $T_{2E} = 120 \mu\text{s}$. The coherence improvement using the Hahn echo over panel (b) indicates that some low-frequency dephasing noise has been mitigated; however, a small amount remains since T_{2E} has not yet reached the $2T_1$ limit. (d) Coherence function incorporating T_1 loss and Gaussian dephasing components of the Ramsey interferometry data in panel (b). The Gaussian-distributed $1/f$ noise spectrum of magnetic flux noise leads to a decay function $\exp(-\chi_N) \propto \exp(-t/T_1) \exp(-t^2/T_{\phi,G}^2)$ in Eq. (45). These two decay functions together match well with the Ramsey data in panel (b).

the Bloch vector on the equator using a $X_{\pi/2}$ -pulse. Typically, the carrier frequency of this pulse is slightly detuned from the qubit frequency by an amount $\delta\omega$. As a result, the Bloch vector will precess around the z-axis at a rate $\delta\omega$. This is done for convenience sake, so that the resulting Ramsey measurement will oscillate, making it easier to analyze. After precessing for a time τ , a second $X_{\pi/2}$ -pulse projects the Bloch vector back on to the z-axis. Repeated measurements are made to take an ensemble averaged estimate of the qubit polarization, as a function of τ . The resulting oscillations in Fig. 5(b) feature an approximately exponential decay function with time $T_2^* = 98 \mu\text{s}$. The “*” indicates that the Ramsey experiment is sensitive to “inhomogeneous broadening.” That is, it is highly sensitive to quasistatic, low-frequency fluctuations that are constant within one

experimental trial, but vary from trial to trial, e.g., due to $1/f$ -type noise. This sensitivity to quasistatic noise is related to the corresponding $N=0$ noise filter function shown in Fig. 5(d) being centered at zero-frequency, as described in more detail in Sec. III D 2.

The Hahn echo shown in Fig. 5(c) is an experiment that is less sensitive to quasistatic noise. By placing a Y_{π} pulse at the center of a Ramsey interferometry experiment, the quasistatic contributions to dephasing can be “refocused,” leaving an estimate T_{2E} that is less sensitive to inhomogeneous broadening mechanisms. The pulses are generally chosen to be resonant with the qubit transition for a Hahn echo, since any frequency detuning would be nominally refocused anyway. The resulting decay function in Fig. 5(c) is essentially exponential with time $T_{2E} = 120 \mu\text{s}$.

With the known T_1 and T_2 times, one can infer the pure dephasing time T_ϕ from Eq. (41), provided the decay functions are exponential. In superconducting qubits, however, the broadband dephasing noise (e.g., flux noise, charge noise, critical-current noise, ...) tends to exhibit a $1/f$ -like power spectrum. Such noise is singular near $\omega = 0$, has long correlation times, and generally does not fall within the Bloch-Redfield description. The decay function of the off-diagonal terms in Eq. (43) is generally nonexponential, and for such cases, the simple expression in Eq. (41) is not applicable.

3. Modification due to $1/f$ -type noise

If we assume that the qubit is coupled to many independent fluctuators, then, regardless of their individual statistics, they will in concert generate noise with a Gaussian distribution due to the central limit theorem. We therefore say that the longitudinal fluctuations exhibit Gaussian-distributed $1/f$ noise. For $1/f$ noise spectra, the phase decay function is itself a Gaussian $\exp[-(t/T_{\phi,G})^2]$, where we write $T_{\phi,G}$ to distinguish it from T_ϕ used in Eq. (41). Furthermore, this function is separable from the T_1 -type exponential decay, because the T_1 -noise remains regular at the qubit frequency. The density matrix in Eq. (43) becomes, following Refs. 78 and 112,

$$\rho = \begin{pmatrix} 1 + (|\alpha|^2 - 1)e^{-\Gamma_1 t} & \alpha\beta^* e^{i\delta\omega t} e^{-\frac{\Gamma_1}{2}t} e^{-\chi_N(t)} \\ \alpha^* \beta e^{-i\delta\omega t} e^{-\frac{\Gamma_1}{2}t} e^{-\chi_N(t)} & |\beta|^2 e^{-\Gamma_1 t} \end{pmatrix}, \quad (45)$$

where the decay function $\langle \exp(-\chi_N(t)) \rangle$ contains the “coherence function” $\chi_N(t)$, which generalizes pure dephasing to include nonexponential decay functions. As we shall see later, the subscript N labeling the decay function refers to the number of π -pulses used to refocus the low-frequency noise, which impacts the form of the decay function. Because the function is no longer purely exponential, we cannot formally write the transverse relaxation decay function as $\exp(-t/T_2)$. However, an exponential decay remains a practically reasonable approximation for $T_\phi \gg T_1$. We also note that the energy decay component of the transverse relaxation is $\exp(-t/2T_1)$, and so T_2 can never be larger than $2T_1$. In the absence of pure dephasing, the maximum $T_2 = 2T_1$ is reached.

As an example, consider the Ramsey interferometry data in Fig. 5(b). Since the dephasing is relatively weak, the transverse relaxation function as $\exp(-t/T_2)$ is a reasonable fit and yields $T_2 = 95 \mu\text{s}$. However, using the value $T_1 = 85 \mu\text{s}$ from Fig. 5(a) and dividing out $\exp(-t/2T_1)$ from the data in Fig. 5(b), the remaining pure dephasing decay function is shown in Fig. 5(d) and assumes a Gaussian envelope $\langle \exp(-\chi_N(t)) \rangle = \exp[-(t/T_{\phi,G})^2]$, with $T_{\phi,G} = 98 \mu\text{s}$. The Hahn echo data in Fig. 5(c) may be treated similarly.

For completeness, in addition to $1/f$ dephasing mechanisms, we note that there are also “white” pure dephasing mechanisms, which give rise to an exponential decay function for the dephasing component of T_2 . One common example is dephasing due to the shot noise of residual photons in the readout resonator coupled to superconducting qubits, as we discuss in Sec. III C 3.

4. Noise power spectral density (PSD)

The frequency distribution of the noise power for a stationary noise source λ is characterized by its PSD $S_\lambda(\omega)$

$$S_\lambda(\omega) = \int_{-\infty}^{\infty} d\tau \langle \lambda(\tau) \lambda(0) \rangle e^{-i\omega\tau}. \quad (46)$$

The Wiener-Khinchine theorem states that the PSD is the Fourier transform of the autocorrelation function $c_\lambda(\tau) = \langle \lambda(\tau) \lambda(0) \rangle$ of the noise source λ . Since the integration limits are $(-\infty, \infty)$, this is the bilateral PSD. Symmetrizing the PSD allows one to consider only positive frequencies, which is termed a unilateral PSD. Both unilateral and bilateral PSDs are used, often with the same notation, and so one needs to know how the PSD is defined, to keep track of the factors 2 and π , and also be aware of the implications for quantum systems.

For classical systems, the noise power spectral density is symmetric. This is because the autocorrelation function of real signals is itself a real function, and the Fourier transform of a real temporal function is symmetric in the frequency domain. Dephasing noise is caused by real, fluctuating fields, and so its PSD is generally symmetric. Examples of such classical noise include thermal (Johnson) noise and $1/f$ noise¹²² (see Fig. 6).

In turn, the inverse Fourier transform of the PSD will yield the autocorrelation function

$$c_\lambda(\tau) = \frac{1}{2\pi} \int_{-\infty}^{\infty} d\omega S_\lambda(\omega) e^{i\omega\tau}. \quad (47)$$

This implies that integrating the noise power spectral density with $\tau = 0$ yields the second moment of the noise, or, for zero-mean fluctuations, the variance.

However, the autocorrelation function for a quantum system may be complex-valued due to the fact that quantum operators generally do not commute at different times. This means that time-ordering of the operators matters, and the PSD need not be symmetric in frequency. This is generally the case for transverse noise causing

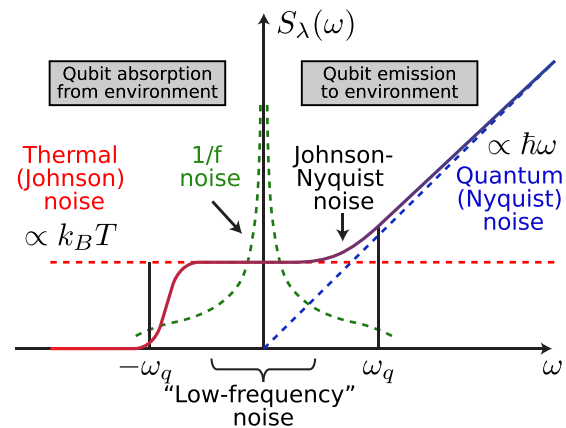


FIG. 6. Examples of symmetric and asymmetric noise spectral densities. Noise at positive (negative) frequencies corresponds to the qubit emitting (absorbing) energy of (from) its environment. Thermal noise is proportional to temperature T and carries essentially a white noise spectrum. As it represents a classical fluctuating parameter, such as electric current, the noise power spectral density is symmetric in frequency. When resonant with the qubit, it will drive both stimulated emission and absorption processes. The qubit may also spontaneously emit energy to its environment, represented as Nyquist noise,¹²¹ a quantum mechanical effect that is not symmetric in frequency. At sufficiently low temperatures or high frequencies, $\hbar|\omega| > 2k_B T$, the Nyquist noise dominates thermal noise (positive frequencies), and the thermal noise is exponentially suppressed (negative frequencies).

longitudinal energy relaxation. Noise at a positive frequency $S(\omega_q)$ corresponds to energy transfer from the qubit to the environment, including both stimulated and spontaneous emission, associated with the down-rate Γ_{11} . Noise at a negative frequency $S(-\omega_q)$ corresponds to energy transfer to the qubit from the environment, associated with the up-rate Γ_{11} . This energy transfer becomes exponentially suppressed when the qubit frequency is larger than thermal energy ($k_B T$), as shown in Fig. 6. For a detailed discussion, see Refs. 123 and 124. Spontaneous emission to a cold environment or electromagnetic vacuum, represented by Nyquist noise in Fig. 6, is an example of an asymmetric noise PSD.¹²¹

In general, making a connection between $S_\lambda(\omega)$ and the measured qubit decay functions is the basis for noise spectroscopy up to second-order statistics.^{78,125–129} The search for higher-order spectra related to non-Gaussian noise is a current topic of active research.¹²⁹

C. Common examples of noise

There are many sources of stochastic noise in superconducting qubits, and we refer the reader to Ref. 40 for a review. Here, we briefly present several of the most common types of noise, their effect on coherence, and refer the reader to the references for a more detailed discussion.

1. Charge noise

“Charge noise” is ubiquitous in solid-state devices. It arises from charged fluctuators present in the defects or charge traps that reside in interfacial dielectrics, the junction tunnel barrier, and in the substrate itself. These are often modeled as an ensemble of fluctuating two-level systems or as bulk dielectric loss.^{130,131} For example, in the case of a transmon qubit, the electric field between the capacitor plates traverses and couples to dielectric defects residing on the metal surfaces of the plates (for lateral-plate-type capacitors) or the capacitor dielectric between the plates (for parallel-plate-type capacitors). The electric field variable is transverse with respect to the quantization axis of the transmon qubit, which means that this noise is mainly responsible for energy relaxation (T_1). Additionally, if the E_J/E_C ratio of the transmon is not made sufficiently large (smaller than around 60), the qubit frequency itself will also be sensitive to broadband charge fluctuations. In this case, low-frequency charge noise couples longitudinally to the transmon and causes pure dephasing (T_ϕ).

Charge noise is modeled primarily as a combination of inverse-frequency noise and Nyquist noise, also referred to as “ohmic” noise. At lower frequencies, the spectral density takes the form

$$S_Q(\omega) = A_Q^2 \left(\frac{2\pi \times 1\text{Hz}}{\omega} \right)^{\gamma_Q}, \quad (48)$$

with quasiuniversal values $A_Q^2 = (10^{-3}e)^2/\text{Hz}$ at 1 Hz, and $\gamma_Q \approx 1$. In addition to large $1/f$ fluctuations, early charge qubits often witnessed discrete, charge offsets reminiscent of random telegraph noise. Together, these two mechanisms severely limited the utility of charge qubits, and served as a strong motivation to move to capacitively shunted charge qubits (transmons), which greatly reduced the qubit longitudinal sensitivity to charge noise. At higher frequencies, the power spectrum takes the form $S_Q(\omega) = B_Q^2[\omega/(2\pi \times 1\text{Hz})]$, where the noise strength B_Q^2 at 1 Hz can assume a range of values depending

on the level of dissipation in the system. Likewise, the cross-over from $1/f$ -like behavior to f -like behavior generally occurs at around 1 GHz, but will vary higher or lower between samples depending on the degree of dissipation.^{62,132}

2. Magnetic flux noise

Another commonly observed noise in solid-state devices is magnetic “flux noise.” The origin of this noise is understood to arise from the stochastic flipping of spins (magnetic dipoles) that reside on the surfaces of the superconducting metals comprising the qubit,¹³³ resulting in random fluctuations of the effective magnetic field that biases flux-tunable qubits.

For example, in the case of the split transmon, the external magnetic field threading the loop couples longitudinally to the qubit and modulates the transition frequency via the Josephson energy E_J (except at $\varphi_e = 0$, where the qubit is first-order insensitive to magnetic-field fluctuations). Because the flux noise is longitudinal to the transmon, it contributes to pure dephasing (T_ϕ). However, in the case of the flux qubit, and depending on the flux-bias point, the flux noise may be either longitudinal—causing dephasing T_ϕ —or it may couple transversely and thus contribute to T_1 relaxation.^{62,78} The noise power spectrum of these fluctuations generally exhibits a “quasiuniversal” dependence

$$S_\Phi(\omega) = A_\Phi^2 \left(\frac{2\pi \times 1\text{Hz}}{\omega} \right)^{\gamma_\Phi}, \quad (49)$$

with $\gamma_\Phi \approx 0.8 - 1.0$ and $A_\Phi^2 \approx (1 \mu\Phi_0)^2/\text{Hz}$, and has been shown to extend from less than millihertz to beyond gigahertz frequencies.^{78,127,128,134,135}

The large, low-frequency weighting of the $1/f$ power distribution enables the use of engineered error mitigation techniques—such as dynamical decoupling—to achieve better coherence^{78,136,137} and for improving single and two-qubit gate fidelity.¹³⁸ It was recently demonstrated that $1/f$ flux noise is also a T_1 -mechanism when extended out to the qubit frequency,⁶² and one similarly expects a crossover to ohmic flux noise at high enough frequencies.¹³⁹

Although much is known about the statistics and number of the defects presumed responsible for flux noise, their precise physical manifestation remains uncertain.^{133,140} The fact that the $1/f$ noise is quasiuniversal and largely independent of device, strongly suggests a common origin for the noise. Recent studies suggest that adsorbed molecular oxygen may be responsible for flux-noise.^{140,141}

3. Photon number fluctuations

In the circuit QED architecture, resonator “photon number fluctuation” is another major decoherence source.¹⁴² Residual microwave fields in the cavity have photon-number fluctuations that in the dispersive regime impact the qubit through an interaction term $\chi\sigma_z n$, see Sec. II C 2, leading to a frequency shift $\Delta_{\text{Stark}} = 2\eta\chi\bar{n}$, where $\bar{n}$ is the average photon number, and $\eta = \kappa^2/(\kappa^2 + 4\chi^2)$ effectively scales the photon population seen by the qubit due to the interplay between the qubit-induced dispersive shift of the resonator frequency (χ) and the resonator decay rate (κ).

In the dispersive limit, the noise is longitudinally coupled to the qubit and leads to pure dephasing at a rate

$$\Gamma_\phi = \eta \frac{4\chi^2}{\kappa} \bar{n}. \quad (50)$$

The fluctuations originate from residual photons in the resonator, typically due to radiation from higher temperature stages in the dilution refrigerator.^{106,143} The corresponding noise spectral density is of Lorentzian type

$$S(\omega) = 4\chi^2 \frac{2\eta\bar{n}\kappa}{\omega^2 + \kappa^2}, \quad (51)$$

which exhibits an essentially white noise spectrum up to a 3 dB cutoff frequency $\omega = \kappa$ set by the resonator decay rate κ , see Ref. 62.

4. Quasiparticles

“Quasiparticles,” i.e., unpaired electrons, are another important noise source for superconducting devices.¹¹⁹ The tunneling of quasiparticles through a qubit junction may lead to both T_1 relaxation and pure dephasing T_ϕ , depending on the type of qubit, the bias point, and the junction through which the tunneling event occurs.^{118,120}

Quasiparticles are naturally excited due to thermodynamics, and the quasiparticle density in equilibrium superconductors should be exponentially suppressed as the temperature decreases. However, below about 150 mK, the quasiparticle density observed in superconducting devices—generally in the range 10^{-8} – 10^{-6} per Cooper pair—is much higher than what the BCS theory would predict for a superconductor in equilibrium with its cryogenic environment at 10 mK. The reason for this excess quasiparticle population is unclear, but it is very likely related to the presence of additional, nonthermal mechanisms that increase the generation rates, “bottleneck effects” that occur at millikelvin temperatures to reduce recombination rates, or a combination of both.

It has been shown that the observed T_1 and excess excited-state population measured in today’s state-of-the-art high-coherence transmon are self-consistent with excess “hot” nonequilibrium quasiparticles at the quasiuniversal density of around 10^{-7} – 10^{-6} per Cooper pair.^{144,145} Although this quasiparticle generation mechanism is not yet well understood, it has been shown that quasiparticles can be transiently pumped away, improving T_1 times and reducing T_1 temporal variation.¹²⁰

D. Operator form of qubit-environment interaction

Similar to the way two qubits are coupled, a qubit may couple and interact with uncontrolled degrees of freedom (DOF) in its environment (the noise sources). The interaction Hamiltonian between the qubit DOF ($\hat{O}_q$) and those of the noise source ($\hat{\lambda}$) may be expressed in a general form

$$\hat{H}_{\text{int}} = \nu \hat{O}_q \hat{\lambda} \quad (52)$$

where ν denotes the coupling strength—which is related to the sensitivity of the qubit to environmental fluctuations $\partial\hat{H}_q/\partial\lambda$ —and we assume that $\hat{O}_q$ is a qubit operator within the qubit Hamiltonian $\hat{H}_q$. The noisy environment represented by the operator $\hat{\lambda}$ produces fluctuations $\delta\lambda$. Note that we retained the hats in this section to remind us that these are quantum operators.

1. Connecting T_1 to $S(\omega)$

If the coupling is transverse to the qubit, e.g., $\hat{O}_q$ is of the type σ_x or $(a + a^\dagger)$ —see the related case of qubit-qubit coupling treated in Sec. II C—then noise at the qubit frequency can cause transitions between the qubit eigenstates. Since this is a stochastic process, the ensemble-average manifests itself as a decay (usually exponential) of the qubit population toward a certain equilibrium value (usually the qubit ground state $|0\rangle$ for $k_B T \ll \hbar\omega_q$). Again, this process is equivalently referred to as “ T_1 relaxation,” “energy relaxation,” or “longitudinal relaxation.” As stated above, T_1 is the characteristic time scale of the decay. Its inverse, $\Gamma_1 = 1/T_1$ is called the relaxation rate and depends on the power spectral density of the noise $S(\omega)$ at the transition frequency of the qubit $\omega = \omega_q$

$$\Gamma_1 = \frac{1}{\hbar^2} \left| \langle 0 | \frac{\partial\hat{H}_q}{\partial\lambda} | 1 \rangle \right|^2 S_\lambda(\omega_q), \quad (53)$$

where $\partial\hat{H}_q/\partial\lambda$ is the qubit transverse susceptibility to fluctuations $\delta\lambda$, such that $|\delta\lambda|^2$ is the ensemble average value of the environmental noise sources as seen by the qubit. Equation (53) is equivalent to Fermi’s Golden Rule, in which the qubit’s transverse susceptibility to noise is driven by the noise power spectral density. The qubit transverse susceptibility can be used to calculate the prefactors; for example, for fluctuations $\delta\lambda = \delta n$, the relevant term in the transmon Hamiltonian in Eq. (16) is $4E_C(\hat{n} - n_g)^2$, where we allow for an offset charge n_g , and the susceptibility is given by $8E_C\hat{n}$. We refer the reader to Refs. 40, 146, and 147 for more details.

2. Connecting T_ϕ to $S(\omega)$

If the coupling to the qubit is instead longitudinal, e.g., $\hat{H}_q$ is of the type σ_z or $a^\dagger a$, the noise will stochastically modulate the transition frequency of the qubit and thereby introduce a stochastic phase evolution of a qubit superposition state. This gradually leads to a loss of phase information, and it is therefore called pure dephasing (time constant T_ϕ). Unlike T_1 relaxation, which is generally an irreversible (incoherent) error, pure dephasing T_ϕ is in principle reversible (a coherent error). The degree of pure dephasing depends on the control pulse sequence applied while the qubit is subject to the noise process.

Consider the relative phase φ of a superposition state undergoing free evolution in the presence of noise. The superposition state’s accumulated phase

$$\varphi(t) = \int_0^t \omega_q dt' = \langle \omega_q \rangle t + \delta\varphi(t) \quad (54)$$

diffuses due to adiabatic fluctuations of the transition frequency,

$$\delta\varphi(t) = \frac{\partial\omega_q}{\partial\lambda} \int_0^t \delta\lambda(t') dt', \quad (55)$$

where $\partial\omega_q/\partial\lambda = (1/\hbar)|\langle \partial\hat{H}_q/\partial\lambda \rangle|$ is the qubit’s longitudinal sensitivity to λ -noise. For noise generated by a large number of fluctuators that are weakly coupled to the qubit, its statistics are Gaussian. Ensemble averaging over all realizations of the Gaussian-distributed stochastic process $\delta\lambda(t)$, the dephasing is

$$\langle e^{i\delta\varphi(t)} \rangle = e^{-\frac{1}{2}\langle \delta\varphi^2(t) \rangle} \equiv e^{-\chi_N(t)}, \quad (56)$$

leading to a coherence decay function,

$$\langle e^{-\chi_N(\tau)} \rangle = \exp \left[-\frac{\tau^2}{2} \frac{\partial \omega_q}{\partial \lambda} \int_{-\infty}^{\infty} g_N(\omega, \tau) S(\omega) d\omega \right], \quad (57)$$

where $g(\omega, \tau)$ is a dimensionless weighting function.

The function $g_N(\omega, \tau)$ can be viewed as a frequency-domain filter of the noise $S_\lambda(\omega)$ [see Fig. 7(a)]. In general, its filter properties depend on the number N and distribution of applied pulses. For example, considering sequences of π -pulses,^{78,148–152}

$$g_N(\omega, \tau) = \frac{1}{(\omega\tau)^2} \left| 1 + (-1)^{1+N} \exp(i\omega\tau) + 2 \sum_{j=1}^N (-1)^j \exp(i\omega\delta_j\tau) \cos(\omega\tau_\pi/2) \right|^2, \quad (58)$$

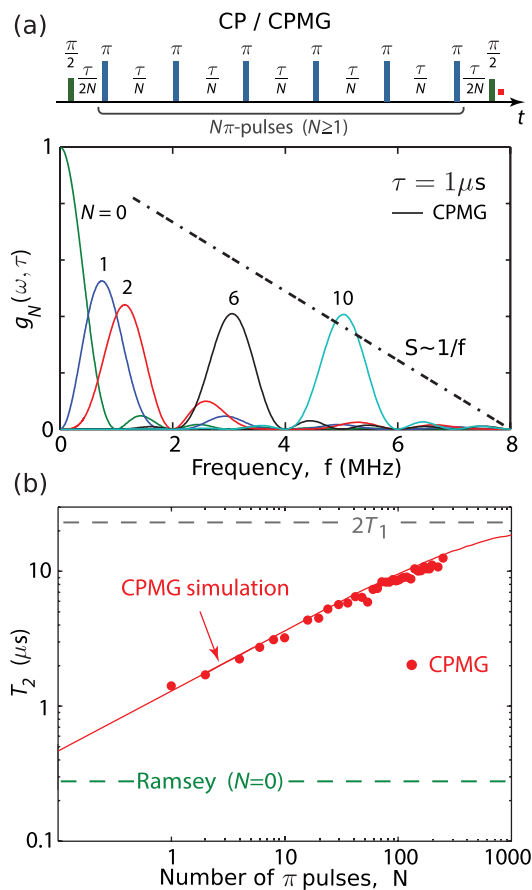


FIG. 7. Dynamical error suppression. (a) Carr-Purcell-Meiboom-Gill (CPMG) pulse sequence applies N equally spaced π pulses within an otherwise free-evolution time τ . Pulses in the time domain correspond to bandpass filters in the frequency domain (lower panel) which serve to shape the noise power spectrum seen by the qubit. The centroid of the bandpass filter shifts to higher frequencies as N is increased. For noise that decreases with frequency, such as $1/f$ noise, larger N corresponds to less integrated noise impinging on the qubit. (b) CPMG pulse sequence applied to a flux qubit biased at a point that is highly sensitive to $1/f$ flux noise. The Ramsey ($N=0$) time is approximately 300 ns, and the Hahn echo ($N=1$) time is approximately 1.5 μs . Increasing the number of CPMG pulses continues to increase the effective T_2 time toward the $2T_1$ limit. Adapted from Ref. 78.

where $\delta_j \in [0, 1]$ is the normalized position of the center of the j th π -pulse between the two $\pi/2$ -pulses, τ is the total free-induction time, and τ_π is the length of each π -pulse,^{151,154} yielding a total sequence length $\tau + N\tau_\pi$. As the number of pulses increases for a fixed τ , the filter function's peak shifts to higher frequencies, leading to a reduction in the net integrated noise for $1/f^\alpha$ -type noise spectra with $\alpha > 0$. Similarly, for a fixed N , the filter function will shift in frequency with τ . Additionally, for a fixed time separation $\tau' = \tau/N$ (valid for $N \geq 1$), the filter sharpens and asymptotically peaks at $\omega'/2\pi = 1/2\tau'$ as more pulses are added. $g_N(\omega, \tau)$ is thus called the “filter function,”^{78,150} and it depends on the pulse sequences being applied. From Eq. (57), the pure dephasing decay arises from a noise spectral density that is “shaped” or “filtered” by the sequence-specific filter function. By choosing the number of pulses, their rotation axes, and their arrangement in time, we can design filter functions that minimize the net noise power for a given noise spectral density within the experimental constraints of the experiment (e.g., pulse-modulation bandwidth of the electronics used to control the qubits).

To give a standard example, we compare the coherence integral for two cases: a Ramsey pulse sequence and a Hahn echo pulse sequence. Both sequences involve two $\pi/2$ pulses separated by a time τ , during which free evolution of the qubit occurs in the presence of low-frequency dephasing noise. The distinction is that the Hahn echo will place a single π pulse ($N=1$) in the middle of the free-evolution period, whereas the Ramsey does not use any additional pulses ($N=0$). The resulting filter functions are

$$g_0(\omega, \tau) = \text{sinc}^2 \frac{\omega\tau}{2}, \quad (59)$$

$$g_1(\omega, \tau) = \text{sinc}^2 \frac{\omega\tau}{4} \text{sinc}^2 \frac{\omega\tau}{4}, \quad (60)$$

where the subscripts $N=0$ and $N=1$ indicate the number of π -pulses applied for the Ramsey and Hahn echo experiments, respectively. The filter function $g_0(\omega, \tau)$ for the Ramsey case is a sinc-function centered at $\omega = 0$. For noise that decreases with frequency, e.g., $1/f$ flux noise in superconducting qubits, the Ramsey experiment windows through the noise in $S(\omega)$ where it has its highest value. This is the worst choice of filter function for $1/f$ noise. In contrast, the Hahn echo filter function has a centroid that is peaked at a higher frequency, away from $\omega = 0$. In fact, it has zero value at $\omega = 0$. For noise that decreases with frequency, such as $1/f$ noise, this is advantageous. This concept extends to larger numbers N of π pulses, and is called a Carr-Purcell-Meiboom-Gill (CPMG) sequence.^{153,154} In Fig. 7(b), the T_2 time of a qubit under the influence of strong dephasing noise is increased toward the $2T_1$ limit using a CPMG dynamical error-suppression pulse sequence with an increasing number of pulses, N . We refer the reader to Refs. 78, 155, and 156, where these experiments were performed with superconducting qubits.

3. Noise spectroscopy

The qubit is highly sensitive to its noisy environment, and this feature can be used to map out the noise power spectral density. In general, one can map the noise PSD during “free evolution”—periods of time for which no control is applied to the qubit, except for very short dynamical decoupling pulses—and during “driven evolution”—periods of time during which the control fields are applied to the qubit.

Both free-evolution and driven-evolution noise is important to characterize, as the noise PSD may differ for these two types of evolution, and both are utilized in the context of universal quantum computation. We refer the reader to Ref. 128 for a summary of noise spectroscopy during both types of evolution.

The Ramsey frequency itself is sensitive to longitudinal noise, and monitoring its fluctuations is one means to map out the noise spectral density over the submillihertz to ~ 100 Hz range.^{127,157}

At higher frequencies, the CPMG dynamical decoupling sequence can be used to create narrow-band filters that “sample” the noise at different frequencies as a function of the free-evolution time τ and the number of pulses N . This has been used to map out the noise PSD in the range 0.1–300 MHz.⁷⁸ One must be careful of the additional small peaks at higher-frequencies, which all contribute to the dephasing used to perform the noise spectroscopy.¹⁵⁸

In fact, using pulse envelopes such as Slepians¹⁵⁹—which are designed to have a concentrated frequency response—to perform noise spectroscopy is one means to reduce such errors.¹⁵¹

At even higher frequencies, measurements of T_1 can be used in conjunction with Fermi’s golden rule to map out the transverse noise spectrum above 1 GHz.^{62,78,160}

The aforementioned are all examples of noise spectroscopy during free evolution. Noise spectroscopy during driven evolution was also demonstrated using a “spin-locking” technique, where a strong drive along x or y axes defines a new qubit quantization axis, whose Rabi frequency is the new qubit frequency in the spin-locking frame. The spin-locking frame is then used to infer the noise spectrum while the qubit is continually subject to a driving field. For more information, we refer the reader to Ref. 128.

E. Engineering noise mitigation

Here, we briefly review a few examples of techniques that have been developed to reduce noise or reduce its impact on decoherence (sensitivity). We stress that improving gate fidelity is a comprehensive optimization task, one that is full of trade-offs. It is thus important to identify what the limiting factors are, what price we have to pay to diminish these limiting factors, and what advantage we can achieve until reaching a better trade-off. These all require an accurate understanding the limitations on the gate fidelity, the sources of decoherence, the properties of the noise, and how it affects the system performance.

1. Materials and fabrication improvements

Numerous efforts have been undertaken to reduce noise-induced defects due to materials and fabrication.^{40,161} In the case of charge noise, significant efforts have been made to reduce the number of defects, such as substrate cleaning,^{59,162} substrate annealing,¹⁶³ and trenching.^{41,61} In the case of flux noise, several groups have performed experiments to characterize the behavior and properties of magnetic-flux defects.^{133,164,165} More recently, a number of groups have tried optical surface treatments to remove these defects.¹⁴⁰

In the context of residual quasiparticles, it has been shown that adding quasiparticle traps to the circuit design can reduce the quasiparticle number, particularly in devices that create excess quasiparticles, such as classical digital logic or operation in the presence of thermal radiation.¹⁶⁶

2. Design improvements

Another strategy is to reduce qubit sensitivity to the noise by design. A qubit can only lose energy to defects if it couples to them. It has been demonstrated that altering the capacitor geometry to increase the electric-field mode volume reduces the electric field density in the thin dielectric regions that cause loss. This effectively reduces the “participation” of the defects and makes the qubits less sensitive to these noise sources.^{55,62,130}

In another example, the split transmons built using asymmetric junctions have lower sensitivity to flux noise than their symmetric counterparts at the expense of decreased frequency tunability.⁶⁹ This is a good trade-off to make, because generally one is interested in tuning the qubit frequency over a somewhat restricted range (typically around 1 GHz) about the qubit frequency. When such asymmetric transmons are used in a gate scheme such as the adiabatic CPHASE-gate,⁶⁵ (see Sec. IV F) the qubit is less sensitive to flux noise, has a lower dephasing rate, and this should improve the gate fidelity in general.

3. Dynamical error suppression

As introduced in Sec. III D 2, it is advantageous to leverage the $1/\omega$ distribution of flux noise, wherein a considerable amount of the noise power resides at low frequencies, and so the noise is “quasistatic.” The spin-echo technique,¹¹⁵ which disrupts the free evolution by a π -pulse, is extremely effective in mitigating the pure dephasing by refocusing the coherent phase dispersion due to low-frequency noise. The more advanced versions, such as the CPMG-sequence, use multiple π -pulses to interrupt the system more frequently, pushing the filter band to even higher frequencies—a technique known as “dynamical decoupling.”⁷⁸

Returning to excess quasiparticles, it has been shown that quasiparticles can be stochastically pumped away from the qubit region, resulting in longer, and more stable T_1 times.¹²⁰ Although the pumping technique uses a series of π -pulses, this technique differs from dynamical error suppression of coherent errors in that pulses are stochastically applied, and that it addresses incoherent errors (T_1).

4. Cryogenic engineering

In the case of photon shot-noise, in addition to applying dynamical decoupling techniques, there have been several recent studies aimed at reducing the thermal photon flux that reaches the device. This includes optimizing the attenuation of the cryogenic setup,^{106,144,167} remaking the cryogenic attenuators with more efficient heat sinking,¹⁴³ adding absorptive “black” material to absorb stray thermal photons,^{168,169} and adding additional cavity filters for thermalization.¹⁷⁰

IV. QUBIT CONTROL

In this section, we will introduce how superconducting qubits are manipulated to implement quantum algorithms. Since the transmon-like variety of superconducting qubits has so far been the most widely deployed modality for implementing quantum programs, the discussion throughout this section will be focused on modern techniques for transmons. Nonetheless, the techniques introduced here are applicable to all types of superconducting qubits.

We start with a brief review of the gates used in classical computing as well as quantum computing, and the concept of universality. Subsequently we discuss the most common technique of driving single qubit gates via a capacitive coupling of a microwave line, coupled to the qubit. We introduce the notion of “virtual Z gates” and “DRAG” pulsing. In the latter part of this section, we review some of the most common implementations of two-qubit gates in both tunable and fixed-frequency transmon qubits. The single-qubit and two-qubit operations together form the basis of many of the medium-scale superconducting quantum processors that exist today.

Throughout this section, we write everything in the computational basis $\{|0\rangle, |1\rangle\}$ where $|0\rangle$ is the $+1$ eigenstate of σ_z and $|1\rangle$ is the -1 eigenstate. We use capitalized serif-fonts to indicate the rotation operator of a qubit state, e.g., rotations around the x -axis by an angle θ is written as

$$X_\theta = R_X(\theta) = e^{-i\frac{\theta}{2}\sigma_x} = \cos(\theta/2)\mathbb{1} - i\sin(\theta/2)\sigma_x \quad (61)$$

and we use the shorthand notation “X” for a full π rotation about the x axis (and similarly for $Y := Y_\pi$ and $Z := Z_\pi$).

A. Boolean logic gates used in classical computers

Universal Boolean logic can be implemented on classical computers using a small set of single-bit and two-bit gates. Several common classical logic gates are shown in Fig. 8 along with their truth tables. In classical Boolean logic, bits can take on one of two values: state 0 or state 1. The state 0 represents logical FALSE, and state 1 represents logical TRUE.

Beyond the trivial “identity operation,” which simply passes a Boolean bit unchanged, the only other possible single-bit Boolean logic gate is the NOT gate. As shown in Fig. 8, the NOT gate flips the bit: $0 \rightarrow 1$ and $1 \rightarrow 0$. This gate is reversible, because it is trivial to determine the input bit value given the output bit values. As we will see, for two-bit gates, this is not the case.

There are several two-bit gates shown in Fig. 8. A two-bit gate takes two bits as inputs, and it passes as an output the result of a Boolean operation. One common example is the AND gate, for which the output is 1 if and only if both inputs are 1; otherwise, the output is 0. The AND gate, and the other two-bit gates shown in Fig. 8, are all examples of irreversible gates; that is, the input bit values cannot be inferred from the output values. For example, for the AND gate, an output of logical 1 uniquely identifies the input 11, but an output of 0 could be associated with 00, 01, or 10. Once the operation is performed, in general, it cannot be “undone” and the input information is lost. There are several variants of two-bit gates, including,

- AND and OR;
- NAND (a combination of NOT and AND) and NOR (a combination of NOT and OR);
- XOR (exclusive OR) and NXOR (NOT XOR).

The XOR gate is interesting, because it is a “parity” gate. That is, it returns a logical 0 if the two inputs are the same values (i.e., they have the same parity), and it returns a logical 1 if the two inputs have different values (i.e., different parity). Still, the XOR and NXOR gates are not reversible, because knowledge of the output does not allow one to uniquely identify the input bit values.


GATE		CIRCUIT SYMBOL	TRUTH TABLE										
NOT	The output is 1 when the input is 0 and 0 when the input is 1.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0</td><td>1</td></tr><tr><td>1</td><td>0</td></tr></table>	Input	Output	0	1	1	0				
Input	Output												
0	1												
1	0												
AND	The output is 1 only when both inputs are 1, otherwise the output is 0.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0 0</td><td>0</td></tr><tr><td>0 1</td><td>0</td></tr><tr><td>1 0</td><td>0</td></tr><tr><td>1 1</td><td>1</td></tr></table>	Input	Output	0 0	0	0 1	0	1 0	0	1 1	1
Input	Output												
0 0	0												
0 1	0												
1 0	0												
1 1	1												
OR	The output is 0 only when both inputs are 0, otherwise the output is 1.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0 0</td><td>0</td></tr><tr><td>0 1</td><td>1</td></tr><tr><td>1 0</td><td>1</td></tr><tr><td>1 1</td><td>1</td></tr></table>	Input	Output	0 0	0	0 1	1	1 0	1	1 1	1
Input	Output												
0 0	0												
0 1	1												
1 0	1												
1 1	1												
NAND	The output is 0 only when both inputs are 1, otherwise the output is 1.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0 0</td><td>1</td></tr><tr><td>0 1</td><td>1</td></tr><tr><td>1 0</td><td>1</td></tr><tr><td>1 1</td><td>0</td></tr></table>	Input	Output	0 0	1	0 1	1	1 0	1	1 1	0
Input	Output												
0 0	1												
0 1	1												
1 0	1												
1 1	0												
NOR	The output is 1 only when both inputs are 0, otherwise the output is 0.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0 0</td><td>1</td></tr><tr><td>0 1</td><td>0</td></tr><tr><td>1 0</td><td>0</td></tr><tr><td>1 1</td><td>0</td></tr></table>	Input	Output	0 0	1	0 1	0	1 0	0	1 1	0
Input	Output												
0 0	1												
0 1	0												
1 0	0												
1 1	0												
XOR	The output is 1 only when the two inputs have different value, otherwise the output is 0.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0 0</td><td>0</td></tr><tr><td>0 1</td><td>1</td></tr><tr><td>1 0</td><td>1</td></tr><tr><td>1 1</td><td>0</td></tr></table>	Input	Output	0 0	0	0 1	1	1 0	1	1 1	0
Input	Output												
0 0	0												
0 1	1												
1 0	1												
1 1	0												
XNOR	The output is 1 only when the two inputs have the same value, otherwise the output is 0.		<table><tr><th>Input</th><th>Output</th></tr><tr><td>0 0</td><td>1</td></tr><tr><td>0 1</td><td>0</td></tr><tr><td>1 0</td><td>0</td></tr><tr><td>1 1</td><td>1</td></tr></table>	Input	Output	0 0	1	0 1	0	1 0	0	1 1	1
Input	Output												
0 0	1												
0 1	0												
1 0	0												
1 1	1												

FIG. 8. Classical single-bit and two-bit Boolean logic gates. For each gate, the name, a short description, circuit representation, and input/output truth tables are presented. The numerical values in the truth table correspond to the classical bit values 0 and 1. Adapted from Ref. 171.

The concept of “universality” refers to the ability to perform any Boolean logic algorithm using a small set of single-bit and two-bit gates. A universal gate set can in principle transform any state to any other state in the state space represented by the classical bits. The set of gates which enable universal computation is not unique, and may be represented by a small set of gates. For example, the NOT gate and the AND gate together form a universal gate set. Similarly, the NAND gate itself is universal, as is the NOR gate. The efficiency with which one can implement arbitrary Boolean logic, of course, depends on the choice of the gate set.

B. Quantum logic gates used in quantum computers

Quantum logic can similarly be performed by a small set of single-qubit and two-qubit gates. Qubits can of course assume the classical states $|0\rangle$ and $|1\rangle$, at the north pole and south pole of the Bloch sphere, but they can also assume arbitrary superpositions $\alpha|0\rangle + \beta|1\rangle$, corresponding to any other position on the sphere.

Single-qubit operations translate an arbitrary quantum state from one point on the Bloch sphere to another point by rotating the Bloch vector (spin) a certain angle about a particular axis. As shown in Fig. 9, there are several single-qubit operations, each represented by a matrix that describes the quantum operation in the computational basis represented by the eigenvectors of the σ_z operator, i.e., $|0\rangle \equiv [1\ 0]^T$ and $|1\rangle \equiv [0\ 1]^T$.

For example, the “identity gate” performs no rotation on the state of the qubit. This is represented by a two-by-two identity matrix. The X-gate performs a π rotation about the x axis. Similarly, the Y-gate and Z-gate perform a π rotation about the y axis and z axis, respectively. The S-gate performs a $\pi/2$ rotation about the z axis, and the T-gate performs a rotation of $\pi/4$ about the z axis. The Hadamard gate H is also a common single-qubit gate that performs a π rotation about an axis diagonal in the x - z plane, see Fig. 9.

Two-qubit quantum-logic gates are generally “conditional” gates and take two qubits as inputs. Typically, the first qubit is the “control” qubit, and the second is the “target” qubit. A unitary operator is applied to the target qubit, dependent on the state of the control qubit. The two common examples shown in Fig. 10 are the controlled NOT (CNOT-gate) and controlled phase (CZ or CPHASE gate). The CNOT-gate flips the state of the target qubit conditioned on the control qubit being in-state $|1\rangle$. The CPHASE-gate applies a Z gate σ_z to the target qubit, conditioned on the control qubit being in-state $|1\rangle$. As we will show later, the *i*SWAP gate—another two-qubit gate—can be built from the CNOT-gate and single-qubit gates. The unitary operator of the CNOT gate can be written in a useful way, highlighting that it applies an X-gate (a σ_x operator) X depending on the state of the control qubit

$$U_{\text{CNOT}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 1 & 0 \end{bmatrix} = |0\rangle\langle 0| \otimes \mathbb{1} + |1\rangle\langle 1| \otimes \sigma_x, \quad (62)$$

and similarly for the CPHASE gate

$$U_{\text{CPHASE}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & -1 \end{bmatrix} = |0\rangle\langle 0| \otimes \mathbb{1} + |1\rangle\langle 1| \otimes \sigma_z. \quad (63)$$

Comparing the last equality above with the unitary for the CNOT [Eq. (62)], it is clear that the two gates are closely related. Indeed, a CNOT can be generated from a CPHASE by applying two Hadamard gates

$$U_{\text{CNOT}} = (\mathbb{1} \otimes H) U_{\text{CPHASE}} (\mathbb{1} \otimes H), \quad (64)$$

since $HZH = X$. Due to the form of Eq. (63). The CPHASE gate is also denoted the CZ gate, since it implements a controlled Z gate (a controlled- σ_z operation), by analogy with CNOT (a controlled application of the X-gate, i.e., the σ_x operation). Inspection of the definition of CPHASE in Fig. 10 makes no distinction between which qubit acts as the target and which as the control and, consequently, the circuit-diagram is sometimes drawn in a symmetric fashion

$$\text{CPHASE} = \begin{array}{c} \text{---} \bullet \text{---} \\ | \\ \text{---} \bullet \text{---} \end{array} \quad (65)$$

The CNOT (with qubit 1 as control and qubit 2 as target) can be realized in terms of the CPHASE operation and single-qubit Hadamard gates,

$$\text{CNOT} = \begin{array}{c} \text{---} \bullet \text{---} \\ | \\ \text{---} \bullet \text{---} \end{array} \begin{array}{c} \text{---} \text{H} \text{---} \\ | \\ \text{---} \text{H} \text{---} \end{array} \quad (66)$$

Some two-qubit gates such as CNOT and CPHASE are also called “entangling gates,” because they can take product states as inputs and output entangled states. They are thus an indispensable component of a universal gate set for quantum logic. For example, consider two qubits A and B in the following state:

$$|\psi\rangle = \frac{1}{\sqrt{2}}(|0\rangle + |1\rangle)_A |0\rangle_B. \quad (67)$$

If we perform a CNOT gate, U_{CNOT} , on this state, with qubit A the control qubit, and qubit B the target qubit, the resulting state is (see the truth table in Fig. 10)

$$U_{\text{CNOT}}|\psi\rangle = \frac{1}{\sqrt{2}}(|0\rangle_A |0\rangle_B + |1\rangle_A |1\rangle_B) \neq (\dots)_A (\dots)_B, \quad (68)$$

which is a state that cannot be factored into an isolated qubit-A component and a qubit-B component. This is one of the two-qubit entangled “Bell states,” a manifestly quantum mechanical state.

A universal set of single-qubit and two-qubit gates is sufficient to implement an arbitrary quantum logic. This means that this gate set can in principle reach “any” state in the multiqubit state-space. How efficiently this is done depends on the choice of quantum gates that comprise the gate set. We also note that each of the single-qubit and two-qubit gates is reversible, that is, given the output state, one can uniquely determine the input state. As we discuss further, this distinction between classical and quantum gates arises, because quantum gates are based on “unitary” operations U . If a unitary operation U is a particular gate applied to a qubit, then its Hermitian conjugate $U^\dagger$ can be applied to recover the original state, since $U^\dagger U = I$ resolves an identity operation.

C. Comparing classical and quantum gates

The gate-sequences used to represent quantum algorithms have certain similarities to those used in classical computing, with a few striking differences. As an example, we consider first the classical NOT gate (discussed previously), and the related quantum circuit version, shown in Fig. 11.

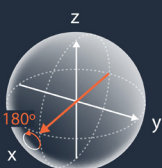
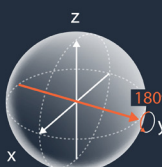
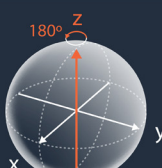
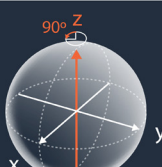
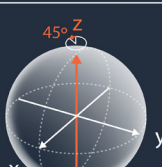
GATE	CIRCUIT REPRESENTATION	MATRIX REPRESENTATION	TRUTH TABLE	BLOCH SPHERE						
I Identity-gate: no rotation is performed.		$I = \begin{pmatrix} 1 & 0 \\ 0 & 1 \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$0\rangle$</td></tr><tr><td>$1\rangle$</td><td>$1\rangle$</td></tr></table>	Input	Output	$ 0\rangle$	$ 0\rangle$	$ 1\rangle$	$ 1\rangle$	
Input	Output									
$ 0\rangle$	$ 0\rangle$									
$ 1\rangle$	$ 1\rangle$									
X gate: rotates the qubit state by π radians (180°) about the x-axis.		$X = \begin{pmatrix} 0 & 1 \\ 1 & 0 \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$1\rangle$</td></tr><tr><td>$1\rangle$</td><td>$0\rangle$</td></tr></table>	Input	Output	$ 0\rangle$	$ 1\rangle$	$ 1\rangle$	$ 0\rangle$	
Input	Output									
$ 0\rangle$	$ 1\rangle$									
$ 1\rangle$	$ 0\rangle$									
Y gate: rotates the qubit state by π radians (180°) about the y-axis.		$Y = \begin{pmatrix} 0 & -i \\ i & 0 \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$i 1\rangle$</td></tr><tr><td>$1\rangle$</td><td>$-i 0\rangle$</td></tr></table>	Input	Output	$ 0\rangle$	$i 1\rangle$	$ 1\rangle$	$-i 0\rangle$	
Input	Output									
$ 0\rangle$	$i 1\rangle$									
$ 1\rangle$	$-i 0\rangle$									
Z gate: rotates the qubit state by π radians (180°) about the z-axis.		$Z = \begin{pmatrix} 1 & 0 \\ 0 & -1 \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$0\rangle$</td></tr><tr><td>$1\rangle$</td><td>$- 1\rangle$</td></tr></table>	Input	Output	$ 0\rangle$	$ 0\rangle$	$ 1\rangle$	$- 1\rangle$	
Input	Output									
$ 0\rangle$	$ 0\rangle$									
$ 1\rangle$	$- 1\rangle$									
S gate: rotates the qubit state by $\frac{\pi}{2}$ radians (90°) about the z-axis.		$S = \begin{pmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{2}} \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$0\rangle$</td></tr><tr><td>$1\rangle$</td><td>$e^{i\frac{\pi}{2}} 1\rangle$</td></tr></table>	Input	Output	$ 0\rangle$	$ 0\rangle$	$ 1\rangle$	$e^{i\frac{\pi}{2}} 1\rangle$	
Input	Output									
$ 0\rangle$	$ 0\rangle$									
$ 1\rangle$	$e^{i\frac{\pi}{2}} 1\rangle$									
T gate: rotates the qubit state by $\frac{\pi}{4}$ radians (45°) about the z-axis.		$T = \begin{pmatrix} 1 & 0 \\ 0 & e^{i\frac{\pi}{4}} \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$0\rangle$</td></tr><tr><td>$1\rangle$</td><td>$e^{i\frac{\pi}{4}} 1\rangle$</td></tr></table>	Input	Output	$ 0\rangle$	$ 0\rangle$	$ 1\rangle$	$e^{i\frac{\pi}{4}} 1\rangle$	
Input	Output									
$ 0\rangle$	$ 0\rangle$									
$ 1\rangle$	$e^{i\frac{\pi}{4}} 1\rangle$									
H gate: rotates the qubit state by π radians (180°) about an axis diagonal in the x-z plane. This is equivalent to an X-gate followed by a $\frac{\pi}{2}$ rotation about the y-axis.		$H = \frac{1}{\sqrt{2}} \begin{pmatrix} 1 & 1 \\ 1 & -1 \end{pmatrix}$	<table><tr><th>Input</th><th>Output</th></tr><tr><td>$0\rangle$</td><td>$\frac{ 0\rangle + 1\rangle}{\sqrt{2}}$</td></tr><tr><td>$1\rangle$</td><td>$\frac{ 0\rangle - 1\rangle}{\sqrt{2}}$</td></tr></table>	Input	Output	$ 0\rangle$	$\frac{ 0\rangle + 1\rangle}{\sqrt{2}}$	$ 1\rangle$	$\frac{ 0\rangle - 1\rangle}{\sqrt{2}}$	
Input	Output									
$ 0\rangle$	$\frac{ 0\rangle + 1\rangle}{\sqrt{2}}$									
$ 1\rangle$	$\frac{ 0\rangle - 1\rangle}{\sqrt{2}}$									

FIG. 9. Quantum single-qubit gates. For each gate, the name, a short description, circuit representation, matrix representation, input/output truth tables, and Bloch sphere representation are presented. Matrices are defined in the basis spanned by the state vectors $|0\rangle \equiv [1\ 0]^T$ and $|1\rangle \equiv [0\ 1]^T$. The numerical values in the truth table correspond to the quantum states $|0\rangle$ and $|1\rangle$. Adapted from Ref. 171.


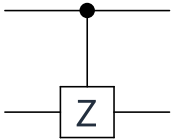
GATE	CIRCUIT REPRESENTATION	MATRIX REPRESENTATION	TRUTH TABLE										
Controlled-NOT gate: apply an X-gate to the target qubit if the control qubit is in state $ 1\rangle$		$\text{CNOT} = \begin{pmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 1 & 0 \end{pmatrix}$	<table><thead><tr><th>Input</th><th>Output</th></tr></thead><tbody><tr><td>$00\rangle$</td><td>$00\rangle$</td></tr><tr><td>$01\rangle$</td><td>$01\rangle$</td></tr><tr><td>$10\rangle$</td><td>$11\rangle$</td></tr><tr><td>$11\rangle$</td><td>$10\rangle$</td></tr></tbody></table>	Input	Output	$ 00\rangle$	$ 00\rangle$	$ 01\rangle$	$ 01\rangle$	$ 10\rangle$	$ 11\rangle$	$ 11\rangle$	$ 10\rangle$
Input	Output												
$ 00\rangle$	$ 00\rangle$												
$ 01\rangle$	$ 01\rangle$												
$ 10\rangle$	$ 11\rangle$												
$ 11\rangle$	$ 10\rangle$												
Controlled-phase gate: apply a Z-gate to the target qubit if the control qubit is in state $ 1\rangle$		$\text{CPHASE} = \begin{pmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & -1 \end{pmatrix}$	<table><thead><tr><th>Input</th><th>Output</th></tr></thead><tbody><tr><td>$00\rangle$</td><td>$00\rangle$</td></tr><tr><td>$01\rangle$</td><td>$01\rangle$</td></tr><tr><td>$10\rangle$</td><td>$10\rangle$</td></tr><tr><td>$11\rangle$</td><td>$- 11\rangle$</td></tr></tbody></table>	Input	Output	$ 00\rangle$	$ 00\rangle$	$ 01\rangle$	$ 01\rangle$	$ 10\rangle$	$ 10\rangle$	$ 11\rangle$	$- 11\rangle$
Input	Output												
$ 00\rangle$	$ 00\rangle$												
$ 01\rangle$	$ 01\rangle$												
$ 10\rangle$	$ 10\rangle$												
$ 11\rangle$	$- 11\rangle$												

FIG. 10. Quantum two-qubit gates: the controlled NOT (CNOT) gate and the controlled phase (CPHASE or CZ). For each gate, the name, a short description, circuit representation, matrix representation, and input/output truth tables are presented. Matrices are defined in the basis spanned by the two-qubit state vectors $|00\rangle \equiv [1\ 0\ 0\ 0]^T$, $|01\rangle \equiv [0\ 1\ 0\ 0]^T$, $|10\rangle \equiv [0\ 0\ 1\ 0]^T$, and $|11\rangle \equiv [0\ 0\ 0\ 1]^T$, where the first qubit is the control qubit, and the second qubit is the target qubit. The CNOT gate flips the state of the target qubit conditioned on the control qubit being in-state $|1\rangle$. The CPHASE gate applies a Z gate to the target qubit conditioned on the control qubit being in-state $|1\rangle$. Note that the CPHASE gate is symmetric with respect to control and target qubit. Adapted from Ref. 171.

While the classic bit-flip gate inverts any input state, the quantum bit-flip does not in general produce the antipodal state (when viewed on the Bloch sphere), but rather exchange the prefactors of the wavefunction written in the computational basis. The X operator is sometimes referred to as “the quantum NOT” (or “quantum bit-flip”), but we note that X only acts similar to the classical NOT gate in the case of classical data stored in the quantum bit, i.e., $X|g\rangle = |\bar{g}\rangle$ for $g \in \{0, 1\}$.

As briefly mentioned in Sec. IV B, “all” quantum gates are reversible, due to the underlying unitary nature of the operators implementing the logical operations. Certain other processes used in quantum information processing, however, are irreversible, namely, measurements (see Sec. V for detailed discussion) and energy loss to the environment (if the resulting state of the environment is not known). Here, we will not consider how these processes are modeled, but refer

the interested reader to, e.g., Ref. 172, and will only consider unitary control operations throughout the rest of this section. Finally, we note that quantum circuits are written left-to-right (in order of application), while the calculation of the result of a gate-sequences, e.g., the circuit

$$|\psi_{\text{in}}\rangle \xrightarrow{U_0} \xrightarrow{U_1} \cdots \xrightarrow{U_n} |\psi_{\text{out}}\rangle \quad (69)$$

is performed right-to-left, i.e.,

$$|\psi_{\text{out}}\rangle = U_n \cdots U_1 U_0 |\psi_{\text{in}}\rangle. \quad (70)$$

As discussed in Sec. IV A, the NOR and NAND gates are each individually universal gates for classical computing. Since both of these gates have no direct quantum analog (because they are not reversible), it is natural to ask which gates “are” needed to build a universal quantum computer. It turns out that the ability to rotate about arbitrary axes on the Bloch-sphere (i.e., a complete single-qubit gate set), supplemented with any entangling 2-qubit operation will suffice for universality.^{172,173} By using what is known as the “Krauss-Cirac decomposition,” any two-qubit gate can be decomposed into a series of CNOT operations.^{172,174}

1. Gate sets and gate synthesis

A common universal quantum gate set is

$$\mathcal{G}_0 = \{X_\theta, Y_\theta, Z_\theta, \text{Ph}_\theta, \text{CNOT}\}, \quad (71)$$

where $\text{Ph}_\theta = e^{i\theta} \mathbb{1}$ applies an overall phase θ to a single qubit. For completeness we mention another universal gate set which is of particular interest from a theoretical perspective, namely,

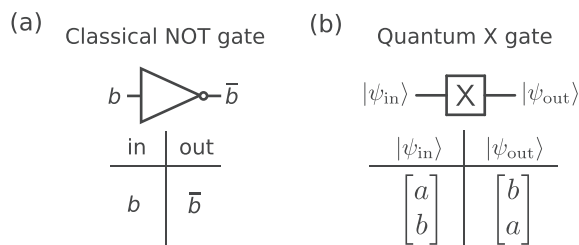


FIG. 11. Comparison of the classical inverter (NOT) gate and quantum bit flip (X) gate. (a) The classical NOT gate that inverts the state of a classical bit. (b) The quantum X gate, which flips the amplitudes of the two components of a quantum bit.

$$\mathcal{G}_1 = \{H, S, T, \text{CNOT}\}. \quad (72)$$

As a technical aside, we mention that the restriction to a discrete gate set still gives rise to universality. This fact relies on using the so-called Solovay-Kitaev^{175,176} theorem, which (roughly) states that any other single-qubit gate can be approximated to an error ϵ using only $\mathcal{O}(\log^c(1/\epsilon))$ (where $c > 0$) single-qubit gates from $\mathcal{G}_1$. The gate-set $\mathcal{G}_1$ is typically referred to as the “Clifford + T ” set, where H , S and CNOT are all Clifford gates.

Each quantum computing architecture will have certain gates that are simpler to implement at the hardware level than others (sometimes referred to as “native” gates of the architecture). These are typically the gates for which the Hamiltonian governing the gate-implementation gives rise to a unitary propagator that corresponds to the gate itself. We will show several examples of this in Secs. IV E, IV F, and IV G. Regardless of which gates are natively available, as long as one has a complete gate set, one can use the Solovay-Kitaev theorem to synthesize any other set efficiently. In general one wants to keep the overall number of time steps in which gates are applied (denoted the “depth” of a circuit) as low as possible, and one wants to use as many of the native gates as possible, to reduce the amount of time spent for the synthesis. Moreover, running a quantum algorithm also depends on the qubit connectivity of the device. The process of designing a quantum gate sequence that efficiently implements a specific algorithm, while taking into account the considerations outlined above is known as “gate synthesis” and “gate compilation,” respectively. A full discussion of this large research effort is outside the scope of this review, but the interested reader may consult, e.g., Refs. 177–179 and references therein as a starting point. As a concrete (and trivial) example of how gate identities can be used, in Eq. (73) we illustrate how the Hadamard gate from $\mathcal{G}_1$ can be generated by two single-qubit gates (from $\mathcal{G}_0$) and an overall phase gate

$$H = \text{Ph}_{\frac{\pi}{2}} Y_{\frac{\pi}{2}} Z_{\pi} = i \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & -1 \\ 1 & 1 \end{bmatrix} \begin{bmatrix} -i & 0 \\ 0 & i \end{bmatrix} = \frac{1}{\sqrt{2}} \begin{bmatrix} 1 & 1 \\ 1 & -1 \end{bmatrix}. \quad (73)$$

As we show in Sec. IV D 1, the gates X_{θ} , Y_{θ} and Z_{θ} are all natively available in a superconducting quantum processor.

We now address the question of how single qubit rotations and two-qubit operations are implemented in transmon-based superconducting quantum processors.

2. Addressing superconducting qubits

The modes of addressing transmonlike superconducting qubits can roughly be split into two main categories: (i) Capacitive coupling between a resonator (or a feedline) and the superconducting qubit dipole-field allows for microwave control to implement single-qubit rotations (see Sec. IV D) as well as certain two-qubit gates (see Secs. IV G and IV G 4). (ii) For flux-tunable qubits, the local magnetic fields can be used to tune the frequency of individual qubits. This allows the implementation of z -axis single-qubit rotation as well as multiple two-qubit gates (see Secs. IV E, IV F, and IV H).

D. Single-qubit gates

In this section, we will review the steps necessary to demonstrate that capacitive coupling of microwaves to a superconducting circuit can be used to drive single-qubit gates. To this end we consider

coupling a superconducting qubit to a microwave source (sometimes referred to as a “qubit drive”) as shown in Fig. 12(a). A full circuit analysis of the circuit in Fig. 12(a) is beyond the scope of this review, so here we settle for highlighting the steps that elucidate the physics of the qubit/drive coupling. The interested reader may consult a number of lectures notes and pertinent theses (e.g., Refs. 44, 157, and 180–182). Here we follow Ref. 157.

1. Capacitive coupling for X , Y control

We start by modeling the qubit as a harmonic oscillator, for which the (classical) circuit Hamiltonian can be calculated by circuit quantization techniques, starting from Kirchoffs laws, and is given by¹⁵⁷

$$H = \frac{\tilde{Q}(t)^2}{2C_{\Sigma}} + \frac{\Phi^2}{2L} + \frac{C_d}{C_{\Sigma}} V_d(t) \tilde{Q}, \quad (74)$$

where $C_{\Sigma} = C + C_d$ is the total capacitance to the ground and $\tilde{Q} = C_{\Sigma} \dot{\Phi} - C_d V_d(t)$ is a renormalized charge variable for the circuit. We can now promote the flux and charge variables to quantum operators and assume weak coupling to the drive-line, so that $\tilde{Q} \approx \hat{Q}$, and arrive at

$$H = H_{LC} + \frac{C_d}{C_{\Sigma}} V_d(t) \hat{Q}, \quad (75)$$

where $H_{LC} = \hat{Q}^2/(2C) + \hat{\Phi}^2/(2L)$ and we have kept only terms that couple to the dynamic variables. Similar to the momentum operator for a harmonic oscillator in (x, p) -space, we can express the charge variable in terms of raising and lowering operators, as done in Sec. II

$$\hat{Q} = -iQ_{\text{zpf}}(a - a^{\dagger}), \quad (76)$$

where $Q_{\text{zpf}} = \sqrt{\hbar/2Z}$ is the zero-point charge fluctuations and $Z = \sqrt{L/C}$ is the impedance of the circuit to ground. Thus, the LC oscillator capacitively coupled to a drive line can be written as

$$H = \omega \left(a^{\dagger} a + \frac{1}{2} \right) - \frac{C_d}{C_{\Sigma}} V_d(t) iQ_{\text{zpf}}(a - a^{\dagger}). \quad (77)$$

Finally, by truncating to the lowest transition of the oscillator, we can make the replacement $a \rightarrow \sigma^-$ and $a^{\dagger} \rightarrow \sigma^+$ throughout and arrive at⁴²⁹

$$H = \underbrace{-\frac{\omega_q}{2} \sigma_z}_{H_0} + \underbrace{\Omega V_d(t) \sigma_y}_{H_d}, \quad (78)$$

where $\Omega = (C_d/C_{\Sigma})Q_{\text{zpf}}$ and $\omega_q = (E_1 - E_0)/\hbar$.

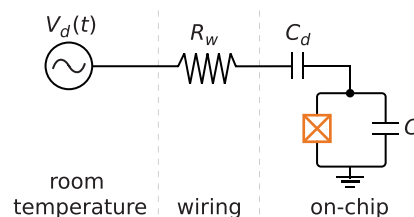


FIG. 12. Circuit diagram of capacitive coupling of a microwave drive line [characterized by a time-dependent voltage $V_d(t)$] to a generic transmonlike superconducting qubit.

To elucidate the role of the drive, we move into a frame rotating with the qubit at frequency ω_q (also denoted “the rotating frame” or the “the interaction frame”). To see the usefulness of this rotating frame, consider a state $|\psi_0\rangle = (1 \ 1)^T/\sqrt{2}$. By the time-dependent Schrödinger equation this state evolves according to

$$|\psi_0(t)\rangle = U_{H_0}|\psi_0\rangle = \frac{1}{\sqrt{2}} \begin{pmatrix} e^{i\omega_q t/2} \\ e^{-i\omega_q t/2} \end{pmatrix}, \quad (79)$$

where U_{H_0} is the propagator corresponding to H_0 . By calculating, e.g., $\langle\psi_0|\sigma_x|\psi_0\rangle = \cos(\omega_q t)$, it is evident that the phase is winding with a frequency of ω_q due to the σ_z term. By going into a frame rotating with the qubit at frequency ω_q , the action of the drive can be more clearly appreciated. To this end, we define $U_{\text{rf}} = e^{iH_0 t} = U_{H_0}^\dagger$ and the new state in the rotating frame is $|\psi_{\text{rf}}(t)\rangle = U_{\text{rf}}|\psi_0\rangle$. The time-evolution in this new frame is again found from the Schrödinger equation (using the shorthand $\partial_t = \partial/\partial t$)

$$i\partial_t|\psi_{\text{rf}}(t)\rangle = i(\partial_t U_{\text{rf}})|\psi_0\rangle + iU_{\text{rf}}(\partial_t|\psi_0\rangle), \quad (80)$$

$$= i\dot{U}_{\text{rf}}U_{\text{rf}}^\dagger|\psi_{\text{rf}}\rangle + U_{\text{rf}}H_0|\psi_0\rangle, \quad (81)$$

$$= \underbrace{(i\dot{U}_{\text{rf}}U_{\text{rf}}^\dagger + U_{\text{rf}}H_0U_{\text{rf}}^\dagger)}_{\tilde{H}_0}|\psi_{\text{rf}}\rangle. \quad (82)$$

We can think of the term $\tilde{H}_0$ in the parentheses in Eq. (82) as the form of H_0 in the rotating frame. Simple insertion shows that $\tilde{H}_0 = 0$ as expected (the rotating frame should take care of the time-dependence). However, one could also think of the term in brackets in Eq. (82) as a prescription for calculating the form of any Hamiltonian in the rotating frame given by U_{rf} by replacing H_0 with some other H . In general, we will not find $\tilde{H} = 0$.

Returning to Eq. (78), the form of H_d in the rotating frame is found to be

$$\tilde{H}_d = \Omega V_d(t)(\cos(\omega_q t)\sigma_y - \sin(\omega_q t)\sigma_x). \quad (83)$$

We can in general assume that the time-dependent part of the voltage ($V_d(t) = V_0 v(t)$) has the generic form

$$v(t) = s(t) \sin(\omega_d t + \phi), \quad (84)$$

$$= s(t)(\cos(\phi) \sin(\omega_d t) + \sin(\phi) \cos(\omega_d t)), \quad (85)$$

where $s(t)$ is a dimensionless envelope function, so that the amplitude of the drive is set by $V_0 s(t)$. Adopting the definitions

$$I = \cos(\phi) \text{ (the ‘in – phase’ component)}, \quad (86)$$

$$Q = \sin(\phi) \text{ (the ‘out – of – phase’ component)}, \quad (87)$$

the driving Hamiltonian in the rotating frame takes the form

$$\begin{aligned} \tilde{H}_d &= \Omega V_0 s(t)(I \sin(\omega_d t) - Q \cos(\omega_d t)) \\ &\times (\cos(\omega_q t)\sigma_y - \sin(\omega_q t)\sigma_x). \end{aligned} \quad (88)$$

Performing the multiplication and dropping fast rotating terms that will average to zero (i.e., terms with $\omega_q + \omega_d$), known as the rotating wave approximation (RWA), we are left with

$$\begin{aligned} \tilde{H}_d &= \frac{1}{2} \Omega V_0 s(t)[(-I \cos(\delta\omega t) + Q \sin(\delta\omega t))\sigma_x \\ &+ (I \sin(\delta\omega t) - Q \cos(\delta\omega t))\sigma_y], \end{aligned} \quad (89)$$

where $\delta\omega = \omega_q - \omega_d$. Finally, by reusing the definitions from Eq. (85), the driving Hamiltonian in the rotating frame using the RWA can be written as

$$\tilde{H}_d = -\frac{\Omega}{2} V_0 s(t) \begin{pmatrix} 0 & e^{i(\delta\omega t + \phi)} \\ e^{-i(\delta\omega t + \phi)} & 0 \end{pmatrix}. \quad (90)$$

Equation (90) is a powerful tool for understanding single-qubit gates in superconducting qubits. As a concrete example, assume that we apply a pulse at the qubit frequency, so that $\delta\omega = 0$, then

$$\tilde{H}_d = -\frac{\Omega}{2} V_0 s(t)(I\sigma_x + Q\sigma_y), \quad (91)$$

showing that an “in-phase” pulse ($\phi = 0$, i.e., the I -component) corresponds to rotations around the x -axis, while an out-of-phase pulse ($\phi = \pi/2$, i.e., the Q -component), corresponds to rotations about the y -axis. As a concrete example of an in-phase pulse, writing out the unitary operator yields

$$U_{\text{rf},d}^{\phi=0}(t) = \exp\left(\left[\frac{i}{2}\Omega V_0 \int_0^t s(t')dt'\right]\sigma_x\right), \quad (92)$$

which depends only on the macroscopic design parameters of the circuit as well as the envelope of the baseband pulse $s(t)$ and amplitude V_0 , which can both be controlled using arbitrary waveform generators (AWGs). Equation (92) is known as “Rabi driving” and can serve as a useful tool for engineering the circuit parameters needed for efficient gate operation (subject to the available output voltage V_0). To see this, we define the shorthand

$$\Theta(t) = -\Omega V_0 \int_0^t s(t')dt', \quad (93)$$

which is the angle by which a state is rotated given the capacitive couplings, the impedance of the circuit, the magnitude V_0 , and the waveform envelope, $s(t)$. This means that to implement a π -pulse on the x -axis, one would solve the equation $\Theta(t) = \pi$ and output the signal in-phase with the qubit drive. In this language, a sequence of pulses [see Fig. 13(a)] $\Theta_k, \Theta_{k-1}, \dots, \Theta_0$ is converted to a sequence of gates operating on a qubit as

$$U_k \cdots U_1 U_0 = \mathcal{T} \prod_{n=0}^k e^{[-\frac{i}{2}\Theta_n(t)(I_n\sigma_x + Q_n\sigma_y)]}, \quad (94)$$

where $\mathcal{T}$ is an operator that ensures the pulses are generated in the time-ordered sequence corresponding to $U_k \cdots U_1 U_0$.

In Fig. 13, we outline the typical in-phase and quadrature (IQ) modulation setup used to generate the pulses used in Eq. (94). Figure 13(a) shows how a pulse at frequency ω_d is generated using a low phase-noise microwave generator [typically denoted “the local oscillator (LO)”], while the pulse is shaped by combining the LO signal in an IQ mixer with pulses generated in an AWG. To allow for frequency multiplexing, the AWG signal will typically be generated with a low-frequency component, ω_{AWG} , and the LO signal will be offset, so that $\omega_{\text{LO}} + \omega_{\text{AWG}} = \omega_d$. By mixing in more than one frequency $\omega_{\text{AWG}1}, \omega_{\text{AWG}2}, \dots$ it is possible to address multiple qubits (or readout resonators) simultaneously, via the superposition of individual drives.

The I (Q) input of the IQ mixer will multiply the baseband signal to the in-phase (out-of-phase) component of the LO. In Fig. 13(b), we schematically show the comparison between XY gates in a quantum

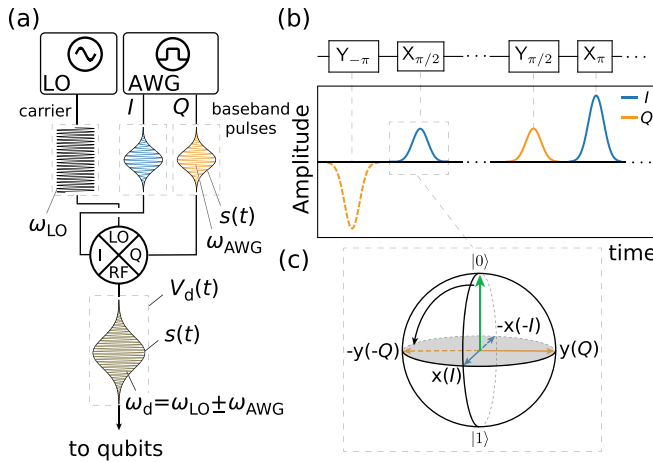


FIG. 13. (a) Schematic of a typical qubit drive setup. A microwave source supplies a high-frequency signal (ω_{LO}), while an arbitrary waveform generator (AWG) supplies a pulse-envelope $s(t)$, sometimes with a low frequency component, ω_{AWG} , generated by the AWG. The IQ-mixer combines the two signals to generate a shaped waveform $V_d(t)$ with a frequency $\omega_d = \omega_{LO} \pm \omega_{AWG}$, typically resonant with the qubit. (b) Example of how a gate sequence is translated into a waveform generated by the AWG. Colors indicate the I and Q components. (c) The action of a $X_{\pi/2}$ pulse on a $|0\rangle$ state to produce the $|-i\rangle = \frac{1}{\sqrt{2}}(|0\rangle - i|1\rangle)$ state.

circuit and the corresponding waveforms generated in the AWG (omitting for clarity the frequency ω_{AWG} component). The inset in Fig. 13(b) shows an example of a gate on the Bloch sphere, with the indication of (I, Q) axes. More sophisticated and compact approaches exist to reduce the hardware needed for XY qubit control, relative to the setup shown in Fig. 13, see, e.g., Refs. 183–185.

2. Virtual Z gate

As we saw in Sec. IV D, the distinction between x - and y -rotations was merely a choice of phase on the microwave signals, and the angle to be rotated is given by $\Theta(t)$, both of which are generated using an AWG. Since the choice of phase ϕ has an arbitrary starting point, we could consider $\phi \rightarrow \phi + \pi/2$. This would lead to $I \rightarrow Q$ and $Q \rightarrow -I$. Therefore, changing the phase effectively changes rotations around x to rotations around y (and vice-versa, with a change of sign). This is reminiscent of the result of applying a Z_π rotation to x - and y -rotations, where $Z_\pi X_\pi = iY_\pi$ and $Z_\pi Y_\pi = -iX_\pi$. This analogy between shifting a phase of an AWG-generated signal and applying Z rotations can be utilized to implement “virtual” Z gates.¹⁸⁶ As shown by McKay *et al.*, this intuition can be formalized via the following example: consider the case of applying a pulse with an angle θ on the I channel (i.e., a X_θ) followed by another θ pulse on the I channel, but with a phase ϕ_0 relative to the first pulse (denoted $X_\theta^{(\phi_0)}$), where X indicates we still use the I channel, but the rotation axis is now an angle ϕ_0 away from the x -axis). Using Eq. (94) corresponds to a pulse sequence

$$X_\theta^{(\phi_0)} X_\theta = e^{-i\frac{\theta}{2}(\cos(\phi_0)\sigma_x + \sin(\phi_0)\sigma_y)} X_\theta \quad (95)$$

$$= Z_{-\phi_0} X_\theta Z_{\phi_0} X_\theta, \quad (96)$$

from which we see that the effect of the offset phase ϕ_0 is to apply Z_{ϕ_0} . The equality above can be verified with a little trigonometric footwork.

The final $Z_{-\phi_0}$ is due to the rotation being in the frame of reference of the qubit. However, since the readout is along the z -axis (see Sec. V), a final phase rotation about z will not change the measurement outcome. Thus, if one wants to implement the gate sequence

$$\cdots - U_i - Z_{\theta_0} - U_{i+1} - Z_{\theta_1} - U_{i+2} - \cdots \quad (97)$$

where U_i 's are arbitrary gates, this can be done by revising the gate sequence (in the control software for the AWG) and changing the phase of subsequent pulses

$$\cdots - U_i - U_{i+1}^{(\theta_0)} - U_{i+2}^{(\theta_0+\theta_1)} - \cdots \quad (98)$$

which reduces the number of overall gates. Moreover, the virtual- Z gates are “perfect,” in the sense that no additional pulses are required, and the gate takes “zero time,” and thus the gate fidelity is nominally unity. As we show in Secs. IV E and IV F, operation of two-qubit gates can incur additional single-qubit phases. Using the virtual- Z strategy, these phases can be canceled out, leaving a pure two-qubit interaction.

Finally, we mention one more salient feature of the virtual- Z gates. As shown in Ref. 63, any single-qubit operation (up to a global phase) can be written as

$$U(\theta, \phi, \lambda) = Z_{\phi-\frac{\pi}{2}} X_{\frac{\lambda}{2}} Z_{\pi-\theta} X_{\frac{\lambda}{2}} Z_{\lambda-\frac{\pi}{2}}, \quad (99)$$

for appropriate choice of angles θ, ϕ, λ . This means that access to a single physical $X_{\frac{\lambda}{2}}$ combined with the virtual- Z gives access to a complete single qubit gate set! An explicit example of Eq. (99) in action is the Hadamard gate, which can be written as $H = Z_{\frac{\pi}{2}} X_{\frac{\pi}{2}} Z_{\frac{\pi}{2}}$, but since the Z 's can be virtual, it is possible to implement Hadamards as an effective single pulse operation in superconducting qubits.

3. The DRAG scheme

In going from Eq. (77) to Eq. (78), we assumed we could ignore the higher levels of the qubit. However, for weakly anharmonic qubits, such as the transmon (see Sec. II), this may not be a justified assumption, since $\omega_q^{1 \rightarrow 2}$ only differs from $\omega_q (\equiv \omega_q^{0 \rightarrow 1})$ by the anharmonicity, $\alpha = \omega_q^{1 \rightarrow 2} - \omega_q$, which is negative and typically around 200 to 300 MHz. This situation is sketched in Figs. 14(a)–14(c), where we illustrate how Gaussian pulses with standard deviations $\sigma = \{1, 2, 5\}$ ns have spectral content that leads to nonzero overlaps with the $\omega_q^{1 \rightarrow 2} = \omega_q - |\alpha|$ frequency. This leads to two deleterious effects: (1) leakage errors which take the qubit out of the computational subspace, and (2) phase errors. Effect 1 can occur because a qubit in the state $|1\rangle$ may be excited to $|2\rangle$ as a π pulse is applied, or be excited directly from the $|0\rangle$, since the qubit spends some amount of time in the $|1\rangle$ state during the π pulse. Effect 2 occurs because the presence of the drive results in a repulsion between the $|1\rangle$ and $|2\rangle$ levels, in turn changing $\omega_q^{0 \rightarrow 1}$ as the pulse is applied. This leads to the accumulation of a relative phase between $|0\rangle$ and $|1\rangle$.¹⁸⁸ The so-called DRAG procedure^{189–191} (Derivative Reduction by Adiabatic Gate) seeks to combat these two effects by applying an extra signal in the out-of-phase component. The trick is to modify the waveform envelope $s(t)$ according to

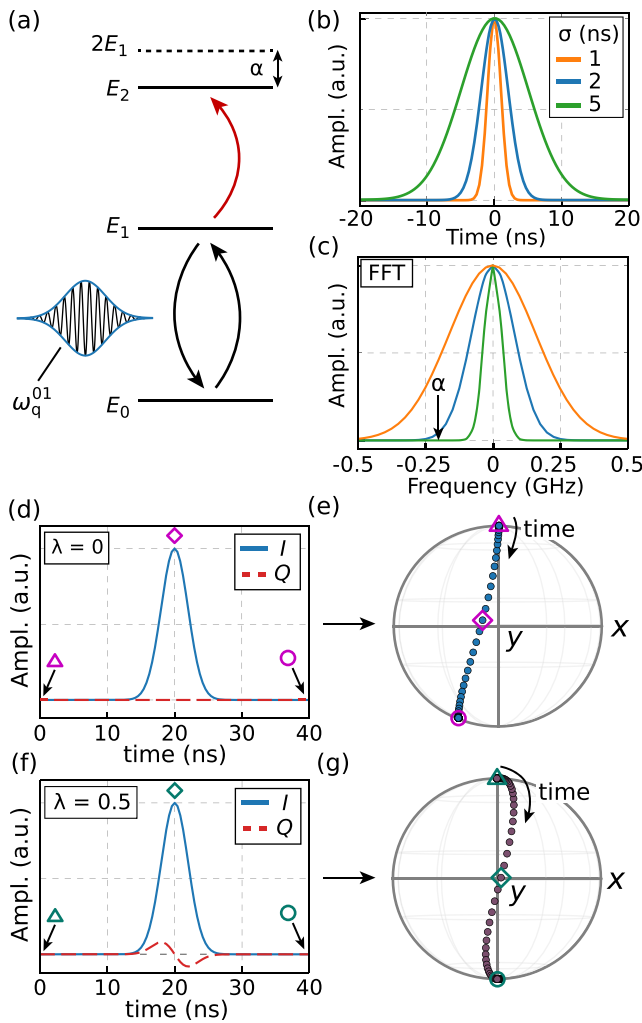


FIG. 14. (a) Schematic level diagram of a weakly anharmonic transmon qubit subjected to a drive at transition frequency $\omega_d = \omega_q$. (b) Gaussian waveform with standard deviation σ . (c) Fourier transform of (b) showing how the short pulse lengths lead to a significant overlap with the ω_q^{1-2} transition, separated from ω_q by the anharmonicity α . (d) Waveform of a X_π pulse without DRAG modulation. (e) Effect of the waveform from (d) on a qubit initialized in the $|0\rangle$ state with $\alpha = -200$ MHz and $\omega_q = 4$ GHz. The dephasing error is visible as a deviation from the $|1\rangle$ after the pulse. (f) Waveform of a X_π pulse with DRAG modulation for a qubit with anharmonicity $\alpha = -200$ MHz and DRAG parameter $\lambda = 0.5$ to cancel dephasing errors (see the text for details). (g) Effect of the waveform from (f) on the same qubit as (e). Calculated using mesolve in the software package QuTIP.¹⁸⁷

$$s(t) \rightarrow s'(t) = \begin{cases} s(t) & \text{on } I \\ \lambda \frac{\dot{s}(t)}{\alpha} & \text{on } Q, \end{cases} \quad (100)$$

where λ is a dimensionless scaling parameter, and $\lambda = 0$ corresponds to no DRAG pulse and $\dot{s}(t)$ is the time derivative of $s(t)$. The theoretically optimal choice for reducing dephasing error is $\lambda = 0.5$ and an optimal choice for reducing leakage error is $\lambda = 1$.^{190,192} Interchanging I and Q in Eq. (100) corresponds to DRAG pulsing for the Q component.

In practice, there can be a deviation from these two optimal values, often due to pulse distortions in the lines leading to the qubits. Typically, randomized benchmarking experiments combined with single-shot measurements (see Sec. V) of the $|2\rangle$ state are used to determine the optimal value of λ . The $\lambda = \{0.5, 1\}$ trade-off was demonstrated explicitly in Refs. 186 and 193. However, by extending the original DRAG pulse implementation,^{194,195} it is possible to reduce “both” errors “simultaneously.” By introducing a frequency detuning parameter δf to the waveform¹⁹⁰ (defined such that $\delta f = 0$ corresponds to the qubit frequency), i.e.,

$$s'_{\delta f}(t) = s'(t)e^{i2\pi\delta ft}, \quad (101)$$

and choosing λ to minimize leakage errors, then phase errors can be reduced simultaneously.¹⁹³ Similarly, by a judicious use of the virtual-Z gate, it is also possible to reduce phase errors in combination with DRAG pulsing to reduce leakage.¹⁸⁶ Modern single-qubit gates using DRAG pulsing now routinely reach fidelities $F_{1\text{qb}} \gtrsim 0.99$.^{65,67,193,196–199} Other techniques also exist for operating single-qubit gates in a spectrally crowded device.^{200,201}

E. The *i*SWAP two-qubit gate in tunable qubits

As briefly mentioned in Sec. IV C, single-qubit gates supplemented with an entangling two-qubit gate can form the gate set required for universal quantum computation. The two-qubit gates available in the transmonlike superconducting qubit architecture can roughly be split into two broad families as outlined previously: one group requiring local magnetic fields to tune the transition frequency of qubits and one group consisting of all-microwave control. There exist several hybrid schemes that combine various aspects of these two categories and, in particular, the notions of tunable coupling and parametric driving are proving to be important ingredients in modern superconducting qubit processors.^{63,67,89,103,105,106,202–207} In this section, however, we start by introducing the *i*SWAP gate, and then review the CPHASE (controlled-phase) in Sec. IV F and the CR (cross-resonance) in Sec. IV G. We briefly review a few other two-qubit gates and discuss their merits in Secs. IV G 4 and IV H.

1. Deriving the *i*SWAP unitary

As we saw in Sec. II, Eq. 31 the interaction term between two capacitively coupled qubits (in the two-level approximation) is given by

$$H_{\text{qq}} = g\sigma_{y1} \otimes \sigma_{y2}, \quad (102)$$

where g is the coupling strength and $\otimes$ is used to emphasize the tensor product. If the capacitive coupling is mediated through a bus resonator, then^{208,209}

$$g \rightarrow g_{q-r-q} = \frac{g_1 g_2 (\Delta_1 + \Delta_2)}{2\Delta_1 \Delta_2}, \quad (103)$$

where g_i is the resonator coupling to qubit i (dependent on the qubit-resonator coupling capacitance C_{qir}) and $\Delta_i = \omega_{\text{qi}} - \omega_r$ is the detuning of qubit i to the resonator. In the simpler case where the qubits are directly coupled²¹⁰

$$g \rightarrow g_{q-q} = \frac{1}{2} \sqrt{\omega_{q1} \omega_{q2}} \frac{C_{q-q}}{\sqrt{C_{q-q} + C_1} \sqrt{C_{q-q} + C_2}}, \quad (104)$$

where C_{q-q} is the qubit-qubit coupling capacitance and C_i is the capacitance of qubit i . Throughout this section, we will assume a direct capacitive coupling between qubits of the flux-tunable transmon type, so that $g = g_{q-q}$ and $\omega_{qi} \rightarrow \omega_{qi}(\Phi_i)$. For simplicity, we suppress the explicit flux dependence of the ω_{qi} 's and simply refer to the coupling as g . Equation (102) can be rewritten as

$$H_{qq} = -g([\sigma^+ - \sigma^-] \otimes [\sigma^+ - \sigma^-]), \quad (105)$$

and then using the rotating wave approximation again (i.e., dropping fast rotating terms) we arrive at

$$H_{qq} = g(e^{i\delta\omega_{12}t} \sigma^+ \sigma^- + e^{-i\delta\omega_{12}t} \sigma^- \sigma^+), \quad (106)$$

where we have introduced the notation $\delta\omega_{12} = \omega_{q1} - \omega_{q2}$ and suppressed the explicit tensor product between qubit subspaces. If we now change the flux of qubit 1 to bring it into resonance with qubit 2 ($\omega_{q1} = \omega_{q2}$), then

$$H_{qq} = g(\sigma^+ \sigma^- + \sigma^- \sigma^+) = \frac{g}{2}(\sigma_x \sigma_x + \sigma_y \sigma_y). \quad (107)$$

The first part of Eq. (107) shows that a capacitive interaction leads to a swapping of excitations between the two qubits, giving rise to the “swap” in i SWAP. Moreover, due to the last part of Eq. (107), this capacitive coupling is also sometimes said to give rise to an “XY” interaction.²¹¹ The unitary corresponding to a XY (swap) interaction is

$$U_{qq}(t) = e^{-\frac{g}{2}(\sigma_x \sigma_x + \sigma_y \sigma_y)t} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & \cos(gt) & -i \sin(gt) & 0 \\ 0 & -i \sin(gt) & \cos(gt) & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}. \quad (108)$$

Since the qubits are tunable in frequency, we can now consider the effect of tuning the qubits into resonance for a time $t' = \frac{\pi}{2g}$

$$U_{qq}\left(\frac{\pi}{2g}\right) = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 0 & -i & 0 \\ 0 & -i & 0 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix} \equiv i\text{SWAP}. \quad (109)$$

From this result, we see that a capacitive coupling between qubits turned on for a time t' (inversely related to the coupling strength in units of radial frequency) leads to implementing a so called “ i SWAP” gate,^{209,210,212–215} which acts to swap an excitation between the two qubits, and add a phase of $i = e^{i\pi/2}$. For completeness, we note that for $t'' = \frac{\pi}{4g}$, the resulting unitary

$$U_{qq}\left(\frac{\pi}{4g}\right) = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1/\sqrt{2} & -i/\sqrt{2} & 0 \\ 0 & -i/\sqrt{2} & 1/\sqrt{2} & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix} \equiv \sqrt{i\text{SWAP}} \quad (110)$$

is typically referred to as the “squareroot- i SWAP” gate. The $\sqrt{i\text{SWAP}}$ gate can be used to generate Bell-like superposition states, e.g., $|01\rangle + i|10\rangle$.

To elucidate the operating principle behind an i SWAP implementation, we show the spectrum of a flux-tunable qubit using typical transmonlike parameters in Fig. 15(a). The i SWAP is performed at the avoided crossing, where $\Phi = \Phi_{i\text{SWAP}}$. By preparing QB1 in-state $|1\rangle$, moving into the avoided crossing, waiting there for a time τ [see pulse-sequence in inset in Fig. 15(b)], the excitation is swapped back and forth between the two qubits, as shown in Fig. 15(b). In Fig. 15(c), we plot the linecuts of (b) at $\Phi_{i\text{SWAP}}$, showing the excitation oscillating back and forth between $|01\rangle$ and $|10\rangle$ with the predicted time $t' = \pi/2g$. In turn, the frequency of the oscillation can be used to extract the strength of the coupling, $\frac{2}{t'} = \frac{g}{\pi}$.

So far, we have ignored the role of the single-qubit phases acquired by tuning the qubit frequency. Referring to the pulse-sequence shown in the top panel of Fig. 15(a), we see that each qubit will acquire a phase given by

$$\theta_z = \int_0^\tau dt (\omega_q - \omega(t)). \quad (111)$$

This phase can be conveniently removed either by subsequent application of virtual-Z gates to all following pulses,¹⁸⁶ or by shaping the

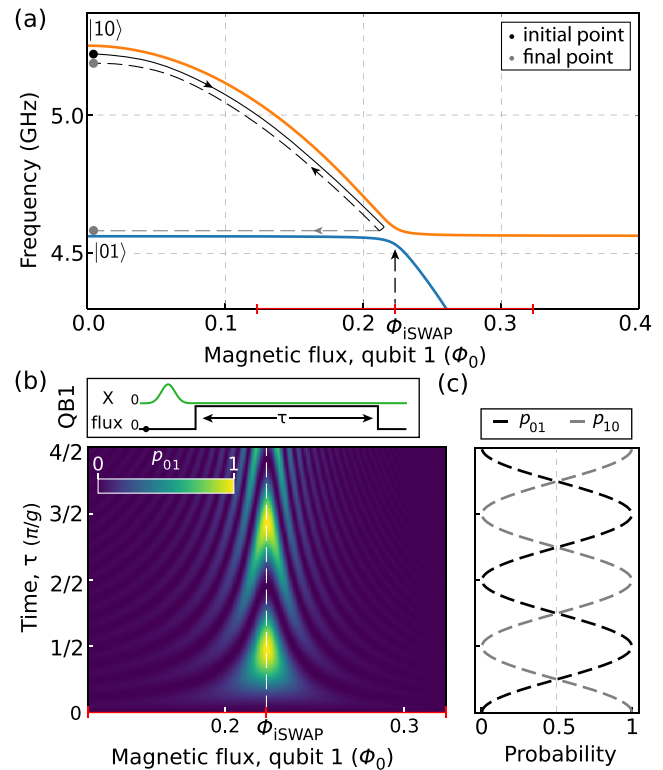



FIG. 15. (a) Spectrum of two transmon qubits (written in the combined basis as $|QB1, QB2\rangle$) as the local flux through the loop of qubit 1 is increased. The black/dashed lines with arrows indicate a typical flux trajectory to demonstrate operation of i SWAP gate. (b) Probability of swapping into the $|01\rangle$ state as a function of time and flux. The pulse sequence corresponds to preparing $|10\rangle$ and performing a typical i SWAP operation (for a time τ). (c) Probabilities of $|01\rangle$ (black) and $|10\rangle$ (gray) at $\Phi = \Phi_{i\text{SWAP}}$ [white dashed line in (b)] as the time spent at the operating point (τ) is increased. This simulation does not include any decay effects.

waveform of the excursion such that single-qubit phases are exactly canceled.²¹⁶

Equations (104) and (108) together present a useful result from a quantum processor design perspective: The operating regime, frequency and time τ of the *i*SWAP can be calculated (typically simulated) to a high precision, before any processor fabrication is undertaken. The only “quantum” parts that enter g_{qq} (and g_{q-r-q}) are the qubit frequencies, $\omega_{q1}(\Phi_1)$ and $\omega_{q2}(\Phi_2)$. If the Josephson energies of the qubits are known (which they typically are, from fabrication parameters), then by simulating the capacitances in g_{qq} or g_{q-r-q} , the time τ and the pulse shape needed to implement an *i*SWAP can be estimated to high precision. Typical values of the coupling strength, $g/(2\pi)$, for architectures using the *i*SWAP gate are 5–40 MHz and are often very close to expectations from EM simulations.^{213,215–217}

2. Applications of the *i*SWAP gate

The *i*SWAP cannot generate a CNOT gate by itself. Rather, to implement a CNOT gate requires stringing together two *i*SWAPs and several single qubit gates²¹¹



As evident from Eq. (112), the *i*SWAP gate in general needs to be used twice to generate a single CNOT, leading to a significant overhead when compiling CNOT-dense circuits from *i*SWAP gates. However, depending on the context, the *i*SWAP can be used efficiently (i.e., without any two-qubit gate overhead) to mimic the behavior of a CNOT. Typically such circuits will not be completely equivalent, but will share certain salient features for specified input states. As an example of this procedure, Neeley *et al.*²¹⁴ demonstrated the generation of a 3-qubit Greenberger-Horne-Zeilinger (GHZ) state (which requires two subsequent CNOTs in the simplest construction), by using only two *i*SWAPs in a circuit that correctly generates the 3-qubit GHZ state on the $|000\rangle$ input. Moreover, the XY-interaction is a powerful tool for certain types of quantum simulation algorithms.²¹⁸ If one is interested in digital quantum simulation of spinlike systems, then the XY-interaction can natively simulate, e.g., a Heisenberg interaction

$$H_{\text{Heisenberg}} = J_x \sigma_x \sigma_x + J_y \sigma_y \sigma_y + J_z \sigma_z \sigma_z. \quad (113)$$

This approach to the XY interaction was demonstrated by Salathé *et al.*,²¹⁶ where repeated application of the *i*SWAP gate interspersed with single-qubit rotations was used to generate successive XY, XZ and YZ interactions that lead to an aggregate $H_{\text{Heisenberg}}$ Hamiltonian. State-of-the-art operation of the *i*SWAP gate has also been used to demonstrate a ten-qubit GHZ state.²¹⁹

F. The CPHASE two-qubit gate in tunable qubits

In our discussion of the *i*SWAP gates, we assumed that the higher energy levels of the superconducting qubit do not play a role. As we show below, it turns out that for the case of transmon qubits

(with negative anharmonicity), the higher levels can in fact be utilized to generate a the CPHASE gate directly.^{64,220}

Recall from Sec. IV C that the CPHASE gate implements the following unitary:

$$U_{\text{CPHASE}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & -1 \end{bmatrix}. \quad (114)$$

Our goal for the remainder of this section is to show that the unitary operator of the CPHASE gate appears naturally for capacitively coupled transmon superconducting qubits and review a few of the modern applications of this gate. We have chosen to include a considerable amount of details for the implementation of this gate, as a means to review some of the issues one has to resolve, to engineer high quality two-qubit gates.

The structure of the matrix in Eq. (63) indicates that we need to apply a phase ($-1 = e^{i\pi}$) to the qubits whenever both are in the excited state $|11\rangle$. Considering the nature of the XY interaction, which couples $|01\rangle \leftrightarrow |10\rangle$ and leads to the *i*SWAP gate (see Sec. IV E), we expect avoided level crossings to exist between higher levels, e.g., $|11\rangle \leftrightarrow |20\rangle$ and $|11\rangle \leftrightarrow |02\rangle$. The flux-tunable implementation of the CPHASE gate relies on this higher-level avoided crossing.

To motivate this intuition, we plot the spectrum for two coupled transmon qubits, in Fig. 16(a), including levels with two excitations, as the local magnetic flux in qubit 1 is being tuned. The Hamiltonian for this spectrum, written in the $\{|00\rangle, |01\rangle, |10\rangle, |11\rangle, |02\rangle, |20\rangle\}$ -basis, is approximately given by

$$H_{2\text{ excitations}} = \begin{bmatrix} E_{00} & 0 & 0 & 0 & 0 & 0 \\ 0 & E_{01} & g & 0 & 0 & 0 \\ 0 & g & E_{10} & 0 & 0 & 0 \\ 0 & 0 & 0 & E_{11} & \sqrt{2}g & \sqrt{2}g \\ 0 & 0 & 0 & \sqrt{2}g & E_{02} & 0 \\ 0 & 0 & 0 & \sqrt{2}g & 0 & E_{20} \end{bmatrix}, \quad (115)$$

where $E_{nm} = E_n^{q1}(\Phi_1) + E_m^{q2}(\Phi_2)$ and $E_n(\Phi_i)$ is the flux-dependent energy of the i -th level of a transmon,⁵² and the $\{|02\rangle, |20\rangle\} \leftrightarrow |11\rangle$ transitions are scaled by a factor $\sqrt{2}$ due to the higher photon number. In Fig. 16, we plot the frequencies $\omega_{nm} = E_{nm} - E_{00}$ calculated from Eq. (115), using standard, symmetric, transmonlike parameters, as the local magnetic field of qubit 1 is increased.

The result of the higher levels on the computational basis can be understood by considering a concrete example. By preparing the combined qubit state $|11\rangle$ and moving slowly toward the avoided crossing between $|11\rangle$ and $|20\rangle$ at Φ_{CPHASE} , waiting for some time τ and moving back [see black line with arrows in Fig. 16(b)], the resulting unitary operator in the computational basis is given by

$$U_{\text{ad}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & e^{i\theta_{01}(\ell)} & 0 & 0 \\ 0 & 0 & e^{i\theta_{10}(\ell)} & 0 \\ 0 & 0 & 0 & e^{i\theta_{11}(\ell)} \end{bmatrix}, \quad (116)$$

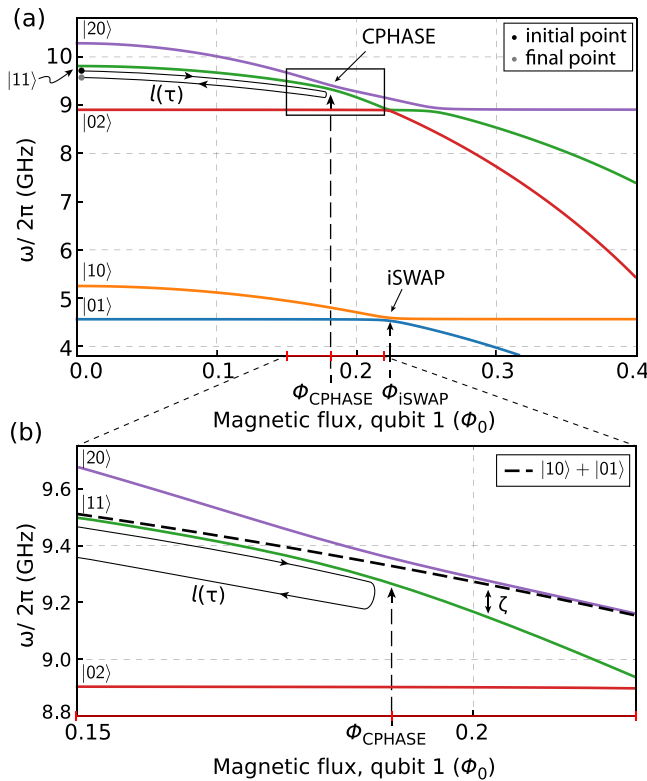


FIG. 16. (a) Spectrum of two coupled transmon qubits (using typical transmonlike values for Josephson energies and capacitances) as the local magnetic flux for qubit 1 is varied. The two lower branches corresponding to $|01\rangle$ and $|10\rangle$ are involved in the i SWAP gate operation at $\Phi = \Phi_{\text{iSWAP}}$. The avoided crossing indicated in the black rectangle is used to implement the conditional phase gate (CPHASE), at $\Phi = \Phi_{\text{CPHASE}}$. The black line with arrows indicates a typical trajectory used to implement a CPHASE gate (starting at the black circle and ending at the gray circle). (b) Zoom in of the $|20\rangle \leftrightarrow |11\rangle$ avoided crossing highlighted in the black box in (a) at $\Phi = \Phi_{\text{CPHASE}}$. The parameter ζ quantifies the difference in energy between $|11\rangle$ and $|01\rangle + |10\rangle$ and $\ell(\tau)$ is the trajectory in (Φ, t) -space.

where

$$\theta_{ij}(\ell(\tau)) = \int_0^\tau dt \omega_{ij}[\ell(t)] \quad (117)$$

is the phase acquired by the state $|ij\rangle$ along the trajectory ℓ in (Φ, t) -space during time τ . The movement should be sufficiently slow on a time scale set by g that the moving state never populates the $|20\rangle$ state, i.e., the movement should be adiabatic. In terms of applied flux, the avoided crossing between the $|11\rangle \leftrightarrow |20\rangle$ state happens before $|10\rangle \leftrightarrow |01\rangle$ (due to the negative anharmonicity of the transmons, $\alpha \approx -E_c$) and consequently ℓ does not take the states through the Φ_{iSWAP} operating point. As shown in Fig. 16(b), we can define a parameter (typically denoted ζ) quantifying the difference in phase acquired by the $|11\rangle$ relative to the single excitation states

$$\zeta = (\omega_{11} - (\omega_{01} + \omega_{10})). \quad (118)$$

The parameter ζ can be thought of as the result (in the computational space) of the repulsion of $|11\rangle$ due to the $|20\rangle$ state. If we now choose a trajectory ℓ_π , designed so that $\int_0^\pi \zeta(\ell_\pi(t)) dt = \pi$, then

$$\int_0^\pi \zeta(t) dt = \pi = \theta_{11}(\ell_\pi) - (\theta_{01}(\ell_\pi) + \theta_{10}(\ell_\pi)). \quad (119)$$

Inserting this expression into Eq. (116), we see that

$$U_{\text{ad}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & e^{i\theta_{01}(\ell_\pi)} & 0 & 0 \\ 0 & 0 & e^{i\theta_{10}(\ell_\pi)} & 0 \\ 0 & 0 & 0 & e^{i(\pi + \theta_{01}(\ell_\pi) + \theta_{10}(\ell_\pi))} \end{bmatrix}. \quad (120)$$

After the adiabatic excursion, one can now apply single-qubit pulses (or use virtual-Z gates) to exactly cancel the single-qubit phases such that $\theta_{10}(\ell_\pi) = \theta_{01}(\ell_\pi) = 0$. This changes U_{ad} to

$$U_{\text{ad}} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & e^{i\pi} \end{bmatrix} = \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & -1 \end{bmatrix} = U_{\text{CPHASE}}. \quad (121)$$

From Eq. (121), it is evident that an adiabatic movement of $|11\rangle$, followed by single-qubit gates (virtual or real) efficiently implements a CPHASE and, through Eq. (66), also efficiently implements a CNOT. The CPHASE gate is one of the workhorses of modern superconducting qubit processors with gate fidelities ≥ 0.99 .^{65,221}

One is, of course, free to choose an arbitrary trajectory ℓ_ϕ that implements the phase $e^{-i\phi}$ on the $|11\rangle$ state. Assuming that the single-qubit phases are properly canceled, one sees that the arbitrary phase version of the CPHASE gate (typically denoted CZ_ϕ) can be written as

$$\begin{aligned} \text{CZ}_\phi &= \begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & e^{-i\phi} \end{bmatrix} \\ &= \exp \left[-i\frac{\phi}{4} (\sigma_z \otimes \sigma_z - \sigma_z \otimes \mathbb{1} - \mathbb{1} \otimes \sigma_z) \right]. \end{aligned} \quad (122)$$

Because of the form of Eq. (122), one can think of the avoided crossing with the higher levels outside the computational subspace as giving rise to an effective $\sigma_z \otimes \sigma_z$ coupling within the computational subspace.²²⁰

An alternative to the adiabatic approach outlined above to realize CPHASE is to make a sudden excursion to the Φ_{CPHASE} operating point, after waiting a time $t = \pi/\sqrt{2}g$, the state will have completed a single Larmor-type rotation from $|11\rangle$ to $|02\rangle$ and back again to $|11\rangle$, but in the process, acquired an overall π phase, similar to the i SWAP gate, but in the $\{|11\rangle, |20\rangle\}$ subspace.⁵⁴ In fact, such excursions near or through avoided crossings leading to adiabatic and nonadiabatic transitions have been studied extensively in the context of interferometry, cooling, spectroscopy, and quantum control.^{117,222–231}

The remainder of this subsection is devoted to an overview of some of the recent advances and demonstrations using the CPHASE gate since its first demonstration in 2009 where it was used to generate Bell-states and demonstrate two-qubit algorithms.⁶⁴

1. Trajectory design for the CPHASE gate

The (adiabatic) implementation of U_{CPHASE} outlined above assumed that the trajectory ℓ_π was completely adiabatic and that the

α can be tuned. Using the CZ_ϕ version of CPHASE, a $U_{ZZ}(\phi)$ = $\exp\left(-i\frac{\phi}{2}\sigma_z \otimes \sigma_z\right)$ unitary can be generated via

$$U_{ZZ}(\phi) = \begin{array}{c} \boxed{X_\pi} \\ \hline \boxed{CZ_\phi} \\ \hline \boxed{A_\pi} \end{array} \begin{array}{c} \boxed{A_\pi} \\ \hline \boxed{CZ_\phi} \\ \hline \boxed{X_\pi} \end{array} \quad (128)$$

where $A_\pi \in \{X_\pi, Y_\pi\}$ is used to allow for small and negative angles. Finally, for completeness, we mention an alternative approach to creating U_{ZZ} , given by^{42,256}

$$U_{ZZ}(\phi) = \begin{array}{c} \bullet \\ \hline \oplus \end{array} \begin{array}{c} \bullet \\ \hline \oplus \end{array} \begin{array}{c} \boxed{Z_{\phi/2}} \\ \hline \oplus \end{array} \quad (129)$$

which has the benefit of relying on CPHASE (through the CNOTs), and the angle can be controlled using the single-qubit Z gates. We refer the interested reader to two reviews on quantum simulations, see, e.g., Refs. 257 and 258.

The CPHASE gate has also been used in a variety of other contexts, e.g., for calculating the dissociation of diatomic hydrogen (H_2) using the variational quantum eigensolver method,²⁵⁹ for feed-forward based teleportation experiments,^{260,261} as well as initial steps toward demonstrating quantum supremacy²⁶² and a 2×2 implementation of the Harrow-Hassidim-Lloyd algorithm^{263,264} In the field of hybrid semiconducting nanowire/superconducting qubits (known as the “gatemon” approach^{265–267}), where the qubit frequency is modified by electrostatically changing the density of carriers in a semiconducting region with proximity-induced superconductivity, the CPHASE gate was also demonstrated between two nanowire qubits.²⁶⁸

One may worry that operating a qubit by moving its frequency can lead to overlap with frequencies already used by other qubits, in a system with multiple qubits. This issue is known as “frequency crowding.” While the use of asymmetric transmons [with two sweet spots in the range $[-\Phi_0, +\Phi_0]$, recall that Fig. 2(c)] may help alleviate some frequency crowding issues, a more long-term strategy is needed. One way to circumvent the problem is to utilize on/off tunable coupling schemes, in which qubits can exchange energy only if a coupler activates the interaction.^{63,103} To address this issue in the context of the CPHASE gate, Chen *et al.*¹⁰³ demonstrated a device (named “the gmon”) where the qubit interaction can be tuned with an on/off ratio on the order of 1000, and a CPHASE gate fidelity of $\mathcal{F} = 0.9907$ was demonstrated.

This concludes the introduction to the physics and operation of the CPHASE gate in its native form. In the remainder of this section, we will introduce a few of the microwave-only gates that have been demonstrated in an effort to sidestep the need for local tunability (and the resulting increased sensitivity to noise) as required by the *i*SWAP and CPHASE gate.

G. Two-qubit gates using only microwaves

One common (potential) drawback for the *i*SWAP and CPHASE gates is that their operation requires flux-tunable qubits. Introducing a new control knob, such as flux control, in turn also

introduces a new noise channel for the system. Furthermore, the need for flux-tunability increases the sensitivity of the devices to flux noise by tuning the qubits from their “sweet spots,” increases the dephasing rate. From this perspective, one could envision using all-microwave-based gates to remedy these issues. To this end, the cross-resonance (“CR”) gate was developed for operating fixed-frequency superconducting qubits,^{269–271} which typically feature longer lifetimes and reduced sensitivity to flux noise.

1. The operational principle of the CR gate

To elucidate the operation of the CR gate, we briefly revisit the driving Hamiltonian derived in Sec. IV D. There, we considered only a single qubit. However, if one extends this formalism to two qubits, see Fig. 17(a) denoting the frequency difference by $\Delta_{12} = \omega_{q1} - \omega_{q2}$ and the coupling by $g \ll \Delta_{12}$, and performing a Schrieffer-Wolff transformation to go to the dressed state picture, the driving Hamiltonians for qubit 1 and 2 become^{270,272}

$$H_{d,1} = \Omega V_{d1}(t)(\sigma_x \otimes \mathbb{1} + \nu_1^- \mathbb{1} \otimes \sigma_x + \mu_1^- \sigma_z \otimes \sigma_x), \quad (130)$$

$$H_{d,2} = \Omega V_{d2}(t)(\mathbb{1} \otimes \sigma_x + \nu_2^+ \sigma_x \otimes \mathbb{1} + \mu_2^+ \sigma_x \otimes \sigma_z), \quad (131)$$

where

$$\mu_i^\pm = \pm \frac{g}{\Delta_{12}} \frac{\alpha_i}{(\alpha_i \mp \Delta_{12})}, \quad (132)$$

$$\nu_i^\pm = \pm \frac{g}{\Delta_{12}} \frac{\mp \Delta_{12}}{(\alpha_i \mp \Delta_{12})}, \quad (133)$$

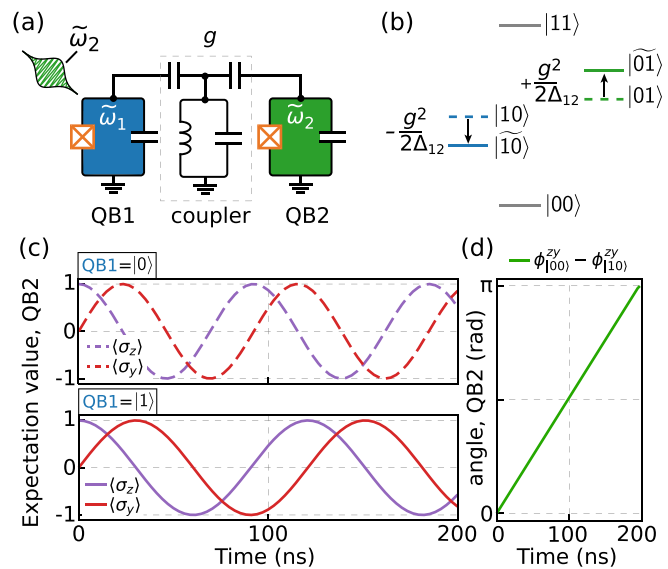


FIG. 17. (a) Schematic circuit diagram of two fixed frequency transmons coupled through a resonator yielding an overall coupling coefficient g . Qubit 1 driven at the frequency of qubit 2 leads to the CR gate. (b) Schematic level diagram of the always-on coupling leading to dressed states $|01\rangle$ and $|10\rangle$ with $\Delta_{12} = \omega_1 - \omega_2$. (c) Simulations of the expectation values of $\langle\sigma_z\rangle$ and $\langle\sigma_y\rangle$ for qubit 2 as a drive at the frequency of qubit 2 is applied to qubit 1. The upper panel shows regular Rabi oscillations when qubit 1 is in the $|0\rangle$ state. The bottom panel shows a modified Rabi frequency when qubit 1 is in $|1\rangle$ state, in accordance with Eq. (134). (d) Difference in angle in the (z, y) plane as a function of length of the applied drive to qubit 1. At approximately 200 ns, a π -phase shift has been acquired.

and $\Omega V_{di}(t)$ is the driving for qubit i . From Eq. (130), it is evident that if we drive qubit 1 at the frequency of qubit 2, then to qubit 2, this will look like a combination of $\nu_1^- \mathbb{1} \otimes \sigma_x$ and $\mu_1^- \sigma_z \otimes \sigma_x$. This means that the Rabi oscillations of qubit 2 will have a frequency given by

$$\Omega_{QB2}^{\text{Rabi}} = \Omega V_{d1}(\nu_1^- + z_1 \mu_1^-), \quad (134)$$

where $z_1 = \langle \sigma_z \mathbb{1} \rangle$, and z_1 depends on the state of qubit 1. This effect is demonstrated in Fig. 17(c), where a simulated drive is applied to qubit 1 while the resulting Rabi oscillations in qubit 2 are recorded. We have used typical fixed-frequency transmon parameters from experiments, and we have included a spurious cross-talk term $\eta = 0.03$.^{239,273} In Fig. 17(d), we plot the difference in angle in the (z, y) plane acquired by qubit 2 for different initializations of qubit 1, $\Delta\phi = \phi_{|00\rangle}^{zy} - \phi_{|10\rangle}^{zy}$. For this particular choice of parameters, the cross-resonance gate achieves a π -phase shift in ≈ 200 ns.

This strategy was first demonstrated using flux-tunable transmons in Ref. 274, where a Bell state with fidelity $\mathcal{F}_{\text{bell}} = \langle \Phi^+ | \rho | \Phi^+ \rangle = 0.90$ was achieved. Using quantum process tomography, the gate fidelity was found to be $\mathcal{F}_{\text{QPT}} = 0.81$. By moving to fixed-frequency qubits with increased lifetimes, the gate fidelity was increased to $\mathcal{F}_{\text{QPT}} = 0.98$ (with subtraction of state initialization and measurement errors).²⁷³ For completeness, we note that due to the form of the last term in Eq. (130), the CR gate is also sometimes denoted the ZX _{θ} gate. The unitary matrix representation of the CR _{θ} gate is

$$U_{\text{CR}_\theta} = e^{-\frac{i}{2}\theta\sigma_z \otimes \sigma_x} = \begin{bmatrix} \cos \frac{\theta}{2} & -i \sin \frac{\theta}{2} & 0 & 0 \\ -i \sin \frac{\theta}{2} & \cos \frac{\theta}{2} & 0 & 0 \\ 0 & 0 & \cos \frac{\theta}{2} & i \sin \frac{\theta}{2} \\ 0 & 0 & i \sin \frac{\theta}{2} & \cos \frac{\theta}{2} \end{bmatrix}, \quad (135)$$

where $\theta = -\mu_1^- \Omega V_{d1}(t)$, which can be used to generate a CNOT with the addition of only single-qubit gates

$$\begin{array}{c} \bullet \\ | \\ \oplus \end{array} = \begin{array}{c} \boxed{Z \frac{\pi}{2}} \quad \boxed{\text{CR}_{-\frac{\pi}{2}}} \\ | \\ \boxed{X \frac{\pi}{2}} \quad \bullet \end{array} \quad (136)$$

up to a phase $e^{i\pi/4}$.

2. Improvements to the CR gate and quantum error correction experiments using CR

Since qubit 1 is being driven off-resonance, an ac-Stark shift will add a term $\propto \sigma_z \mathbb{1}$ to the driving Hamiltonian of qubit 1. The effect of both the spurious ac Stark shift and the direct $\nu_1^- \mathbb{1} \sigma_x$ single-qubit rotations was studied in Ref. 239. By modifying the original CR protocol to effectively “echo away” the two unwanted contributions from the $\sigma_z \mathbb{1}$ and $\mathbb{1} \sigma_x$ terms, the fidelity of the CR gate was improved to $\mathcal{F}_{\text{CR}} = 0.8799$,²³⁹ using quantum process tomography. Using interleaved randomized benchmarking of this improved “echo-CR”-gate (e CR _{$-\frac{\pi}{2}$}), a gate fidelity of $\mathcal{F}_{\text{eCR}_{-\frac{\pi}{2}}} = 0.9347$ was achieved. This gate implementation was used to demonstrate two-qubit parity

measurements in a three-qubit device,²⁷⁵ as well as detecting bit-flip and phase-flip errors in a Bell state encoded in a four-qubit device,²⁷⁶ with gate fidelities from interleaved randomized benchmarking in the range 0.94 to 0.96. Using a similar device, but with five qubits, weight-four parity measurement of the forms ZZZZ and XXXX were demonstrated,²⁷⁷ where the crosstalk to qubits not involved in the CR gates was studied, leading to the development of a four pulse eCR_{4-pulse} scheme.

Based on improvements in the analysis of the Hamiltonian describing the CR drive, Sheldon *et al.*¹⁹⁷ subsequently demonstrated a version of the CR which reduced the gate time to $\tau = 160$ ns and added an active cancellation tone to the e CR previously developed. Using this “active cancellation echo CR” (ace CR), the fidelity was increased to $\mathcal{F}_{\text{aceCR}_{-\frac{\pi}{2}}} = 0.991$, measured with interleaved randomized benchmarking. The same sequence without active cancellation on the same qubits yielded $\mathcal{F}_{\text{eCR}_{-\frac{\pi}{2}}} = 0.948$. The interested reader may consult the followup theoretical work²⁷⁸ with more details on the effective Hamiltonian models. Other approaches to fast, high-fidelity cross-resonance gates have also been proposed.²⁷⁹ This series of improvements to the original cross-resonance implementation has increased the gate fidelity to beyond the threshold for fault-tolerance in a surface code, with similar quality to the CPHASE gate. Although improvements should still be made, with the advent of the CR gate, superconducting qubit based quantum computing platforms now offer two entangling two-qubit gates that can be used for implementing surface-code based error correction schemes.

In the initial experiments using CR gates, the gate times were significantly longer than the typical CPHASE gate times ($\tau_{\text{CPHASE}} = 30\text{--}60$ ns and $\tau_{\text{CR}} = 300\text{--}400$ ns), which to a large extent accounts for the observed CR gate fidelities. The time scale for CR operation is set by the frequency detuning, the anharmonicity, and the coupling strength, through Eq. (132). This has the unfortunate drawback that if qubits do not have the intended frequencies (due to fabrication variation), they will be immediately manifested as longer gate times, and in turn, reduced gate fidelity. As fabrication techniques are becoming more sophisticated and reliable, this problem may be of reduced importance. However, since the coupling in the CR scheme is always on, there is an inherent tension between well-isolated qubits for high-fidelity single-qubit operations, and coupling qubits, for fast/high-fidelity two qubit gates.

3. Quantum simulation and algorithm demonstrations with the CR gate

Since the form of the CR Hamiltonian ($\sigma_z \otimes \sigma_x$) is not a ($\sigma_x \otimes \sigma_x + \sigma_y \otimes \sigma_y$)-type interaction (leading to i SWAP gate) nor is it an effective ($\sigma_z \otimes \sigma_z$)-type (leading to CPHASE gate), one could question its applicability to quantum-simulation-type experiments, which often involves terms of the form $\sigma_i \otimes \sigma_j$. However, by developing a variational quantum eigensolver routine that efficiently generates entangled trial states using just the CR interaction, Kandala *et al.*²⁸⁰ calculated the ground-state energy for H₂, LiH, and BeH₂. This experiment was performed on six fixed-frequency qubits, and it employed a technique for compact encoding of the Hamiltonians corresponding to each molecule.²⁸¹ As of this writing, this experiment represents the largest molecule for which the ground state has been found using a purely quantum processing approach.

The CR gate is also the native two-qubit gate available on the IBM Quantum Experience quantum processor,²⁸² which is accessible online. Using the IBM Quantum Experience processor, Takita *et al.*²⁸³ demonstrated an implementation of a two-logical-qubit (four physical qubit) error detection code.²⁸⁴ The implementation was inspired by the proposal of Gottesman,²⁸⁵ which proposed a minimal experiment to claim observation of fault-tolerant encodings,²⁴⁸ using a four qubit error detection code in a five qubit setup. Due to constraints on the connectivity, the work by Takita *et al.* demonstrated a modified version of the Gottesman encoding, in which two logical qubits are initialized, but only one of them in a fault-tolerant manner. By artificially injecting an error in the state preparation circuit, the authors demonstrate that the probability of correctly preparing a fault tolerant state is greater than the probability of correctly preparing a non-fault-tolerant qubit. This behavior is consistent with expectations for how fault-tolerant encodings work. Simultaneously, Vuillot²⁸⁶ also used the IBM Quantum Experience machine to study fault-tolerant schemes encoded in that connectivity.

Beyond the applications to error-correction and error-detection, the cross-resonance gate has also been employed in early demonstrations of quantum advantages in machine learning. Risté *et al.*²⁸⁷ studied the so-called “learning parity with noise” problem, in which one attempts to learn a bit-string $\mathbf{k}$ by querying an oracle function $f(\mathbf{D}, \mathbf{k}) = \mathbf{D} \cdot \mathbf{k} \bmod 2$ with a user-input bit-string $\mathbf{D}$. In a first implementation of this problem, the authors show that for a specific instance of the bit-string $\mathbf{k} = 11$, a learner with access to quantum operations needs fewer queries to the function f . However, by extending the model of learning parity with noise, the authors demonstrated a consistent advantage of the learner with access to quantum operations.²⁸⁷

The CR gate was also used to demonstrate the implementation of a supervised learning algorithm where the feature space is encoded as quantum data on the Bloch sphere.²⁵⁶ In typical supervised learning, an algorithm is exposed to a training set of labeled data, and is subsequently asked to classify a new, unlabeled set of data.²⁸⁸ In the support vector machine (SVM) approach to such problems, the data is then mapped nonlinearly onto the so-called “feature space,” in which the trained algorithm has constructed a separating hyperplane to classify the data. While a full “quantum Support Vector Machine” proposal exists, the algorithm assumes that the data are already present in a coherent superposition.²⁸⁹ Instead, Havlicek *et al.*²⁵⁶ proposed, and demonstrated, that mapping the classical data nonlinearly onto the Bloch sphere can also be utilized to provide a quantum advantage. For a wider discussion of the important role of quantum data in many quantum machine learning algorithms, the reader is referred to Ref. 290.

4. Other microwave-only gates: *b*SWAP, MAP, and RIP

The CR gate (as outlined above) is not the only all-microwave two-qubit gate available. In particular, the *b*SWAP gate²⁹¹ is an interesting alternative. The *b*SWAP gate directly drives the $|00\rangle \leftrightarrow |11\rangle$ transition, made possible by interactions with the higher levels of the qubit, see Fig. 18. Usually, the matrix element for such a transition is small (3rd order in the coupling strength), but if the detuning between the qubits is equal to the anharmonicity, the transition rate is enhanced. Applying a sequence of Schrieffer-Wolff transformations to the coupled-qubit system, and using a carefully chosen drive frequency

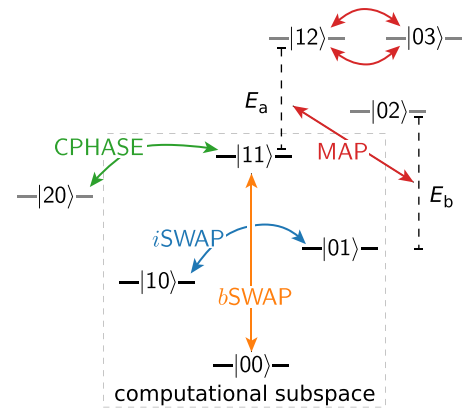


FIG. 18. Schematic of the level structure of two coupled qubits (including higher levels) with indication of the transitions utilized in the *i*SWAP, *b*SWAP, CPHASE, and MAP gate. See the text for details. Figure inspired from Ref. 70.

(close to the midpoint of ω_{q1} and ω_{q2}), it can be shown²⁷² that the drive gives rise to a unitary operator

$$U = U_{b\text{SWAP}}(\theta, \phi) U_{ZZ} U_{IZ-ZI}, \quad (137)$$

with

$$U_{b\text{SWAP}}(\theta, \phi) = \begin{bmatrix} \cos \theta & 0 & 0 & -ie^{-i2\phi} \sin \theta \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ -ie^{-i2\phi} \sin \theta & 0 & 0 & \cos \theta \end{bmatrix}. \quad (138)$$

The two unitaries U_{ZZ} and U_{IZ-ZI} only contain terms that commute with $U_{b\text{SWAP}}(\theta, \phi)$, and their effects can be offset in postprocessing.²⁷² In Eq. (138), ϕ is the phase of the drive relative to the single-qubit drive pulses, and $\theta = \Omega_B t$ with

$$\Omega_B = \frac{-2g\Omega^2(-g\gamma\alpha_\Sigma + \gamma^2\alpha_2(\alpha_1 + \Delta_{12}) + \alpha_1(\alpha_2 - \Delta_{12}))}{(\alpha_1 + \Delta_{12})(\alpha_2 - \Delta_{12})\Delta_{12}^2}, \quad (139)$$

where Ω is the amplitude of the drive, γ is a dimensionless parameter quantifying the coupling coefficient of the drive to qubit 2 in units of coupling strength to qubit 1, and $\alpha_\Sigma = \alpha_1 + \alpha_2$. Explicit derivations leading to Eq. (137) can be found in the supplement of Ref. 291. By applying $U_{b\text{SWAP}}$ for a time that yields $\theta = \pi/2$, and with $\phi = 0$, the resulting gate is denoted *b*SWAP and can act as the entangling gate (together with single-qubit gates) that forms a universal gate set. Moreover, the power of the *b*SWAP becomes apparent when one applies it for the time that yields $\theta = \pi/4$, which from the ground state $|00\rangle$ directly produces the entangled Bell state $|00\rangle + e^{i\phi}|11\rangle$. In line with the definition of $\sqrt{i\text{SWAP}}$, this gate is denoted the $\sqrt{b\text{SWAP}}$. In the work by Poletto *et al.*,²⁹¹ the fidelity of the *b*SWAP gate was $\mathcal{F}_{b\text{SWAP}} = 0.9$ (determined from quantum process tomography). The main source of error was the increased dephasing during the relatively long high-power pulse needed to drive the $|00\rangle \leftrightarrow |11\rangle$ transition. The *b*SWAP gate can be viewed as the superconducting qubit analog of the Mølmer-Sørensen gate.²⁹² In Fig. 18, we outline the level diagram of two coupled qubits, along with the higher levels of

the qubits. The arrows indicate which coupled states are utilized to implement the corresponding gate. As an application of the *b*SWAP gate, Colless *et al.*²⁹³ used this gate to calculate energies of the excited states of a H_2 molecule using a two-qubit transmon processor.²⁹³

Another all-microwave gate is the so-called “microwave-activated CPHASE” (or “MAP” for short).⁷⁰ The MAP gate is in a spirit similar to that of the CPHASE gate, where noncomputational states are used to impact a conditional phase inside the computational subspace. In contrast to CPHASE, the MAP gate is implemented without tuning individual qubit frequencies. Rather, the canonical implementation of this gate comprises two fixed-frequency qubits, where the frequencies are carefully designed (and fabricated), such that the $|12\rangle$ and $|03\rangle$ levels are resonant. This leads to a splitting of the otherwise degenerate $|02\rangle \leftrightarrow |01\rangle$, and $|12\rangle \leftrightarrow |11\rangle$ transitions. By driving near resonance with the $|n2\rangle \leftrightarrow |n1\rangle$ transition, an effective $\sigma_z \otimes \sigma_z$ interaction is generated. In a setup comprising two fixed-frequency qubits, the MAP gate was used to implement the unitary

$$U_{\text{MAP}} = \exp \left[-i \frac{\pi}{4} \sigma_z \otimes \sigma_z \right], \quad (140)$$

with a gate fidelity $\mathcal{F}_{\text{MAP}} = 0.87$ (determined via quantum process tomography) in a time $\tau_{\text{MAP}} = 514$ ns.⁷⁰ As the number of qubits in a system increase, one drawback of this gate is the need for a precise matching of higher energy levels across multiple qubits, while simultaneously avoiding spurious couplings to other modes in the system.

The CR, *b*SWAP and MAP gates all have quite stringent requirements on the spectral landscape of the qubits in order to obtain fast, efficient gate operation. To address this issue, another all-microwave gate was developed, the so-called “resonator induced phase gate” (“RIP”).^{294,295} The RIP gate operates by coupling two fixed-frequency qubits to a bus cavity, from which they are far detuned. By adiabatically applying and removing an off-resonant pulse to the cavity, the system undergoes a closed loop in phase space, after which the cavity is left unchanged, but the qubits acquire a state-dependent phase. By a careful choice of the amplitude and detuning of the pulse, and taking into account the dispersive shift of the cavity, a CPHASE gate can be implemented on the two qubits. This effect was experimentally demonstrated by Paik *et al.*²⁹⁶ in a 3D transmon system,⁵⁵ where four qubits are coupled to the same bus. In this setup, the RIP gate operation results in unitaries with weight on all four qubits simultaneously. In order to isolate just the desired two-qubit coupling terms, Paik *et al.* developed a “refocused” RIP (rRIP) gate that implements

$$U_{\text{rRIP}} = \exp \left[-i \dot{\theta} \sigma_z \otimes \sigma_z t \right], \quad (141)$$

where the coupling rate (for an unmodulated drive) scales as

$$\dot{\theta} \propto \underbrace{\left(\frac{|\Omega V_d|}{2\Delta_{cd}} \right)^2}_{\bar{n}} \frac{\chi}{\Delta_{cd}}, \quad (142)$$

where $\bar{n}$ denotes the average number of photons in the bus, χ is the dispersive shift, and Δ_{cd} is the detuning of the drive (d) from the cavity (c). By choosing $\dot{\theta}t = \pi/4$, it is possible to implement the CPHASE gate. The power of the RIP gate lies in its capability to accommodate large differences in qubit frequencies. To demonstrate this, Paik *et al.*²⁹⁶ performed two-qubit randomized benchmarking between pairs of qubits in a four-qubit device with frequency differences

spanning from 0.38 GHz to 1.8 GHz, all with fidelities in the range 0.96–0.98 and gate times in the range of 285 to 760 ns.

H. Gate implementations with tunable coupling

Finally, we briefly review tunable coupling architectures, which have recently emerged as a promising alternative. The idea is to engineer an effective qubit-qubit coupling $\tilde{g}$ that is tunable (typically by applying a flux), and such gates are referred to as parametric gates. This can be implemented in two different ways: (i) The coupling strength between two qubits is tuned by a flux, $g \rightarrow g(\Phi(t))$,^{193,202,297–299} or (ii) the resonant frequency of the coupling element is modified $\omega_{\text{coupler}} \rightarrow \omega_{\text{coupler}}(\Phi(t))$,^{89,106,300–304} with a fixed g , leading to an effective time-dependent coupling parameter. When the tunable coupling element is driven at frequencies corresponding to the detuning of the qubits from the coupler, an entangling gate can be implemented.

In a setup of type (ii), an implementation of the *i*SWAP gate was demonstrated by parametrically driving a flux-tunable coupler between two fixed-frequency qubits,⁶³ yielding a fidelity $\mathcal{F}_{\text{iSWAP}} = 0.9823$ (using interleaved randomized benchmarking) in a time $\tau = 183$ ns. Similarly, the *b*SWAP (and *i*SWAP) gates were recently demonstrated, using a flux-tunable transmon connecting two fixed-frequency transmons. Driving the flux through the tunable qubit at the sum frequency of the fixed-frequency transmons results in the *b*SWAP¹⁰⁴ gate. This parametrically driven approach is generally significantly faster than implementations relying solely on fixed-frequency qubits.

A hybrid approach, in which a combination of tunable and fixed-frequency qubits is used, was recently demonstrated for both *i*SWAP and CPHASE gates.^{67,105,206} This scheme has no added tunable qubits (or resonators) acting as the coupling element, but rather, relies solely on an always-on capacitive coupling between the qubits, and the effective coupling is roughly half that of the always-on coupling. The operational principle here is to modulate the frequency of the tunable qubit (using local flux control) at the transition frequency corresponding to $|01\rangle \leftrightarrow |10\rangle$ for *i*SWAP and $|11\rangle \leftrightarrow |02\rangle$ for CPHASE. Using interleaved randomized benchmarking, the authors demonstrated $\mathcal{F}_{\text{iSWAP}} = 0.94$ ($\tau = 150$ ns), and $\mathcal{F}_{\text{CPHASE}}^{02} = 0.93$ ($\tau = 210$ ns) and $\mathcal{F}_{\text{CPHASE}}^{20} = 0.88$ ($\tau = 290$ ns), showing a slight asymmetry in the direction in which the CPHASE is applied. This hybrid technique was used in Ref. 67 to demonstrate a four-qubit GHZ state with fidelity $\mathcal{F}_{4 \text{ qubit GHZ}} = 0.79$ (using state tomography). Finally, this gate-architecture was used to demonstrate a hybrid quantum/classical implementation of an unsupervised learning task (determining clustering of data), using nineteen qubits and supplemented by a classical computer as part of the minimization loop.³⁰⁵

V. QUBIT READOUT

The ability to perform fast and reliable (high fidelity) readout of the qubit states is an important cornerstone of any quantum processor.³

In this section, we give a brief introduction to how readout is performed on superconducting qubits. We start by reviewing the fundamental theory behind “dispersive readout”—the most common readout technique used today in the circuit QED architecture—in which each qubit is coupled to a readout resonator. In the dispersive regime, i.e., when the qubit is detuned from the resonator frequency, the qubit

induces a state-dependent frequency shift of the resonator from which the qubit state can be inferred by interrogating the resonator.

A dispersive readout allows us to map the quantum degree of freedom of the qubit onto the classical response of the linear resonator, thus transforming the readout optimization process into obtaining the best signal-to-noise ratio (SNR) of the microwave signal used to probe the resonator.

We then provide guidance on how to optimize system parameters to perform high-fidelity, single-shot readout. After choosing parameters, such as resonant frequencies and coupling rates, we address the filter and amplifier circuitry positioned in-between the qubit plane and the data acquisition hardware outside of the dilution refrigerator. On this note, we review the basic principles of Purcell filters as well as parametric amplifiers, both of which are necessary to obtain a fast, high-fidelity readout in scaled-up quantum processors.

A. Dispersive readout

A quantum measurement can be described as an entanglement of the qubit degree of freedom with a “pointer variable” of a measurement probe with a quantum Hamiltonian,³⁰⁶ followed by classical measurement of the probe. In circuit QED, the qubit (the quantum system) is entangled with an observable of a superconducting resonator (the probe), see Fig. 19(a), allowing us to gain information about the qubit state by interrogating the resonator—rather than directly interacting with the qubit. Therefore, the optimization of the readout performance is translated to maximizing the signal-to-noise ratio of a microwave probe tone sent to the resonator, while minimizing the unwanted “back-action” on the qubit.

The qubit-resonator interaction is described by the Jaynes–Cummings Hamiltonian,^{307–309} previously introduced in Sec. II

$$H_{JC} = \omega_r \left(a^\dagger a + \frac{1}{2} \right) + \frac{\omega_q}{2} \sigma_z + g(\sigma_+ a + \sigma_- a^\dagger), \quad (143)$$

where ω_r and ω_q denote the resonator and qubit frequencies, respectively, and g is the transverse qubit-resonator coupling rate. The operators σ_+ and σ_- represent the processes of exciting and de-exciting the qubit, respectively.

In the limit when the detuning between the qubit and the resonator is small compared with their coupling rate, i.e., $\Delta = |\omega_q - \omega_r| \ll g$, the energy levels of the two systems hybridize and a vacuum Rabi splitting of frequency $\sqrt{n}g/\pi$ opens up, where $n = 1, 2, 3, \dots$ denotes the resonator mode. In this regime, excitations are coherently swapped between the two systems. Although useful for certain two-qubit gate operations, recall Sec. IV E, such transverse interactions change the qubit state (since energy is directly exchanged between the resonator and the qubit) and is therefore not desired in the context of “quantum nondemolition” (QND) readout, in which the outcome of the quantum measurement is not altered in the act of reading out the system.

In the dispersive limit, i.e., when the qubit is far detuned from the resonator compared with their coupling rate g and the resonator linewidth κ , $\Delta \gg g, \kappa$, there is no longer a direct exchange of energy between the two systems. Instead, the qubit and resonator push each others’ frequencies. To see this, the Hamiltonian can be approximated using second-order perturbation theory^{208,310} in terms of g/Δ , taken in the limit of few photons in the resonator. This is known as the “dispersive approximation,” after which the Hamiltonian takes the form

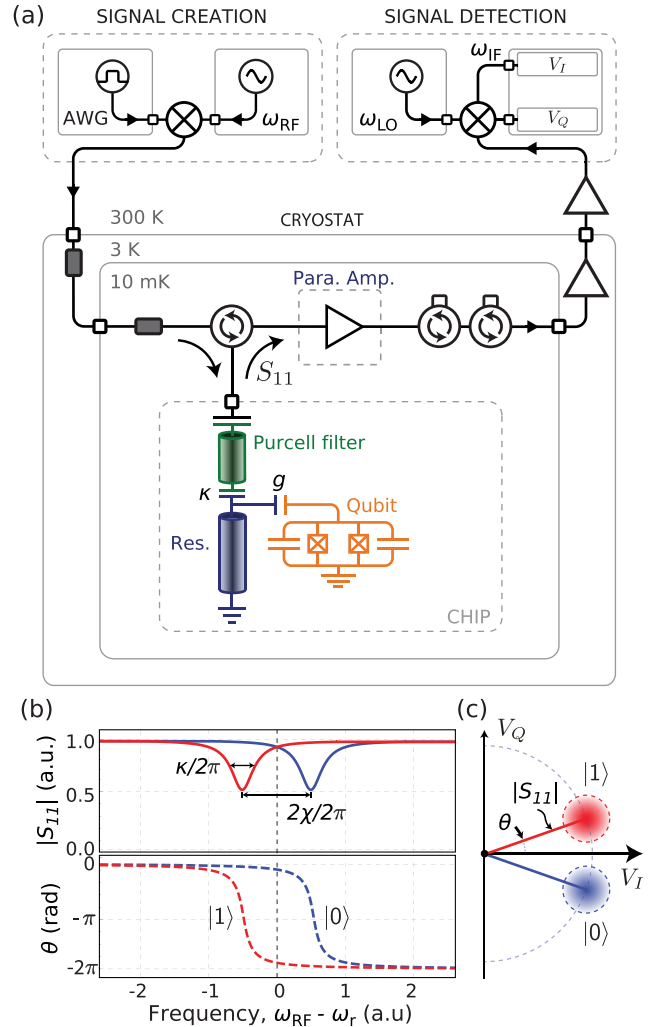


FIG. 19. (a) Simplified schematic of a representative experimental setup used for dispersive qubit readout. The resonator probe tone is generated, shaped and timed using an arbitrary waveform generator (AWG), and sent down into the cryostat. The reflected signal S_{11} is amplified, first in a parametric amplifier and then in a low-noise HEMT amplifier, before it is downconverted using heterodyne mixing and finally sampled in a digitizer. (b) Reflected magnitude $|S_{11}|$ and phase θ response of the resonator with linewidth κ , when the qubit is in its ground state $|0\rangle$ (blue) and excited state $|1\rangle$ (red), separated with a frequency $2\chi/2\pi$. (c) Corresponding complex plane representation, where each point is composed of the in-plane $\text{Re}[S_{11}]$ and quadrature $\text{Im}[S_{11}]$ components. The highest state discrimination is obtained when probing the resonator just in-between the two resonances, [dashed line in (b)], thus maximizing the distance between the states.

$$H_{\text{disp}} = (\omega_r + \chi\sigma_z) \left(a^\dagger a + \frac{1}{2} \right) + \frac{\tilde{\omega}_q}{2} \sigma_z, \quad (144)$$

where $\chi = g^2/\Delta$ is the qubit-state dependent frequency shift, a so-called “dispersive shift,” see Fig. 19(b), allowing us to distinguish the two qubit states. This is an asymptotically longitudinal interaction, yielding a QND measurement. Note that, in addition, the qubit frequency also picks up a “Lamb shift,” $\tilde{\omega}_q = \omega_q + g^2/\Delta$, induced by the vacuum fluctuations in the resonator. Also note that the dispersive

Hamiltonian in Eq. (144) is derived for a two-level atom.⁴³⁰ Taking the second excited state into account and introducing the anharmonicity $\alpha = \omega_q^{1 \rightarrow 2} - \omega_q^{0 \rightarrow 1}$ modifies the expression for the dispersive shift,

$$\chi = \chi_{01} + \frac{\chi_{12}}{2} = -\frac{g_{01}^2}{\Delta} \left(\frac{1}{1 + \Delta/\alpha} \right), \quad (145)$$

which for a transmon qubit with $\alpha < 0$ implies that the dispersive shift will depend on the detuning. This effect is plotted in Figs. 20(a) and 20(b), where the second energy level manifests itself as a second vertical asymptote at $\Delta/2\pi = E_C/h$. It is also worth noting that for qubit modalities with positive anharmonicity, e.g., flux qubits, the dispersive shift will also shift the sign.⁶²

In the small photon-number limit, the interaction term of the Hamiltonian in Eq. (144) commutes with the qubit observable,⁴³¹ σ_z , resulting in a QND measurement.³⁰⁶ This is an important condition for many applications in quantum information processing. However, it has been demonstrated that it is still possible to read out the qubit state by applying a very strong resonator drive tone, even though this readout scheme is not QND.³¹⁷

In the case when the resonator photon number $n = a^\dagger a$ exceeds a “critical photon number” $n_c \equiv \Delta^2/(4g^2)$, the dispersive Hamiltonian in Eq. (144) is no longer a valid approximation.^{208,311,312} Therefore, the critical photon number sets an upper bound for the power level of the resonator probe signal to maintain (an approximate)

QND measurement.⁴³² This limitation could be lifted by implementing a pure (and not only approximate) QND readout using a manifestly longitudinal coupling between a qubit and the resonator. Several groups are currently pursuing the implementation of “longitudinal readout,” in which QND readout could be performed even with a larger number of resonator photons, thus improving the SNR.^{107,314,315}

We can also interpret the dispersive qubit-resonator interaction in another way; by rearranging the terms in Eq. (144), we can equivalently write

$$H_{\text{disp}} = \omega_r \left(a^\dagger a + \frac{1}{2} \right) + \frac{1}{2} \left(\omega_q + \underbrace{\frac{g^2}{\Delta}}_{\text{Lamb shift}} + \underbrace{\frac{2g^2}{\Delta} a^\dagger a}_{\text{ac-Stark shift}} \right) \sigma_z, \quad (146)$$

where the bare qubit frequency is shifted by a fixed amount g^2/Δ , known as the Lamb shift⁴³³ as well as an amount proportional to the number of photons populating the resonator.^{52,208} This effect is known as the “ac-Stark shift.” It has the consequence that photon number fluctuations (noise) in the resonator induce small shifts of the qubit frequency, slightly bringing the qubit out of its rotating frame and thus causing dephasing.¹⁴² This means that spurious photon occupation and fluctuation in the resonator, be it thermal or coherent photons, shift the qubit frequency and causing dephasing.^{311,316} For this reason, it is important to make sure that the processor is properly thermalized,¹⁰⁶ and its control lines well filtered³¹⁷ and attenuated,¹⁴³ to reduce photon number fluctuation.

B. Measuring the resonator amplitude and phase

In Sec. V A, we outlined the underlying physics behind the dispersive readout technique, in which we concluded that the qubit induces a state-dependent frequency shift of the resonator. We now focus our attention on how to probe the resonator to “read out the qubit,” that is, best distinguish the two classical resonator signatures corresponding to our qubit states, see Figs. 19(b) and 19(c).

The readout circuit can be set up in measuring either reflection or transmission. The best state discrimination is obtained by maximizing the separation between the two states in the (I, Q) -plane, i.e., the in-phase and quadrature component of the voltage, see Fig. 19(c). It can be shown that this separation is maximal when the resonator is probed just in-between the two qubit-state dependent resonance frequencies,¹⁵⁷ $\omega_{\text{RF}} = (\omega_r^{(0)} + \omega_r^{(1)})/2$. In this case, the reflected magnitude is identical for $|0\rangle$ and $|1\rangle$, and all information about the qubit state is encoded in the phase θ , see dashed line in Fig. 19(b). In turn, the qubit-resonator detuning should be designed to obey the criterion for maximal state visibility, $\chi = \kappa/2$, which is maximized for phase measurements while constraining qubit dephasing.

Once we have picked the resonator probe frequency, the quantum dynamics of the qubit can be mapped onto the phase of the classical microwave response. In the following, we discuss how we can use heterodyne detection to measure the phase of the resonator response. We assume that the reader is already somewhat familiar with basic mixer operations, such as modulation and demodulation of signals. For interested readers, we refer to Ref. 318.

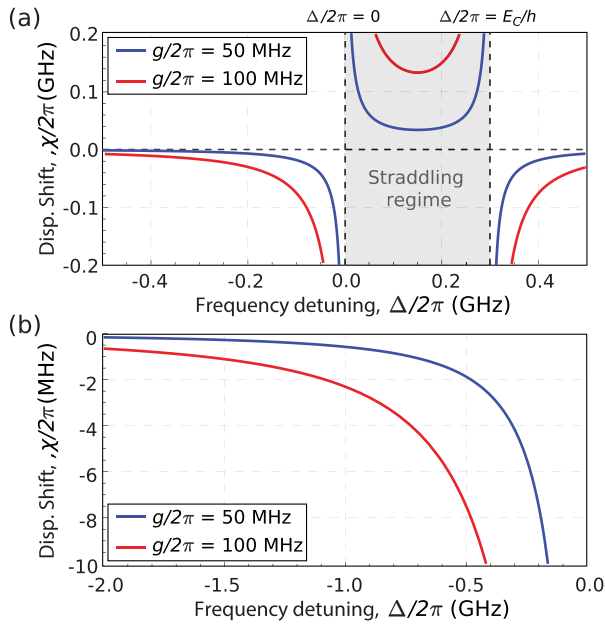


FIG. 20. (a) Dispersive frequency shift $\chi/2\pi$ as a function of qubit-resonator detuning $\Delta/2\pi$, according to Eq. (145), for a transmon qubit with anharmonicity $\alpha/2\pi = -E_C/h = -300$ MHz, for qubit-resonator coupling rates $g/2\pi = 50$ MHz (blue) and $g/2\pi = 100$ MHz (red). The two vertical asymptotes at $\Delta/2\pi = 0$ and $\Delta/2\pi = E_C/h$ divide the dispersive shift into three regimes; For $\Delta/2\pi < 0$, and $\Delta/2\pi > E_C/h$, the dispersive shift is negative and $\chi/2\pi \rightarrow 0^-$ as $\Delta \rightarrow \pm\infty$. For $0 < \Delta/2\pi < E_C/h$, the dispersive shift $\chi/2\pi > 0$. This is called the “straddling regime.”⁵² (b) Zoomed-in plot for negative qubit-resonator detuning, the most commonly used operating regime.

1. Representation of the readout signal

A readout event commences with a short microwave tone directed to the resonator at the resonator probe frequency ω_{RO} . After interacting with the resonator, the reflected (or transmitted) microwave signal has the form

$$s(t) = A_{\text{RO}} \cos(\omega_{\text{RO}}t + \theta_{\text{RO}}), \quad (147)$$

where ω_{RO} is the “carrier frequency” used to probe the resonator. A_{RO} and θ_{RO} are, respectively, the qubit-state-dependent amplitude and phase that we want to measure. One can equivalently use a “complex analytic representation” of the signal,

$$\begin{aligned} s(t) &= \text{Re}\{A_{\text{RO}}e^{j(\omega_{\text{RO}}t + \theta_{\text{RO}})}\} \\ &= \text{Re}\{A_{\text{RO}}\cos(\omega_{\text{RO}}t + \theta_{\text{RO}}) + j\sin(\omega_{\text{RO}}t + \theta_{\text{RO}})\} \end{aligned} \quad (148)$$

where Re takes the real part of an expression, e.g., $\text{Re}[\exp(jx)] = \text{Re}(\cos x + j\sin x) = \cos x$.

To gain intuition, we can rewrite Eq. (148) in a static “phasor” notation that separates out the time dependence $\exp(j\omega_{\text{RO}}t)$

$$s(t) = \text{Re}\left\{\underbrace{A_{\text{RO}}e^{j\theta_{\text{RO}}}}_{\text{phasor}} e^{j\omega_{\text{RO}}t}\right\}, \quad (149)$$

where the phasor $A_{\text{RO}}e^{j\theta_{\text{RO}}} \equiv A_{\text{RO}}\angle\theta_{\text{RO}}$ is a shorthand that fully specifies a harmonic signal $s(t)$ at a known frequency ω_{RO} . To perform qubit readout, we want to measure the “in-phase” component I and a “quadrature” component Q of the complex number represented by the phasor

$$A_{\text{RO}}e^{j\theta_{\text{RO}}} = A_{\text{RO}}\cos\theta_{\text{RO}} + jA_{\text{RO}}\sin\theta_{\text{RO}}, \quad (150)$$

$$\equiv I + jQ \quad (151)$$

to determine the amplitude A_{RO} and the phase θ_{RO} (Fig. 20).

2. I-Q mixing

One direct means to extract I and Q is to perform a “homodyne” or “heterodyne” measurement using an analog “I-Q mixer.” Figure 21 shows a basic electrical schematic of an I-Q mixer. The readout signal $s(t)$ and a reference local-oscillator signal $y(t) = A_{\text{LO}}\cos\omega_{\text{LO}}t$ are fed into the mixer via the RF and LO mixer ports. The mixer then equally splits the signal and local oscillator into two branches and multiplies them in the following way: in the I -branch, the signal $s_I(t) = s(t)/2$ is multiplied by the local oscillator $y_I(t) = (A_{\text{LO}}/2)\cos\omega_{\text{LO}}t$; and in the Q -branch, the signal $s_Q(t) = s(t)/2$ is multiplied by a $\pi/2$ -phase-shifted version of the local oscillator, $y_Q(t) = -(A_{\text{LO}}/2)\sin\omega_{\text{LO}}t$. The “-” sign arises from the choice of using a $A(\cos\omega t + \phi)$ as the reconstructed real signal. At the I and Q ports, the output signals $I(t)$ and $Q(t)$ contain terms at the sum and difference frequencies, generally referred to as an “intermediate frequency,” $\omega_{\text{IF}} = \omega_{\text{RO}} \pm \omega_{\text{LO}}$. The resulting signals are low-pass filtered, passing only the terms at the difference frequency, $I_{\text{IF}}(t)$ and $Q_{\text{IF}}(t)$, which are then digitized. After digital signal processing, one obtains the static in-phase (I) and quadrature (Q) components, from which one calculates the amplitude A_{RO} and the phase θ_{RO} .

Microwave mixers use square-law-type diodes to implement multiplication. The optical analog of a mixer operation is a

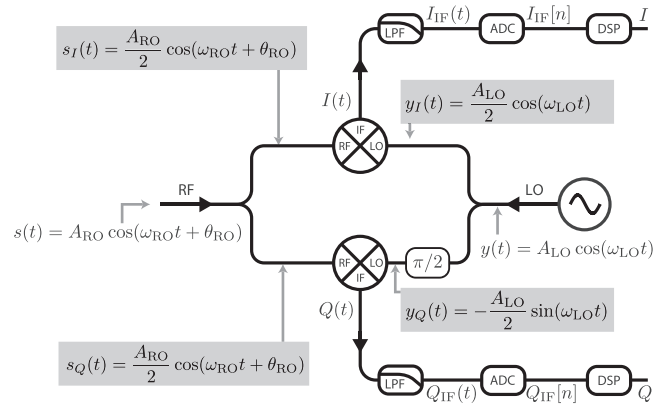


FIG. 21. Schematic of an I-Q mixer. A readout pulse at frequency ω_{RO} enters the RF port, where it is equally split into two paths. A local oscillator at frequency ω_{LO} enters the LO port, where it is equally split into two paths, one of which undergoes a $\pi/2$ -radian phase rotation. To perform analog modulation, the two signals in each path are multiplied at a mixer, yielding the outputs $I(t)$ and $Q(t)$, each having frequencies $\omega_{\text{RO}} \pm \omega_{\text{LO}}$. $I(t)$ and $Q(t)$ are then low-pass-filtered (time averaged) to yield $I_{\text{IF}}(t)$ and $Q_{\text{IF}}(t)$ at the intermediate frequency $\omega_{\text{IF}} = |\omega_{\text{RO}} - \omega_{\text{LO}}|$, and subsequently digitized using an analog-to-digital (ADC) converter. If $\omega_{\text{IF}} \neq 0$, then digital signals $I_{\text{IF}}[n]$ and $Q_{\text{IF}}[n]$ are further digitally demodulated using digital signal processing (DSP) techniques to extract the amplitude and phase of the readout signal.

combination of a balanced (50–50) beamsplitter followed by optical photodetectors, as shown in the inset of Fig. 22(a). The signal and local-oscillator optical fields are first combined at the beamsplitter, yielding superpositions of both fields, and then detected at the photodetectors, which act as square-law devices. To build intuition for how this works, the square of the sum of two electric fields $(E_1 + E_2)^2 = E_1^2 + E_2^2 + 2E_1E_2$ has a cross term that is the multiplication of the two fields. We refer the reader to Ref. 319 for further details.

3. Homodyne demodulation

One direct means to extract I and Q is to perform a microwave homodyne measurement using an analog I-Q mixer of the type shown in Fig. 21. In an analog homodyne measurement, the local oscillator (LO) is chosen to be at the carrier frequency $\omega_{\text{LO}} = \omega_{\text{RO}}$. Upon mixing, $I(t)$ and $Q(t)$ contain terms at both DC ($\omega_{\text{IF}} = 0$) and terms at twice the carrier frequency. Time-averaging (filtering) $I(t)$ and $Q(t)$ directly yield the DC terms $I_{\text{IF}}(t) = I$ and $Q_{\text{IF}}(t) = Q$:

$$\begin{aligned} I &= \frac{1}{T} \int_0^T dt s_I(t) y_I(t) \\ &= \frac{A_{\text{RO}} A_{\text{LO}}}{8} \cos(\theta_{\text{RO}}), \end{aligned} \quad (152)$$

$$\begin{aligned} Q &= \frac{1}{T} \int_0^T dt s_Q(t) y_Q(t) \\ &= \frac{A_{\text{RO}} A_{\text{LO}}}{8} \sin(\theta_{\text{RO}}), \end{aligned} \quad (153)$$

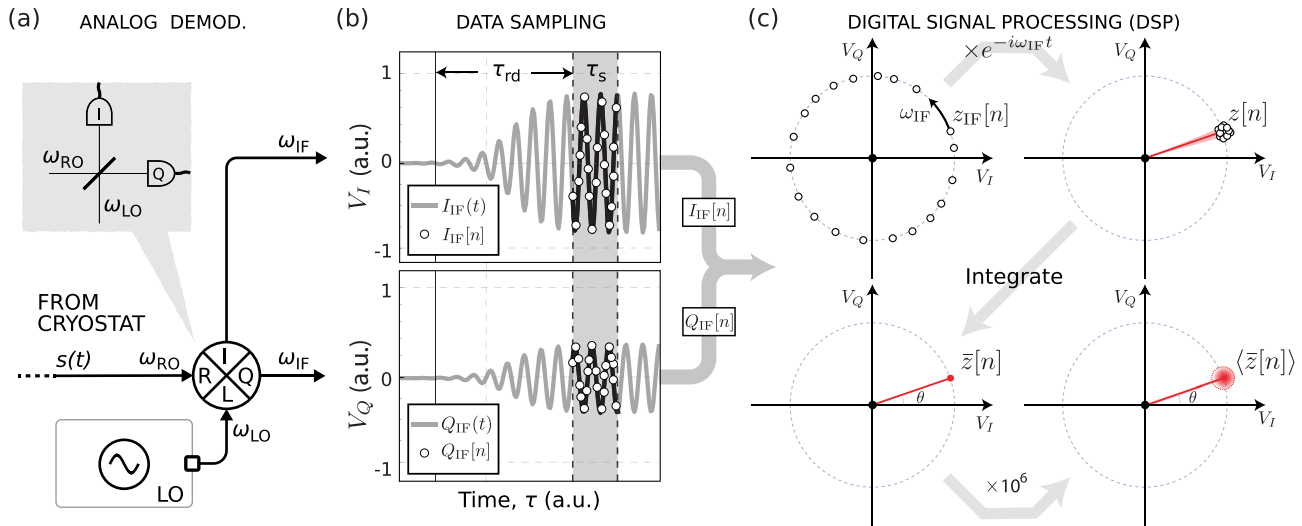


FIG. 22. Schematic of the heterodyne detection technique. (a) The signal with frequency ω_{RF} from the cryostat is mixed with a carrier tone with frequency ω_{LO} , yielding two quadratures at a down-converted intermediate frequency $\omega_{IF} = |\omega_{RO} - \omega_{LO}|$, and 90° out-of-phase with each other. (b) The two signals are passed into two different analog-to-digital converter (ADC) channels. To avoid sampling the resonator transient, some readout delay (τ_{rd}) corresponding to the resonator linewidth may be added, and the two signals are sampled for a time τ_s . In this case, the white dots represent the sampled points. (c) The sampled traces are postprocessed and after some algebra, the sampled data points are averaged into a single point in the (I , Q)-plane. To extract statistics of the readout performance, i.e., single-shot readout fidelity, a large number of (I , Q)-records are acquired, yielding a 2D-histogram, with a Gaussian distributed spread given by the noise acting on the signal.

where T is a time interval taken to be an integer number of periods of the readout signal. I and Q are then sampled and used to calculate the amplitude and phase,

$$A_{RO} \propto \sqrt{I^2 + Q^2}, \quad (154)$$

$$\theta_{RO} = \arctan(Q/I). \quad (155)$$

Note that the global value of A_{RO} or θ_{RO} is not what matters; what matters is the “change” in A_{RO} and θ_{RO} between the qubit being in state $|0\rangle$ and state $|1\rangle$. For example, the value of A leaving the resonator and the value $G \times A$ reaching a measurement stage are different, where G represents the net gain in the measurement amplifier chain. However, the gain is the same, independent of the qubit state, whereas A may be different, e.g., $A_{RO}^{(0)} = G \times A_{|0\rangle}$ or $A_{RO}^{(1)} = G \times A_{|1\rangle}$. Similarly, the propagation phase ϕ accumulated while a signal travels between the resonator and the measurement stage is also independent of the qubit state, and simply imparts a phase offset to the qubit-induced phase shift, e.g., $\theta_{RO}^{(0)} = \theta_{|0\rangle} + \phi$ or $\theta_{RO}^{(1)} = \theta_{|1\rangle} + \phi$.

Homodyning works in principle, but there are two drawbacks. First, signals directly demodulated to DC may be subject to lower signal-to-noise ratios, since they fight against $1/f$ electronics noise, as well as any other noise signals that may have inadvertently been demodulated (e.g., via a square-law detector). The second is that homodyning is not compatible with frequency division multiplexing (FDM), where a single pulse can be used to interrogate N resonators at different frequencies by applying tones at each resonator frequency using the superposition principle, e.g.,

$$s(t) = \sum_{i=1}^N A_{RO}^{(i)} \cos(\omega_{RO}^{(i)} t + \theta^{(i)}). \quad (156)$$

Homodyning an FDM signal will put all resonator signals at DC, and once downconverted, they cannot be differentiated. To work around this, it is generally advantageous to use “heterodyning,” which uses a two-step demodulation process via an intermediate frequency ω_{IF} . Such a scheme is easily compatible with the concept of FDM, because a readout signal is first demodulated to unique intermediate frequencies (IF) frequencies $\omega_{IF}^{(i)}$, and then digitally demodulated to extract each $A_{RO}^{(i)}$ and $\theta^{(i)}$. In the following, we will consider $N = 1$ for simplicity, but the process is applicable to larger N provided the frequencies are sufficiently spaced to avoid interference with one another during the demodulation process.

4. Heterodyne demodulation

In a heterodyne scheme, a local oscillator at frequency ω_{LO} is offset by an intermediate frequency ω_{IF} to target a unique readout frequency ω_{RO} . Up-conversion techniques such as single-sideband modulation with suppressed carrier (SSB-SC) using balanced I-Q mixers (operated in reverse compared with Fig. 21) are commonly used to create such readout signals. We refer the reader to Ref. 318 for more information on how to create such pulses.

Here, we want to extract A_{RO} and θ_{RO} (or their scaled and offset versions) from the reflected/transmitted tone using a heterodyning scheme. The first step is to perform analog I-Q mixing, as illustrated in Fig. 22(a). In contrast to the homodyning case, here, the local oscillator and readout tone are at different frequencies, $\omega_{IF} = |\omega_{RO} - \omega_{LO}| > 0$. Mixing the LO and RO signals yields the signals $I(t)$ and $Q(t)$ with terms at both sum and difference frequencies. Filtering out the sum frequencies using low-pass filtering (time averaging) yields the IF signals:

$$I_{\text{IF}}(t) = \frac{1}{T} \int_0^T (dt) s_I(t) y_I(t) = \frac{A_{\text{RO}} A_{\text{LO}}}{8} \cos(\omega_{\text{IF}} t + \theta_{\text{RO}}), \quad (157)$$

$$Q_{\text{IF}}(t) = \frac{1}{T} \int_0^T (dt) s_Q(t) y_Q(t) = \frac{A_{\text{RO}} A_{\text{LO}}}{8} \sin(\omega_{\text{IF}} t + \theta_{\text{RO}}). \quad (158)$$

As before, we have omitted any offset phases from the LO or from the wave propagation between the resonator and the measurement. Again, these offset values are not what matters; it is the change in A_{RO} and θ_{RO} with a change in qubit state that allows state discrimination.

The analog-demodulated $I_{\text{IF}}(t)$ and $Q_{\text{IF}}(t)$ are now oscillating at a frequency that is generally low enough to be digitized using commonly available analog-to-digital converters (ADCs). The resulting digital signals are now written as $I_{\text{IF}}[n]$ and $Q_{\text{IF}}[n]$

$$I_{\text{IF}}[n] = \frac{A_{\text{RO}} A_{\text{LO}}}{8} \cos(\Omega_{\text{IF}} n + \theta_{\text{RO}}), \quad (159)$$

$$Q_{\text{IF}}[n] = \frac{A_{\text{RO}} A_{\text{LO}}}{8} \sin(\Omega_{\text{IF}} n + \theta_{\text{RO}}), \quad (160)$$

where $n = t/\Delta t$ indexes the sample number of the continuous-time signals $I_{\text{IF}}(t)$ and $Q_{\text{IF}}(t)$, $\Omega_{\text{IF}} = \omega_{\text{IF}} \Delta t$ is the digital frequency, and Δt is the sampling period (typically around 1 ns). Pulsing the resonator is necessarily accompanied by a ring-up time, related to the quality factor of the resonator, and the first few samples may decrease overall signal-to-noise. Consequently, a delayed window of samples $[n_1 : n_2]$ is often used to perform the second digital demodulation of the discrete-time signals $I_{\text{IF}}[n_1 : n_2]$ and $Q_{\text{IF}}[n_1 : n_2]$. Note that more complicated windowing functions may also be used to improve state discrimination, but here we use a simple boxcar [see Fig. 22(b)].

Digital demodulation comprises the point-by-point multiplication of $I_{\text{IF}}[n_1 : n_2]$ and $Q_{\text{IF}}[n_1 : n_2]$ by $\cos \Omega_{\text{IF}} n$ and $\sin \Omega_{\text{IF}} n$. Averaging the resulting time series eliminates the $2\Omega_{\text{IF}}$ component while retaining the DC component, as in a homodyne measurement, one obtains

$$I = \frac{1}{M} \sum_{n_1}^{n_2} I_{\text{IF}}[n] \cos[\Omega_{\text{IF}} n] = \frac{A_{\text{RO}} A_{\text{LO}}}{16} \cos \theta_{\text{RO}}, \quad (161)$$

$$Q = \frac{1}{M} \sum_{n_1}^{n_2} Q_{\text{IF}}[n] \sin[\Omega_{\text{IF}} n] = \frac{A_{\text{RO}} A_{\text{LO}}}{16} \sin \theta_{\text{RO}}, \quad (162)$$

where $M = n_2 - n_1 + 1$. As before, I and Q can then be used to find A_{RO} and θ_{RO} .

The same procedure may be viewed in the complex I - Q plane by the analytic function $z_{\text{IF}}[n]$, as illustrated in Figs. 22(c) and 22(d)

$$z_{\text{IF}}[n] = I_{\text{IF}}[n] + jQ_{\text{IF}}[n] \equiv V_I[n] + jV_Q[n] \quad (163)$$

$$= \frac{A_{\text{RO}} A_{\text{LO}}}{8} [\cos(\Omega_{\text{IF}} n + \theta_{\text{RO}}) + j \sin(\Omega_{\text{IF}} n + \theta_{\text{RO}})] \quad (164)$$

$$= \frac{A_{\text{RO}} A_{\text{LO}}}{8} e^{j\theta_{\text{RO}}} e^{j\Omega_{\text{IF}} n}, \quad (165)$$

where the digital in-phase and quadrature signals are represented here as the voltages $V_I[n]$ and $V_Q[n]$ sampled by the ADC, and we have separated the static phasor $(A_{\text{RO}} A_{\text{LO}}/8) \exp[j\theta_{\text{RO}}]$ from the rotating

term $\exp[j\Omega_{\text{IF}} n]$. One can digitally demodulate the time series $z_{\text{IF}}[n]$ by multiplying by the complex conjugate of the oscillatory exponential,

$$z[n] = z_{\text{IF}}[n] \cdot e^{-j\Omega_{\text{IF}} n}, \quad (166)$$

where $\cdot$ indicates a point-by-point multiplication, and the result is a vector of length M of nominally identical values of the phasor—one for each sample point—with a small amount of additive noise due to noise in the measurement chain, digitization errors, etc. A singular phasor value is then estimated by taking the average,

$$\bar{z}[n] = \frac{1}{M} \sum z[n] \quad (167)$$

$$= \frac{A_{\text{RO}} A_{\text{LO}}}{8} e^{j\theta_{\text{RO}}}. \quad (168)$$

Such “single-shot measurements” may then be repeated a large number of times to obtain an ensemble average $\langle \bar{z}[n] \rangle$.

C. Weak and strong qubit measurements: Impact of noise

In quantum measurements, noise plays an essential role as it dictates the fidelity of its outcome,^{124,320} recall Fig. 22(c). In the absence of noise, any nonzero dispersive shift (resulting in a resonator field displacement) would suffice to unambiguously separate the qubit states, given a properly chosen resonator linewidth. In practice, however, the outcome of the quantum measurement is generally Gaussian distributed in the (I, Q) -plane due to presence of classical and quantum noise. In this section, we review the main sources of noise, as well as how it impedes our ability to extract information from the quantum system. For a rigorous discussion of noise and quantum measurements, the interested reader is referred, e.g., to the work by Clerk *et al.*¹²⁴ and to the textbook by Haus.¹²³

The total noise added to the signal has multiple origins. One part of the noise is associated with the microwave signal used to probe the resonator, where each photon has an intrinsic quantum noise power of $\hbar\omega/2$ per unit bandwidth. Another contribution comes from the phase-preserving amplifiers, adding both classical noise and at least $\hbar\omega/2$ of noise as required by Heisenberg’s uncertainty relation. Finally, any attenuation of the signal prior to the first amplifier will appear as added noise. Combined, these noise sources amount to a “system noise temperature,” which can be characterized using a sensitive thermometer, such as a shot-noise tunnel junction³²¹ or a qubit³²² as a sensor.

The noise results in time-dependent fluctuations of the measured signal, which in turn translates into uncertainty in our demodulated signals, see Fig. 22(c). This can be intuitively understood by considering that our heterodyne detection method requires us to sample for a finite amount of time.

To quantify the impact of the noise on our measurement, we first project the distributed (I, Q) data—corresponding to $|0\rangle$ and $|1\rangle$ —onto the axis for which their relative separation in the complex plane is maximized.⁴³⁴ The line that is used to separate between $|0\rangle$ and $|1\rangle$ is called a “separatrix.”

The noise can now be quantified by comparing the widths of the Gaussian probability distribution surrounding the mean with the peak separation in the (I, Q) -plane, thus defining a signal-to-noise ratio

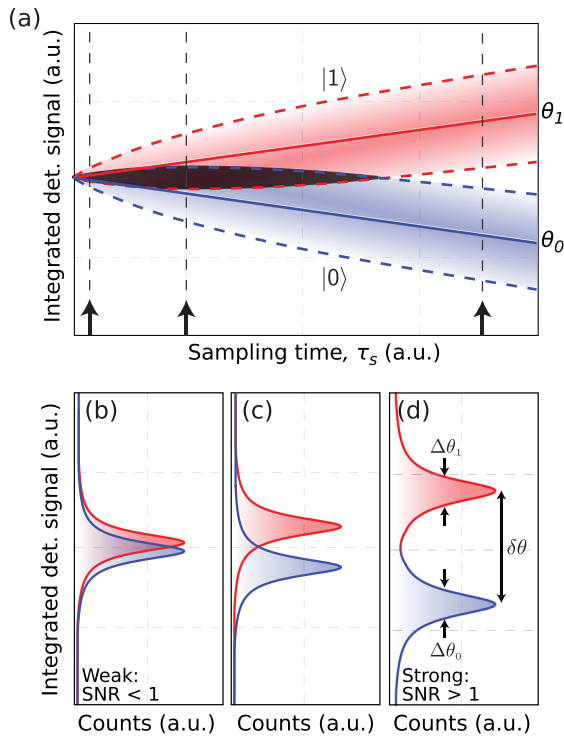


FIG. 23. (a) Qubit state distribution throughout the course of sampling the readout signal in the presence of noise. The separation between the peaks (solid lines) increases linearly in time, whereas the peak widths only increase as $\sqrt{t}$. Image inspired by Clerk *et al.*¹²⁴ The three black arrows represent line cuts for three sampling times: (b) For short sampling time, the states are not separated, resulting in a weak measurement ($\text{SNR} < 1$). (c) After a longer sampling time, the peaks start to get separated, (d) finally getting fully resolved, resulting in a strong measurement ($\text{SNR} > 1$).

$\text{SNR} = \delta\theta / (\Delta\theta_0 + \Delta\theta_1)$, see Fig. 23(a), with $\delta\theta = |\theta_1 - \theta_0|$ representing the signal and $\Delta\theta_0$, $\Delta\theta_1$ represent the noise (2σ) of each distribution. The SNR allows us to distinguish between a weak and a strong quantum measurement, as illustrated in Figs. 23(b)–23(d).

In a weak measurement, the probabilities are broadly distributed as compared to their relative separation ($\text{SNR} < 1$), which means that only partial information of the quantum state is revealed to the observer, see Fig. 23(b). In a strong measurement, on the other hand, the quantum state is collapsed onto one of the two eigenstates. In this case, the outcome of the measurement can be distinguished unambiguously, which is reflected in two fully separated distributions ($\text{SNR} > 1$), see Fig. 23(d).

In many applications of quantum measurements, it is necessary to unambiguously (and with high fidelity) tell the outcome without repeating the readout measurement. This is known as “single-shot readout” and it often requires the use of a parametric amplifier—a pre-amplifier used to increase system SNR—which is further discussed in Sec. VE3.

Assuming that the widths of the two distributions are identical, $\Delta\theta_0 = \Delta\theta_1 = \Delta\theta$, the separation error can be calculated by deriving the weight of the overlapping region of the Gaussian distributions as¹⁵⁷

$$\epsilon_{\text{sep}} = \frac{1}{\sqrt{2\pi(\Delta\theta)^2}} \int_{\theta=\frac{\theta_0+\theta_1}{2}}^{\infty} \exp\left[-\frac{(\theta-\theta_1)^2}{2(\Delta\theta)^2}\right] d\theta$$

$$= \frac{1}{2} \text{erfc}\left[\frac{|\theta_0 - \theta_1|}{2\sqrt{2(\Delta\theta)^2}}\right], \quad (169)$$

where $\text{erfc}(x)$ denotes the complementary Gaussian error function, defined as

$$\text{erfc}(x) = 1 - \frac{2}{\sqrt{\pi}} \int_x^{\infty} e^{-t^2} dt. \quad (170)$$

Using the erfc in Eq. (170), the separation error in Eq. (169) can be compactly expressed in terms of the signal-to-noise ratio

$$\epsilon_{\text{sep}} = \frac{1}{2} \text{erfc}\left[\frac{\text{SNR}}{2}\right]. \quad (171)$$

Note, however, that the separation error between the two state distributions only tells us the signal-to-noise ratio of our detection scheme. On top of the separation error, fidelity is reduced if the qubit relaxes (or is excited) during the readout. This will result in a count on the “wrong” side of the threshold. This leads to an additional constraint on the readout; The readout cycle needs to be completed on a time scale much shorter than the qubit relaxation time.

In summary, we see that to optimize the qubit readout fidelity, the readout needs to fulfill the following two requirements:

- “Fast readout”: The readout cycle needs to be completed within a time that is short compared with the qubit coherence time. The longer the readout time, the more likely the qubit is to relax, thus reducing the readout fidelity.
- “High signal-to-noise ratio”: The signal-to-noise ratio needs to be sufficiently large to suppress the state separation errors below an acceptable limit where it does not limit the readout fidelity.

In Secs. VD and VE3, we review how these two conditions are met by carefully engineering the signal path of the readout circuitry.

D. “Purcell filters” for faster readout

To ensure high-fidelity readout performance, it is important to perform single-shot readout at a time scale much shorter than the qubit coherence time, $\tau_{ro} \ll T_1$. This motivates us to: (i) make the resonator linewidth wide, thus reducing its ring-up time, τ_{rd} , and (ii) keep the integration time τ_s as short as possible, see Fig. 22(b). The ability to isolate a quantum system from decohering into its environment while, at the same time, being able to read out its state in a short time represents two contradictory criteria, which must be traded-off.³²⁰

Even though dispersive readout (in the few-photon limit) has only a small back-action on the qubit state, the qubit will still suffer from T_1 -relaxation while we are performing a measurement. In fact, this “decay during the readout” often limits the readout fidelity, reducing it to

$$F(\tau_{ro}) = 1 - e^{-\tau_{ro}/T_1}, \quad (172)$$

where $\tau_{ro} = \tau_{rd} + \tau_s/2$ denotes the total time for the readout, consisting of the readout delay τ_{rd} due to the resonator transient, and half the

sampling time $\tau_s/2$. The fidelity drop in Eq. (172) can be interpreted as a manifestation of the competition between the time scales at which our quantum information reaches our detector or the environment first.

The limitation of qubit coherence originates from an enhanced spontaneous emission of photons, induced by its environment. This is known as the Purcell effect,³²³ and is an important consideration when designing qubit-resonator systems.³²⁴ The portion of spontaneous emission that is mediated by the resonator describes how qubit relaxation is enhanced by the resonator Q when on-resonance, and suppressed off-resonance. The aim of this section is twofold: first, we develop an intuition for how the Purcell decay limits qubit coherence, and second, how to properly mitigate this limitation by designing a so-called “Purcell filter,” which modifies the impedance seen by the qubit through the readout resonator. This allows us to maintain a fast readout, while protecting the qubit from relaxing into its environment.

If we would just choose qubit and resonator operation frequencies guided by the resonator linewidth κ , qubit-resonator coupling g , and the amount of dispersive shift χ , we would reduce the detuning between the qubit and the resonator, thus maximizing the dispersive shift (recall Fig. 20). However, this presents a trade-off between two important system parameters; on one hand, we want the qubit to be isolated from the resonator environment off-resonant to avoid Purcell-enhanced decay. On the other hand, looking at the dispersive shift, we want the two rates, g and κ to be strong, yielding larger dispersive shift as well as short resonator transient and thus a faster readout.

Fortunately, when operating in the dispersive regime, the qubit and resonator are far detuned from each other $\Delta \gg g, \kappa$, which means that their impedance (environment) can be independently engineered through filter design. In essence, one designs a filter to have strong coupling to the readout port at the resonator frequency (large κ), but isolates the qubit from its environment at the qubit frequency.^{325,326} In other words, an impedance transformation.

Depending on the design of the readout for the quantum processor to which the filter should be coupled, there are different ways to design a Purcell filter; such as quarter-wave stubs,³²⁵ low-Q bandpass filters,^{66,326} and stepped-impedance filters.³²⁷ Which one is optimal depends on the system properties such as qubit-resonator detunings, required bandwidth, and allowed insertion loss.

The most promising Purcell filter designs are the ones that allow for frequency multiplexing, such as the low-Q bandpass filter design,^{66,326} which in addition to Purcell filtering has the function of a quantum bus, connecting several frequency-multiplexed readout resonators sharing the same amplifier chain.

The Purcell effect can be framed in terms of Fermi’s golden rule, where noise in the environment causes the qubit to decay with some probability. We can gain intuition about the Purcell effect (as well as how the qubit can be protected from it) by replacing the Josephson junction in the qubit circuit with an ac-current source, outputting $I(t) = I_0 \sin(\omega t)$, with $I_0 = e\omega$ and study the rate at which power is lost into an environmental load resistor $R = Z_0 = 50 \Omega$, see Fig. 24(a).

Expressing the power lost in the resistor as $P = I_0^2 (C_g/C_\Sigma)^2 R = (e\omega\beta)^2 Z_0$, with $\beta = C_g/C_\Sigma$, the qubit Purcell decay rate into the continuum can be written as

$$\gamma_{\text{env}}^{\text{Purcell}} = \frac{1}{T_1} = \frac{P}{\hbar\omega} = \frac{(\beta e\omega)^2 Z_0}{\hbar\omega} = \frac{g^2}{\omega}. \quad (173)$$

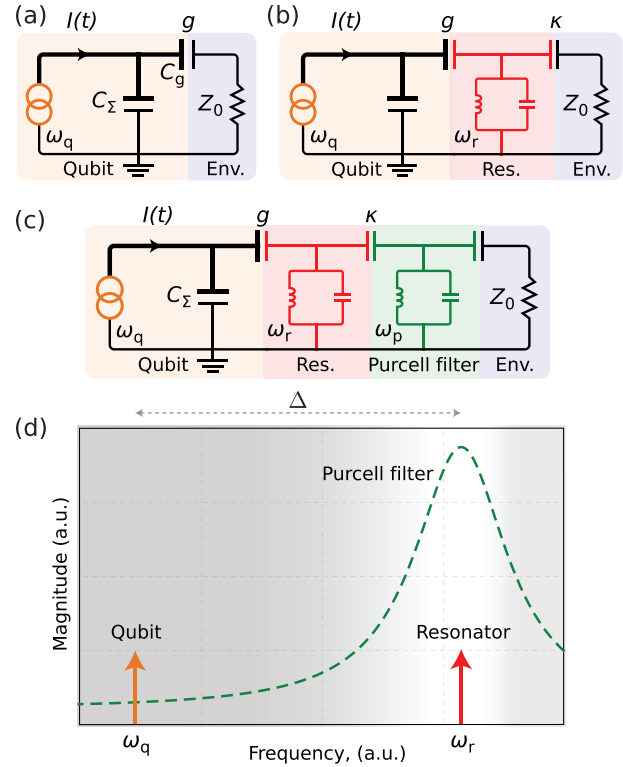


FIG. 24. (a) Circuit representation of the qubit (orange) coupled to an environment (blue) with a load resistor, Z_0 , via a capacitor C_g . To study the decay rate, the Josephson junction has been replaced with a current source, $I(t)$. (b) By adding a resonator (red) with frequency ω_r in-between the qubit and the 50Ω environment, we get the case found in a regular dispersive readout. (c) A Purcell-filter (green) is added to the circuit, providing protection for the qubit, while allowing the resonator field to decay fast in the environment. (d) Transmission spectrum of a Purcell filter (dashed green), centered around the resonator frequency (red arrow), whereas the qubit frequency (orange arrow) is far detuned.

To protect the qubit from decaying into the 50Ω environment (as well as for deploying our dispersive readout), we can now add a resonator in parallel with the qubit, see Fig. 24(b). The presence of the resonator has the effect of shaping the impedance at the qubit frequency, which in turn modifies the decay rate in Eq. (173) into

$$\gamma_{\text{res-env}}^{\text{Purcell}} = \frac{g^2}{\omega} \frac{\text{Re}[Z_r(\omega)]}{Z_0}, \quad (174)$$

where $Z_r(\omega)$ denotes the impedance of the shunted resonator. We can express the real-part of the impedance in terms of the resonator quality factor $Q = \omega_r/\kappa$ and qubit-resonator detuning $\Delta = \omega_q - \omega_r$

$$\text{Re}[Z_r(\omega)] = \frac{QZ_0}{1 + 2(\Delta/\kappa)^2}. \quad (175)$$

Now, by substituting Eq. (175) into Eq. (174), we see that the Purcell decay rate for the qubit depends on the detuning between the resonator and the qubit. This is intuitive, since the resonator can be thought of as a bandpass filter, with center frequency ω_r and

bandwidth κ . For the resonant condition, i.e., when $\Delta = 0$, the emission rate into the resonator takes the form

$$\gamma_{\text{res-env}}^{\text{Purcell}} = \frac{g^2}{\omega_r} \frac{\text{Re}[Z_r]}{Z_0} \Big|_{\Delta=0} = \frac{g^2}{\omega_r} Q = \frac{g^2}{\kappa}. \quad (176)$$

In the dispersive regime $\Delta \gg g, \kappa$, which is also relevant for us in the context of qubit readout, we can make the approximation $\text{Re}[Z_r] \approx QZ_0(\kappa/\Delta)^2$, yielding the familiar expression for the Purcell decay rate in the circuit QED³²⁴

$$\gamma_{\text{res-env}}^{\text{Purcell}} = \frac{g^2}{\omega_r} \frac{\text{Re}[Z_r]}{Z_0} \Big|_{\Delta \gg g, \kappa} = \frac{g^2}{\omega_r} Q \left(\frac{\kappa}{\Delta} \right)^2 = \left(\frac{g}{\Delta} \right)^2 \kappa. \quad (177)$$

The relation for the Purcell limit in Eq. (177) thus provides us with a useful guide on how to design the coupling rates g and κ , as well as how large qubit-resonator detuning Δ is necessary to avoid the Purcell limit.

In recent years, however, the intrinsic coherence times for superconducting qubits have reached above 100 μ s, recall Sec. II, imposing practical limitations on how to simultaneously optimize g and κ , to render fast readout without compromising the qubit coherence. Considering the parameters in Eq. (177), it is not possible to just increase the bound on the relaxation time T_1 , without at the same time trading off the readout speed and contrast.

We can now introduce the Purcell filter [Figs. 24(c) and 24(d)] in between the readout resonator and the 50 Ω environment, leading to a reduction of the decay rate according to³²⁵

$$\gamma_{\text{res-filter-env}}^{\text{Purcell}} = \kappa \left(\frac{g}{\Delta} \right)^2 \left(\frac{\omega_q}{\omega_r} \right) \left(\frac{\omega_r}{2Q_F\Delta} \right), \quad (178)$$

where Q_F denotes the quality factor of the Purcell filter. This is schematically depicted in Fig. 24(d), where the Purcell filter is placed around the resonator frequency, while far detuned from the qubit.

E. Improve signal-to-noise ratio: Parametric amplification

In light of the aforementioned limited signal-to-noise ratio associated with the low photon number of the dispersive qubit readout, and the short sampling time, the noise temperature of the amplifier chain plays a crucial role in determining the fidelity of the measurement.

A useful benchmark for quantum measurements is the “quantum efficiency,” defined as

$$\eta_{\text{SQL}} = \frac{\hbar\omega_{\text{RF}}}{k_B T_{\text{sys}}}, \quad 0 < \eta_{\text{SQL}} < 1, \quad (179)$$

which quantifies the photon energy to the system noise temperature T_{sys} , thus yielding a measure of how close the signal is to the standard quantum limit (SQL), as imposed by Heisenberg’s uncertainty relation, adding 1/2 photon of noise when η_{SQL} approaches unity. Since the energy of each microwave photon is much smaller than that of optical photons, it is not easy to build a single-photon detector operating in the microwave domain.^{328,329} Instead, for heterodyne detection in the circuit QED, a set of cascaded microwave amplifiers are used. The system noise temperature for the amplifier chain can be expressed in

terms of the individual gain figures G_n and noise temperatures $T_{N,n}$ of each constituent amplifier³³⁰

$$T_{\text{sys}} = T_{N,1} + \frac{T_{N,2}}{G_1} + \frac{T_{N,3}}{G_1 G_2} + \dots \quad (180)$$

where $n = 1, 2, 3, \dots$ denotes the order of the amplifiers, starting from the qubit chip. From Eq. (180), we see that the noise temperature T_{sys} is dominated by the noise contribution from the first amplifier, whereas the gain of the first amplifier has the effect of suppressing the noise from the second amplifier, and so on. If the first amplifier is a low-noise high-electron mobility transistor (HEMT) amplifier ($T_N \approx 2$ K), the system noise temperature when implemented in a cryostat is around 7–10 K, corresponding to around 10–20 added photons of noise per signal photon around 5 GHz. In practice, this is generally too much noise to perform a single-shot readout.

This inherently poor signal-to-noise ratio has revived interest in developing quantum-limited parametric amplifiers (PAs)—tailored for the readout of superconducting qubits—featuring the ability to amplify small microwave signals, and adding only approximately the minimum amount of noise allowed by quantum mechanics.^{123,124,320}

1. Quantum-limited amplification processes

In a linear, phase-insensitive amplifier, an input state $\langle a_{\text{in}} \rangle$ is amplified to an output state $\langle a_{\text{out}} \rangle$, with an amplitude gain factor $\sqrt{G}$. Microwaves are electromagnetic fields and therefore considered to be coherent light comprising microwave photons. As such, they must obey the commutation relations^{123,320,331,332}

$$[a_{\text{in}}, a_{\text{in}}^\dagger] = [a_{\text{out}}, a_{\text{out}}^\dagger] = 1, \quad (181)$$

from which it can be shown that it is not possible to simultaneously amplify both quadratures of a_{in} without also adding noise. This is known as “Caves theorem” after the work by Caves,³²⁰ based on an earlier work by Haus and Mullen.³³¹ This can be seen by considering the scattering relation between the input and output microwave fields

$$a_{\text{out}} = \sqrt{G} a_{\text{in}}. \quad (182)$$

The gain relation in Eq. (182) constitutes our ideal scenario for an amplifier process. However, the problem is that this relation does not satisfy the commutation relation in Eq. (181). To satisfy this relation, we need to also take into account the vacuum fluctuations of another mode^{124,333–335}—called the “idler” mode b_{in} , also satisfying the same commutation relation $[b_{\text{in}}, b_{\text{in}}^\dagger] = 1$. To satisfy the commutation relation, the idler mode is amplified by the gain factor $\sqrt{G-1}$. For a large gain, it can be shown that a minimum amount of half a photon of noise $\hbar\omega/2$ needs to be added to a signal amplified with gain $\sqrt{G}$.

Finally, taking the idler mode into account, the scattering relation for the coherent output field takes the form

$$a_{\text{out}} = \underbrace{\sqrt{G} a_{\text{in}}}_{\text{Amplification}} + \underbrace{\sqrt{G-1} b_{\text{in}}^\dagger}_{\text{Added idler noise}}. \quad (183)$$

Generally, this process results in a so-called “phase-insensitive” parametric amplification process, in which both quadratures of the input field get equally amplified. This is illustrated in Fig. 25, where

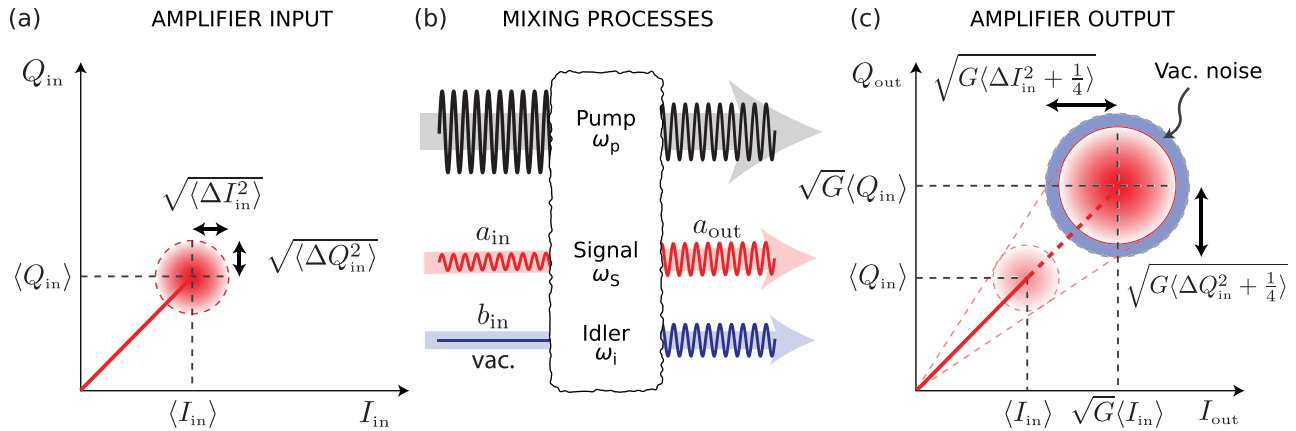


FIG. 25. Schematic illustration of a quantum-limited, phase-preserving parametric amplification process of a coherent input state, $a_{in} = I_{in} + iQ_{in}$. (a) The state is centered at $(\langle I_{in} \rangle, \langle Q_{in} \rangle)$ and has a noise represented by the radii of the circles along the real and imaginary axes, respectively. (b) Scattering representation of parametric mixing, where the signal and pump photons are interacting via a purely dispersive nonlinear medium. (c) In the case of phase-preserving amplification, both quadratures get amplified by a factor $\sqrt{G}$, while (in the ideal case) half a photon of noise gets added to the output distribution (blue). Image inspired by Flurin.³³²

the in-phase (I_{in}) and quadrature (Q_{in}) components of the fields are plotted, before and after the parametric amplifier.

Considering the amplification process in Eq. (183), we can find a special case for the idler mode, for which noiseless amplification can be accomplished for one of the two quadratures, but at the expense of adding more noise to the other, thus not violating Heisenberg's uncertainty relation for the two field quadratures. This mode of operation is known as “phase-sensitive” amplification, and is obtained when the idler mode oscillates at the same frequency as the signal (or a multiple

thereof), but can be shifted with an overall phase $\phi \in [0, 2\pi]$. By substituting the idler mode in Eq. (183) with $b_{in} = e^{i\phi} a_{in}$, the scattering relation becomes

$$a_{out} = \underbrace{\sqrt{G}a_{in}}_{\text{Amplification}} + \underbrace{e^{-i\phi}\sqrt{G-1}a_{in}^\dagger}_{\text{Phase-dep. noise}}. \quad (184)$$

The overall phase factor allows us to tune the orientation of the amplification (or de-amplification) by means of the pump phase, thus allowing us to choose a quadrature for which we want to reduce the noise, see Fig. 26. Intuitively, this can be understood by considering the interference that occurs when two waves with the same frequency are confined in space, where we obtain constructive or destructive interference, depending on the phase between the two waves. Due to this interference, the noise can be suppressed even below the standard quantum limit (without violating Heisenberg's uncertainty relation). This is known as “single-mode squeezing” and was first observation in superconducting circuits by Yurke *et al.*³³⁶ In particular, after the theoretical prediction by Gardiner,³³⁷ Murch *et al.* showed that the coherence time of a qubit can be enhanced when the qubit is exposed to squeezed vacuum.^{338,339} Also “two-mode squeezing” was demonstrated by Eichler *et al.*,³⁴⁰ where the demodulation setup squeezes both quadratures of the acquired signal.¹⁰⁷

In the context of qubit readout, however, phase-sensitive amplification tends to be experimentally inconvenient. This is mainly due to its phase-dependent gain, which imposes stringent requirements on continuous phase-calibration of the readout signal.

For a detailed theoretical framework developed for quantum limited amplification, the reader is referred to an earlier work by Roy and Devoret,³⁴¹ Clerk *et al.*,¹²⁴ and Wustmann and Shumeiko.³⁴²

2. Operation of Josephson parametric amplifiers

In this section, we review the basic operation characteristics of parametric amplifiers, and in particular, the Josephson parametric amplifiers (JPAs), that have been exploited for qubit readout. Although many different flavors of parametric systems exist, we here

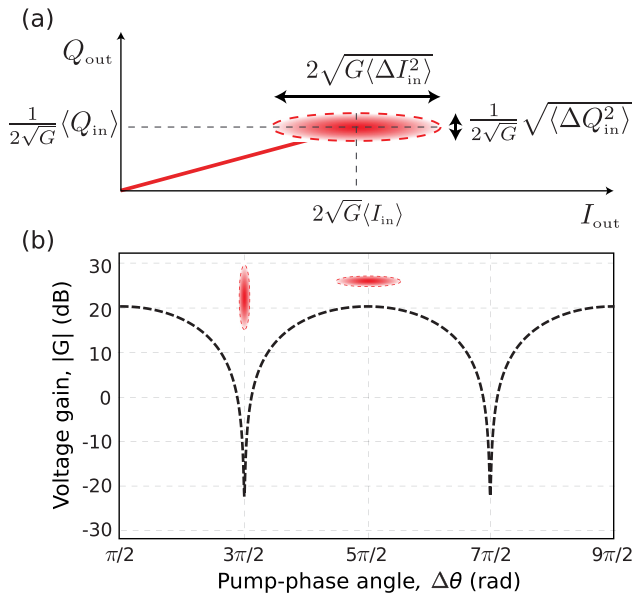


FIG. 26. Phase-sensitive parametric amplification. (a) In contrast to the phase-insensitive operation, phase-sensitive parametric amplification allows us to suppress the noise along one axis. Consequently, the noise is added to the other quadrature. (b) Voltage gain as a function of pump-phase angle, in which the amplification depends on the phase of the pump, providing either amplification or de-amplification of the quadrature voltage.

focus on the resonant implementations of the Josephson parametric amplifier (JPA), serving as a good system for reviewing the fundamental concepts around parametric amplification.

All parametric amplifiers operate based on one fundamental principle: the incoming “signal” photons are mixed with an applied “pump” tone via an intrinsic nonlinearity, by which energy from the pump is converted into signal photons and thereby providing gain. As we recall from Sec. II, such a nonlinearity can be engineered in the microwave domain using Josephson junctions,³⁴³ and the resonant parametric amplifiers are built from slightly anharmonic oscillators.

The first Josephson parametric amplifiers were built from a coplanar waveguide resonator, made nonlinear by adding a nonlinear Josephson contribution to its total inductance, see Fig. 27(a). The word “parametric” refers to the process of modulating (or “pumping”) one of the parameters of the system’s equation-of-motion (such as frequency or damping) in time.^{342,344,345} The natural way to perform this parametric pumping is to modulate the nonlinear Josephson inductance, which in turn has the effect of modulating the resonator frequency $\omega_r(t) = 1/\sqrt{L(t)C}$.

Depending on how the pumping is implemented, there are two different mixing processes that can be exploited in Josephson parametric amplifiers, which determines the characteristics of the amplifier. These are illustrated in Figs. 27(b) and 27(c) and are referred to as

“current-pumping”^{344,346–349} and “flux-pumping,”^{95,342,345,350–355} respectively. The type of mixing process that takes place depends on the leading order of the nonlinearity of the system, as reflected in its Hamiltonian. In the following, we briefly review the difference between these two pump-schemes.

In the current-pumped case, the dynamics of the system has characteristics of a Duffing oscillator,³⁵⁶ with a fourth-order nonlinear term in addition to the harmonic oscillator term in its Hamiltonian

$$H = \omega_r c^\dagger c + K c^\dagger c^\dagger c c, \quad (185)$$

where c denotes the resonator field operator and K is the “Kerr-nonlinearity.” This process is a so-called “four-wave mixing” process, since it mixes four photons: one signal (ω_s), one idler (ω_i), and two pump photons (ω_p), obeying the energy conservation relation $\omega_s + \omega_i = 2\omega_p$, see Fig. 27(b). Pioneered by Yurke,³⁴⁴ this was the first demonstration of microwave amplification using a Josephson parametric amplifier. When the signal and idler modes are at the same frequency, the amplification is said to be “degenerate.” This pumping scheme is the foundation for the Josephson Bifurcation Amplifier (JBA), developed by Siddiqi *et al.*,^{348,357,358} which has been used to perform single-shot qubit readout, by mapping the quantum states onto the high and low resonator field originating from the sharp bifurcation point of the amplifier.³⁵⁹

In the other case, when the system is flux-pumped, the parametric process is driven by threading a magnetic flux Φ_{ac} through a SQUID loop, thereby modulating the frequency of the resonator. This results in a “three-wave mixing” process, comprising three photons: one signal, one idler, and one pump photon, with $\omega_s + \omega_i = \omega_p$, see Fig. 27(c). Therefore, we see that the pump frequency is about twice that of the signal $\omega_p \approx 2\omega_s$ for $\omega_s \approx \omega_i$. For degenerate, flux-pumped systems, the leading nonlinearity is a third-order term, yielding a Hamiltonian

$$H = \omega_r c^\dagger c + K(p c^\dagger c^\dagger + p^\dagger c c), \quad (186)$$

where the p operator denotes the flux-pump mode. This approach to building parametric amplifiers was developed by Yamamoto *et al.*,³⁵¹ as well as by Sandberg *et al.*⁹⁵

The flux-pumping scheme has several practical advantages. First, the large detuning of the pump makes it easier to filter, isolating the readout signal as its passing into the digitizer downstream and preventing the saturation of following amplifier stages. Second, if the resonator is a quarter-wavelength resonator, it has no resonant mode at the pump frequency ω_p , reducing spurious population or saturation of the system as well as backaction on the qubits in the processor. Third, since the flux pump line is a separate on-chip microwave line, no additional directional coupler is needed.

Due to its rich dynamics, flux-pumping has also proven a useful platform to study the quantum dynamics of Josephson parametric oscillators, both in the context of qubit readout,^{360–363} the dynamical Casimir effect,^{364–366} and to better understand their complex nonlinear dynamics.^{353,356,367–371}

In addition to the degenerate parametric interactions described above, parametric gain can be obtained between different resonant modes; either between different modes of the same resonator,^{321,372} or in-between different resonators,³⁷³ as with the Josephson parametric converter (JPC).^{332,374–378} In addition to the possibility of isolating and amplifying certain frequencies, the JPC can implement frequency

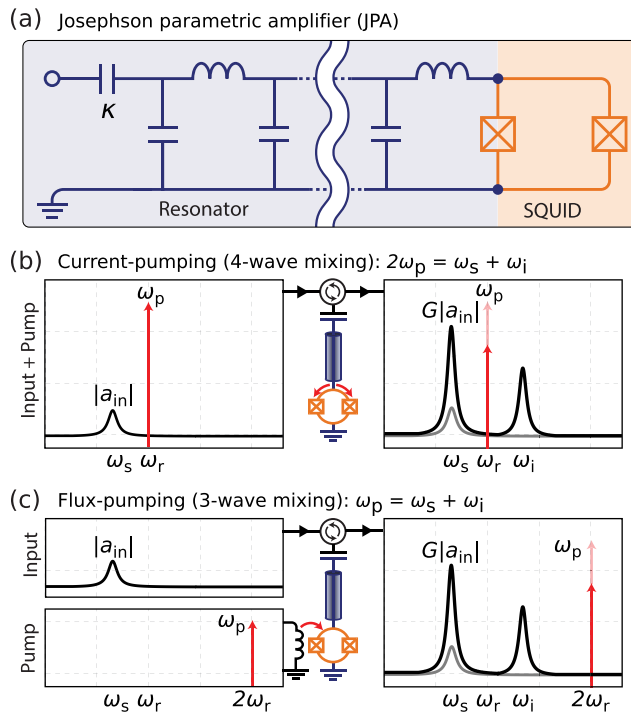


FIG. 27. Circuit schematics and pump schemes of a Josephson parametric amplifier. (a) The device consists of a quarter-wavelength resonator (blue), represented as lumped elements, shorted to ground via a Kerr-nonlinearity consisting of two parallel Josephson junctions (orange) forming a SQUID. The pump (red) can be applied in two ways; (b) either by modulating the current through the junctions (four-wave mixing) at the resonant frequency, $\omega_p \approx \omega_r$, or (c) by modulating the ac-flux Φ_{ac} around a static DC-flux point Φ_{dc} using a separate fast-flux line (three-wave mixing). The flux pump is applied at twice the resonance frequency, $\omega_p \approx 2\omega_r$.

conversion for which it has some other areas of applications compared with other types of parametric amplifiers.

3. The traveling wave parametric amplifier

In the previously described JPA, parametric amplification is realized using resonators that enhance the parametric interaction between the input signal and the Josephson junction nonlinearity. Essentially, the Q-enhancement of the resonator forces each photon to pass through the junction on average Q times before leaving the resonator, thereby enhancing the nonlinear interaction. Albeit proven to be able to reach near the standard-quantum limit of noise for readout of a small number of qubits, the future direction of the community is heading toward amplifier technologies which are compatible with multiplexed readout of several qubits coupled to the same amplifier chain.^{65,66,379–381} In this context, resonator-based parametric amplifiers suffer from two major drawbacks: First, the amplifier bandwidth is limited to the resonator linewidth, typically ≈ 10 –50 MHz, practically limiting the number of multiplexed frequencies that can be amplified. Second, since the Josephson nonlinearity is realized by a small number of junctions, the saturation power is low due to the interplay of higher order nonlinearities, effectively taking the system outside its desired operation regime.^{356,367,368,378} In practice, this limits how many readout resonators that can be simultaneously read out.

These two bottlenecks can, to a degree, be overcome with microwave engineering. For instance, the linewidth can be made an order of magnitude wider by altering the impedance along the resonator. This is called a stepped-impedance transformer, where the impedance is ramped down from a matched 50 Ω at the capacitor down to a small impedance at the SQUID³⁸² shorting the device to the ground. Also, the saturation power can be increased by distributing the nonlinearity across an array consisting of many identical junctions, reducing the Kerr-nonlinearity by a factor $1/N^2$ with N representing the number of junctions in the array. This has been demonstrated by using an array of SQUIDs in a resonator, rather than a single one.³⁵²


However, despite the above-mentioned engineering efforts to improve the resonator-based JPAs, the most prominent approach to date is to get rid of the resonator altogether and, instead, construct a microwave analog to optical parametric amplifiers, where kilometers of weakly nonlinear fibers are used. Such a device is called a “traveling wave parametric amplifier” (TWPA) and was developed to surmount the bandwidth and dynamic range limitations of the resonator-based JPAs.

Although operated in similar way, the nonlinearity of TPWAs can be realized in different ways, such as the kinetic inductance of a superconducting film^{383–385} or using an array of Josephson junctions,^{322,386,387} through which the four-wave mixing process is distributed across a nonlinear lumped element transmission line, see Fig. 28(a).


The Josephson TWPA consists of a few thousand identical unit cells, each comprising a shunt capacitor to ground and a nonlinear Josephson inductor, together yielding a characteristic impedance of $Z_0 = \sqrt{L_J/C} \approx 50 \Omega$, see Fig. 28(a).

The fact that the nonlinearity is distributed allows for a high saturation power, since each Josephson junction is accessed once. However, even though energy conservation is satisfied, the four-wave mixing process in the device, there is a problem with phase (or


(a) Josephson traveling wave parametric amplifier (JTWPA)

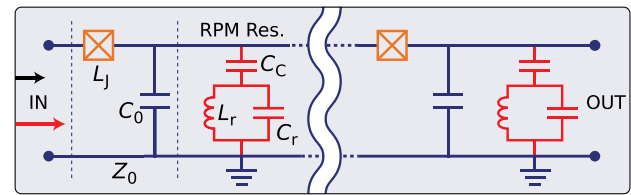

(b)

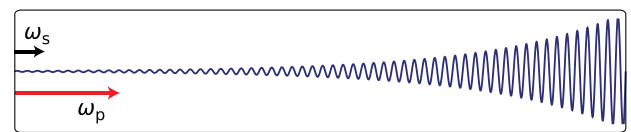

(c)

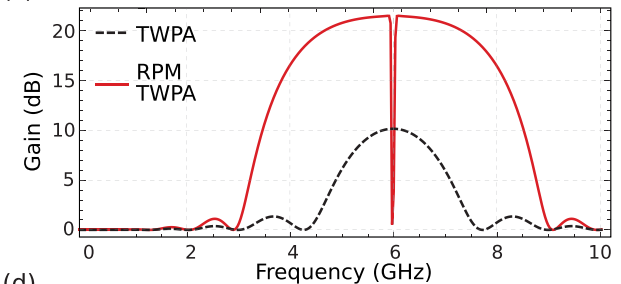

(d)

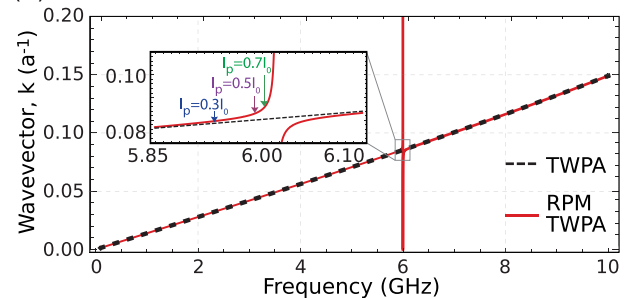


FIG. 28. (a) Simplified circuit representation of a Josephson traveling wave parametric amplifier (JTWPA). The characteristic impedance for each unit cell is set by the in-line Josephson inductor, L_J (orange) and the shunt capacitor, C (blue). A resonant LC-circuit (red) is used to phase match the four-wave amplification process. (b) Schematic of how the signal gets amplified in each unit cell as it propagates through the device. (c) Gain vs frequency for a JTWPA, with and without the resonant phase matching (RPM). (d) Dispersion relation of the TWPA, where the LC-resonators collectively open up a stopband at the resonant frequency. By applying the pump close to this frequency, the wave vector of the pump can be set to obtain a phase-matching. The optimal pump frequency depends on the pump power, as indicated in the inset. Image courtesy of Kevin O'Brien.^{322,386}

momentum) conservation. This is associated with the system nonlinearity as well as the large frequency detuning between the signal and pump photons, yielding a difference in phase-velocity between the two, which in turn gives rise to a nonflat gain profile, as well as an overall reduction in gain.³⁸⁶

Again, by taking inspiration from the dispersive engineering developed in quantum optics and photonics, where the refractive index can be periodically altered to engineer the momentum of a transferred signal, the solution to this phase-mismatch problem was introduced by O'Brien *et al.*³⁸⁶ By introducing resonators at periodic

intervals of TWPA unit cells, the pump tone can be given a “momentum kick,” effectively slowing it down and phase-matching the device by means of its wave vector. This technique is called resonant-phase matching (RPM), see Fig. 28(d), and requires that the pump frequency is set on the left side of the dispersion feature (where the wave vector diverges), defined by the resonant frequency of the phase-matching resonators. Note, finally, that broadband parametric amplification with a high dynamic range has been demonstrated in other Josephson-based circuits, e.g., the superconducting nonlinear asymmetric inductive element (SNAIL) parametric amplifier (SPA).³⁸⁸

VI. SUMMARY AND OUTLOOK

In this review, we have discussed the phenomenal progress over the last decade in the engineering of superconducting devices, the development of high-fidelity gate-operations, and quantum nondemolition measurements with a high signal-to-noise ratio. Putting these advances together, we hope that it is clear that the planar superconducting qubit modality is a promising platform for realizing near-term medium scale quantum processors. While we have focused on highlighting the advances made within the fields of realizing, controlling, and reading out planar superconducting qubits specifically used for quantum information processing, there has of course also been tremendous activity in the surrounding fields. In this final section, we briefly mention a few of those fields, and invite the reader to look into the references, for further details.

A. Quantum annealing

Superconducting qubits also form the basis for certain quantum annealing platforms.^{389,390} Quantum annealing operates by finding the ground state of a given Hamiltonian (typically a classical Ising Hamiltonian), and this state will correspond to the solution of an optimization problem. By utilizing a flux-qubit type design (see Sec. II), the company D-Wave have demonstrated quantum annealing processors⁸⁶ which have now reached beyond 2000 qubits.³⁹¹ The benchmarking of quantum annealers and attempts to demonstrate a quantum speedup for a general class of problems is a highly active research field, and we refer the reader, for example, to recent papers Refs. 392–394 and references therein.

B. Cavity based quantum information processing

A parallel effort to the planar superconducting qubits discussed in this review is the development of 3D cavity-based superconducting qubits. In these systems, quantum information is encoded in superpositions of coherent photonic modes of the cavity.⁹⁹ The cat states can be highly coherent due to the inherently high quality factors associated with 3D cavities.^{100,395,396} This approach has a fairly small hardware overhead to encode a logical qubit,³⁹⁷ and lends itself to certain implementations of asymmetric error-correcting codes due to the fact that errors due to single-photon loss in the cavity are a tractable observable to decode. Using this architecture, several important advances were recently demonstrated including extending the lifetime of an error-corrected qubit beyond its constituent parts,⁹⁸ randomized benchmarking of logical operations,³⁹⁷ a CNOT gate between two logical qubits³⁹⁸ as well as Ramsey interference of an encoded quantum error corrected qubit.³⁹⁹

C. Cryogenics and software development

We briefly mentioned the electrical engineering, software development, and cryogenic considerations associated with the control wiring and on-chip layout of medium-scale quantum processors. While dilution refrigerators are now readily available, off-the-shelf commercial products, the details of how to optimally do signal-routing and rapid data processing in a scalable fashion, is also a field in rapid development. However, with the recent demonstrations of enabling technologies such as 3D integration, packages for multilayered devices and superconducting interconnects,^{400–406} some of the immediate concerns for how to scale the “number” of qubits in the superconducting modality, have been addressed. On the control software side, there currently exist multiple commercial and free software packages for interfacing with quantum hardware, such as QCoDeS,⁴⁰⁷ the related pyCQED,⁴⁰⁸ qKIT,⁴⁰⁹ and Labber.⁴¹⁰ However, many laboratories use software platforms developed in-house, often due to the concurrent development of custom-built, highly specialized electronics and field-programmable gate array (FPGA) circuits (many of these developments are not always published, but readers may consult Refs. 184, 185, and 411 for three examples). There is currently also a large ongoing development of quantum circuit simulation and compiling software packages. Packages such as Qiskit,⁴¹² Forest (with pyQUIL⁴¹³), ProjectQ,⁴¹⁴ Cirq,⁴¹⁵ OpenFermion,⁴¹⁶ and the Microsoft Quantum Development kit⁴¹⁷ provide higher-level programming languages to compile and/or optimize quantum algorithms. For a recent review and comparison of these different software suites, we refer to Refs. 418 and 177 for a general review on advances in designing the quantum software. Since the connectivity and gate set of quantum processors can differ, details of the gate compilation implementation are an important nontrivial problem for larger-scale processors. We note that some of these software packages already interface directly with quantum processors that are available online, supplied, for example, via Rigetti Computing or the IBM Quantum Experience.

D. Quantum error correction

While the qubit lifetimes and gate fidelity have improved dramatically in the last decades, there remains a need for error correction to reach large-scale processors. While certain strategies exist to extend the computational reach of current state-of-the-art physical qubits,⁴¹⁹ for truly large-scale algorithms addressing practical problems, the quantum data will have to be embedded in an error-correcting scheme. As briefly mentioned in Secs. IV F 2 and IV G 2, certain components of the surface code quantum error correcting scheme have already been demonstrated in superconducting qubits (see, e.g., Refs. 66, 251, and 277). However, the demonstration of a logical qubit with greater lifetime than the underlying physical qubits, remains an outstanding challenge. While the surface code is a promising quantum error correcting code due to its relatively lenient fault tolerance threshold, it cannot implement a “universal” gate set in a fault-tolerant manner. This means that the error-corrected gates in the surface code need to be supplemented, for example, with a T gate, to become universal. Such gates can be implemented by a technique known as “magic state distillation.”⁴²⁰ The process of “gate-teleportation,” a precursor to magic state distillation, has already been demonstrated using FPGA-based classical feedback with planar superconducting qubits,¹⁸⁵ but showing distillation and injection into a surface code logical state

remains an open challenge. The development of new quantum codes is also a field in rapid development, and the reader may consult a recent review for more details, e.g., Ref. 178. Another important step toward large-scale quantum processor architecture is that of remote entanglement, enabling quantum information to be distributed across different nodes of a quantum processing network.^{421,422}

E. Quantum computational supremacy

Finally, we mention one of the grand challenges for superconducting qubits in the coming years: the demonstration of quantum computational supremacy.⁴²³ The basic idea is to demonstrate a calculation, using qubits and algorithmic gates, which is outside the scope of classical computers (assuming some plausible computational complexity conjectures). For a recent review article, the reader is referred to Ref. 424. A first step toward an approach to demonstrating quantum supremacy was recently reported, using 9 tunable transmons.²⁶² It is expected that with somewhere between 50 and 100 qubits,⁴²⁵ an extension of the protocol from Refs. 262 and 426, will allow researchers to sample from a classically intractable distribution, and thereby demonstrate quantum computational supremacy. The success of this program would constitute a phenomenal result for all of quantum computing.

ACKNOWLEDGMENTS

The authors gratefully acknowledge Mollie Kimchi-Schwartz, Jochen Braumüller, and Niels-Jakob Søe Loft for the careful reading of the manuscript and Youngkyu Sung for the use of his time-dependent qubit drive simulation suite and useful feedback from the entire Engineering Quantum Systems group at the MIT. The authors also acknowledge the fruitful discussion with Anton Frisk Kockum, Anita Fadavi Roudsari, Daryoush Shiri, and Christian Križan.

This research was funded in part by the U.S. Army Research Office Grants No. W911NF-14-1-0682, W911NF-18-1-0116, and W911NF-18-1-0411; the National Science Foundation Grant No. PHY-1720311; the ARO MURI W911NF-18-1-0218; the Office of the Director of National Intelligence (ODNI), Intelligence Advanced Research Projects Activity (IARPA) and the Assistant Secretary of Defense for Research and Engineering under Air Force Contract No. FA8721-05-C-0002; and the Department of Energy, Basic Energy Sciences via Lawrence Berkeley National Laboratory under Prime Contract No. DE-AC02-05CH11231. P.K. acknowledges partial support by the Wallenberg Center for Quantum Technology (WACQT) funded by the Knut and Alice Wallenberg Foundation. M.K. gratefully acknowledges support from the Carlsberg Foundation. Opinions, interpretations, conclusions, and recommendations are those of the authors and are not necessarily endorsed by the United States Government.

REFERENCES

- ¹R. Feynman, "Simulating physics with computers," *Int. J. Theor. Phys.* **21**, 467–488 (1982).
- ²S. Lloyd, "Universal quantum simulators," *Science* **273**, 1073–1078 (1996).
- ³D. P. DiVincenzo, "The physical implementation of quantum computation," *Fortschr. Phys.* **48**, 771–783 (2000).
- ⁴J. P. Dowling and G. J. Milburn, "Quantum technology: The second quantum revolution," *Philos. Trans. R. Soc. London, A* **361**, 1655–1674 (2003).
- ⁵T. D. Ladd, F. Jelezko, R. Laflamme, Y. Nakamura, C. Monroe, and J. L. O'Brien, "Quantum computers," *Nature* **464**, 45 (2010).
- ⁶M. A. Nielsen and I. L. Chuang, *Quantum Computation and Quantum Information: 10th Anniversary Edition*, 10th ed. (Cambridge University Press, New York, NY, 2011).
- ⁷C. Monroe and J. Kim, "Scaling the ion trap quantum processor," *Science* **339**, 1164–1169 (2013).
- ⁸H. Bernien, S. Schwartz, A. Keesling, H. Levine, A. Omran, H. Pichler, S. Choi, A. S. Zibrov, M. Endres, M. Greiner, V. Vuletić, and M. D. Lukin, "Probing many-body dynamics on a 51-atom quantum simulator," *Nature* **551**, 579 (2017).
- ⁹D. Loss and D. P. DiVincenzo, "Quantum computation with quantum dots," *Phys. Rev. A* **57**, 120–126 (1998).
- ¹⁰B. E. Kane, "A silicon-based nuclear spin quantum computer," *Nature* **393**, 133 (1998).
- ¹¹R. Vrijen, E. Yablonovitch, K. Wang, H. W. Jiang, A. Balandin, V. Roychowdhury, T. Mor, and D. DiVincenzo, "Electron-spin-resonance transistors for quantum computing in silicon-germanium heterostructures," *Phys. Rev. A* **62**, 012306 (2000).
- ¹²R. de Sousa, J. D. Delgado, and S. Das Sarma, "Silicon quantum computation based on magnetic dipolar coupling," *Phys. Rev. A* **70**, 052304 (2004).
- ¹³L. C. L. Hollenberg, A. D. Greentree, A. G. Fowler, and C. J. Wellard, "Two-dimensional architectures for donor-based quantum computing," *Phys. Rev. B* **74**, 045311 (2006).
- ¹⁴A. Morello, J. J. Pla, F. A. Zwanenburg, K. W. Chan, K. Y. Tan, H. Huebl, M. Möttönen, C. D. Nugroho, C. Yang, J. A. van Donkelaar, A. D. C. Alves, D. N. Jamieson, C. C. Escott, L. C. L. Hollenberg, R. G. Clark, and A. S. Dzurak, "Single-shot readout of an electron spin in silicon," *Nature* **467**, 687 (2010).
- ¹⁵A. Imamoglu, D. D. Awschalom, G. Burkard, D. P. DiVincenzo, D. Loss, M. Sherwin, and A. Small, "Quantum information processing using quantum dot spins and cavity QED," *Phys. Rev. Lett.* **83**, 4204–4207 (1999).
- ¹⁶J. R. Petta, A. C. Johnson, J. M. Taylor, E. A. Laird, A. Yacoby, M. D. Lukin, C. M. Marcus, M. P. Hanson, and A. C. Gossard, "Coherent manipulation of coupled electron spins in semiconductor quantum dots," *Science* **309**, 2180–2184 (2005).
- ¹⁷D. Englund, D. Fattal, E. Waks, G. Solomon, B. Zhang, T. Nakaoka, Y. Arakawa, Y. Yamamoto, and J. Vučković, "Controlling the spontaneous emission rate of single quantum dots in a two-dimensional photonic crystal," *Phys. Rev. Lett.* **95**, 013904 (2005).
- ¹⁸R. Hanson, L. P. Kouwenhoven, J. R. Petta, S. Tarucha, and L. M. K. Vandersypen, "Spins in few-electron quantum dots," *Rev. Mod. Phys.* **79**, 1217–1265 (2007).
- ¹⁹J. I. Cirac and P. Zoller, "Quantum computations with cold trapped ions," *Phys. Rev. Lett.* **74**, 4091–4094 (1995).
- ²⁰D. Leibfried, R. Blatt, C. Monroe, and D. Wineland, "Quantum dynamics of single trapped ions," *Rev. Mod. Phys.* **75**, 281–324 (2003).
- ²¹R. Blatt and D. Wineland, "Entangled states of trapped atomic ions," *Nature* **453**, 1008 (2008).
- ²²H. Häffner, C. Roos, and R. Blatt, "Quantum computing with trapped ions," *Phys. Rep.* **469**, 155–203 (2008).
- ²³R. Blatt and C. F. Roos, "Quantum simulations with trapped ions," *Nat. Phys.* **8**, 277 (2012).
- ²⁴D. Jaksch and P. Zoller, "The cold atom hubbard toolbox," *Ann. Phys.* **315**, 52–79 (2005).
- ²⁵M. Lewenstein, A. Sanpera, V. Ahufinger, B. Damski, A. Sen(De), and U. Sen, "Ultracold atomic gases in optical lattices: Mimicking condensed matter physics and beyond," *Adv. Phys.* **56**, 243–379 (2007).
- ²⁶I. Bloch, J. Dalibard, and W. Zwerger, "Many-body physics with ultracold gases," *Rev. Mod. Phys.* **80**, 885–964 (2008).
- ²⁷C. Gross and I. Bloch, "Quantum simulations with ultracold atoms in optical lattices," *Science* **357**, 995–1001 (2017).
- ²⁸R. Hanson, O. Gywat, and D. D. Awschalom, "Room-temperature manipulation and decoherence of a single spin in diamond," *Phys. Rev. B* **74**, 161203 (2006).

- ²⁹M. V. G. Dutt, L. Childress, L. Jiang, E. Togan, J. Maze, F. Jelezko, A. S. Zibrov, P. R. Hemmer, and M. D. Lukin, "Quantum register based on individual electronic and nuclear spin qubits in diamond," *Science* **316**, 1312–1316 (2007).
- ³⁰E. Knill, R. Laflamme, and G. J. Milburn, "A scheme for efficient quantum computation with linear optics," *Nature* **409**, 46 (2001).
- ³¹T. B. Pittman, B. C. Jacobs, and J. D. Franson, "Probabilistic quantum logic operations using polarizing beam splitters," *Phys. Rev. A* **64**, 062311 (2001).
- ³²J. D. Franson, M. M. Donegan, M. J. Fitch, B. C. Jacobs, and T. B. Pittman, "High-fidelity quantum logic operations using linear optical elements," *Phys. Rev. Lett.* **89**, 137901 (2002).
- ³³T. B. Pittman, M. J. Fitch, B. C. Jacobs, and J. D. Franson, "Experimental controlled-not logic gate for single photons in the coincidence basis," *Phys. Rev. A* **68**, 032316 (2003).
- ³⁴M. H. Devoret and J. M. Martinis, "Implementing qubits with superconducting integrated circuits," *Quantum Inf. Process.* **3**, 163–203 (2004).
- ³⁵J. Q. You and F. Nori, "Superconducting circuits and quantum information," *Phys. Today* **58**(11), 42–47 (2005).
- ³⁶R. J. Schoelkopf and S. M. Girvin, "Wiring up quantum systems," *Nature* **451**, 664 (2008).
- ³⁷J. Clarke and F. K. Wilhelm, "Superconducting quantum bits," *Nature* **453**, 1031–1042 (2008).
- ³⁸S. M. Girvin, *Circuit QED: Superconducting Qubits Coupled to Microwave Photons* (Oxford University Press, Oxford, England, 2009).
- ³⁹J. Q. You and F. Nori, "Atomic physics and quantum optics using superconducting circuits," *Nature* **474**, 589 (2011).
- ⁴⁰W. D. Oliver and P. B. Weland, "Materials in superconducting quantum bits," *MRS Bull.* **38**, 816–825 (2013).
- ⁴¹J. M. Gambetta, J. M. Chow, and M. Steffen, "Building logical qubits in a superconducting quantum computing system," *npj Quantum Inf.* **3**, 2 (2017).
- ⁴²G. Wendin, "Quantum information processing with superconducting circuits: A review," *Rep. Prog. Phys.* **80**, 106001 (2017).
- ⁴³X. Gu, A. F. Kockum, A. Miranowicz, Y. X. Liu, and F. Nori, "Microwave photonics with superconducting quantum circuits," *Phys. Rep.* **718–719**, 1–102 (2017).
- ⁴⁴M. H. Devoret, "Quantum fluctuations," in *Les Houches Session LXIII* (Oxford University Press, 1997).
- ⁴⁵R. K. Naik, N. Leung, S. Chakram, P. Groszkowski, Y. Lu, N. Earnest, D. C. McKay, J. Koch, and D. I. Schuster, "Random access quantum information processors using multimode circuit quantum electrodynamics," *Nat. Commun.* **8**, 1904 (2017).
- ⁴⁶B. D. Josephson, "Possible new effects in superconductive tunnelling," *Phys. Lett.* **1**, 251–253 (1962).
- ⁴⁷B. D. Josephson, "Coupled superconductors," *Rev. Mod. Phys.* **36**, 216–220 (1964).
- ⁴⁸Y. Nakamura, Y. A. Pashkin, and J. S. Tsai, "Coherent control of macroscopic quantum states in a single-Cooper-pair box," *Nature* **398**, 786 (1999).
- ⁴⁹D. Vion, A. Aassime, A. Cottet, P. Joyez, H. Pothier, C. Urbina, D. Esteve, and M. H. Devoret, "Manipulating the quantum state of an electrical circuit," *Science* **296**, 886–889 (2002).
- ⁵⁰J. Q. You and F. Nori, "Quantum information processing with superconducting qubits in a microwave field," *Phys. Rev. B* **68**, 064509 (2003).
- ⁵¹T. Duty, D. Gunnarsson, K. Bladh, and P. Delsing, "Coherent dynamics of a josephson charge qubit," *Phys. Rev. B* **69**, 140503 (2004).
- ⁵²J. Koch, T. M. Yu, J. Gambetta, A. A. Houck, D. I. Schuster, J. Majer, A. Blais, M. H. Devoret, S. M. Girvin, and R. J. Schoelkopf, "Charge-insensitive qubit design derived from the cooper pair box," *Phys. Rev. A* **76**, 042319 (2007).
- ⁵³M. J. Peterer, S. J. Bader, X. Jin, F. Yan, A. Kamal, T. J. Gudmundsen, P. J. Leek, T. P. Orlando, W. D. Oliver, and S. Gustavsson, "Coherence and decay of higher energy levels of a superconducting transmon qubit," *Phys. Rev. Lett.* **114**, 010501 (2015).
- ⁵⁴L. DiCarlo, M. D. Reed, L. Sun, B. R. Johnson, J. M. Chow, J. M. Gambetta, L. Frunzio, S. M. Girvin, M. H. Devoret, and R. J. Schoelkopf, "Preparation and measurement of three-qubit entanglement in a superconducting circuit," *Nature* **467**, 574 (2010).
- ⁵⁵H. Paik, D. I. Schuster, L. S. Bishop, G. Kirchmair, G. Catelani, A. P. Sears, B. R. Johnson, M. J. Reagor, L. Frunzio, L. I. Glazman, S. M. Girvin, M. H. Devoret, and R. J. Schoelkopf, "Observation of high coherence in josephson junction qubits measured in a three-dimensional circuit qed architecture," *Phys. Rev. Lett.* **107**, 240501 (2011).
- ⁵⁶A. Shnirman, G. Schön, I. Martin, and Y. Makhlin, "Low- and high-frequency noise from coherent two-level systems," *Phys. Rev. Lett.* **94**, 127002 (2005).
- ⁵⁷J. Gao, J. Zmuidzinas, B. A. Mazin, H. G. LeDuc, and P. K. Day, "Noise properties of superconducting coplanar waveguide microwave resonators," *Appl. Phys. Lett.* **90**, 102507 (2007).
- ⁵⁸J. Wenner, R. Barends, R. C. Bialczak, Y. Chen, J. Kelly, E. Lucero, M. Mariantoni, A. Megrant, P. J. J. O'Malley, D. Sank, A. Vainsencher, H. Wang, T. C. White, Y. Yin, J. Zhao, A. N. Cleland, and J. M. Martinis, "Surface loss simulations of superconducting coplanar waveguide resonators," *Appl. Phys. Lett.* **99**, 113513 (2011).
- ⁵⁹L. J. Zeng, P. Krantz, S. Nik, P. Delsing, and E. Olsson, "The atomic details of the interfacial interaction between the bottom electrode of Al/AlOx/Al Josephson junctions and Hf-treated Si substrates," *J. Appl. Phys.* **117**, 163915 (2015).
- ⁶⁰L. J. Zeng, S. Nik, T. Greibe, P. Krantz, C. M. Wilson, P. Delsing, and E. Olsson, "Direct observation of the thickness distribution of ultra thin AlOx barriers in Al/AlOx/Al Josephson junctions," *J. Phys. D: Appl. Phys.* **48**, 395308 (2015).
- ⁶¹G. Calusine, A. Melville, W. Woods, R. Das, C. Stull, V. Bolkhovskiy, D. Braje, D. Hover, D. K. Kim, X. Miloshi, D. Rosenberg, A. Sevi, J. L. Yoder, E. Dauler, and W. D. Oliver, "Analysis and mitigation of interface losses in trenced superconducting coplanar waveguide resonators," *Appl. Phys. Lett.* **112**, 062601 (2018).
- ⁶²F. Yan, S. Gustavsson, A. Kamal, J. Birenbaum, A. P. Sears, D. Hover, T. J. Gudmundsen, D. Rosenberg, G. Samach, S. Weber, J. L. Yoder, T. P. Orlando, J. Clarke, A. J. Kerman, and W. D. Oliver, "The flux qubit revisited to enhance coherence and reproducibility," *Nat. Commun.* **7**, 12964 (2016).
- ⁶³D. C. McKay, S. Filipp, A. Mezzacapo, E. Magesan, J. M. Chow, and J. M. Gambetta, "Universal gate for fixed-frequency qubits via a tunable bus," *Phys. Rev. Appl.* **6**, 064007 (2016).
- ⁶⁴L. DiCarlo, J. M. Chow, J. M. Gambetta, L. S. Bishop, B. R. Johnson, D. I. Schuster, J. Majer, A. Blais, L. Frunzio, S. M. Girvin, and R. J. Schoelkopf, "Demonstration of two-qubit algorithms with a superconducting quantum processor," *Nature* **460**, 240 (2009).
- ⁶⁵R. Barends, J. Kelly, A. Megrant, A. Veitia, D. Sank, E. Jeffrey, T. C. White, J. Mutus, A. G. Fowler, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, C. Neill, P. J. J. O'Malley, P. Roushan, A. Vainsencher, J. Wenner, A. N. Korotkov, A. N. Cleland, and J. M. Martinis, "Superconducting quantum circuits at the surface code threshold for fault tolerance," *Nature* **508**, 500 (2014).
- ⁶⁶J. Kelly, R. Barends, A. G. Fowler, A. Megrant, E. Jeffrey, T. C. White, D. Sank, J. Y. Mutus, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, I.-C. Hoi, C. Neill, P. J. J. O'Malley, C. Quintana, P. Roushan, A. Vainsencher, J. Wenner, A. N. Cleland, and J. M. Martinis, "State preservation by repetitive error detection in a superconducting quantum circuit," *Nature* **519**, 66–69 (2015).
- ⁶⁷M. Reagor, C. B. Osborn, N. Tezak, A. Staley, G. Prawiroatmodjo, M. Scheer, N. Alidoust, E. A. Sete, N. Didier, M. P. da Silva, E. Acala, J. Angeles, A. Bestwick, M. Block, B. Bloom, A. Bradley, C. Bui, S. Caldwell, L. Capelluto, R. Chilcott, J. Cordova, G. Crossman, M. Curtis, S. Deshpande, T. El Bouayadi, D. Girshovich, S. Hong, A. Hudson, P. Karalekas, K. Kuang, M. Lenihan, R. Manenti, T. Manning, J. Marshall, Y. Mohan, W. O'Brien, J. Otterbach, A. Papageorge, J.-P. Paquette, M. Pelstring, A. Polloreno, V. Rawat, C. A. Ryan, R. Renzas, N. Rubin, D. Russel, M. Rust, D. Scarabelli, M. Selvanayagam, R. Sinclair, R. Smith, M. Suska, T.-W. To, M. Vahidpour, N. Vodrahalli, T. Whyland, K. Yadav, W. Zeng, and C. T. Riggall, "Demonstration of universal parametric entangling gates on a multi-qubit lattice," *Sci. Adv.* **4**, 2 (2018).
- ⁶⁸M. Tinkham, *Introduction to Superconductivity* (Dover Publications, 2004).
- ⁶⁹M. D. Hutchings, J. B. Hertzberg, Y. Liu, N. T. Bronn, G. A. Keefe, M. Brink, J. M. Chow, and B. L. T. Plourde, "Tunable superconducting qubits with flux-independent coherence," *Phys. Rev. Appl.* **8**, 044003 (2017).
- ⁷⁰J. M. Chow, J. M. Gambetta, A. W. Cross, S. T. Merkel, C. Rigetti, and M. Steffen, "Microwave-activated conditional-phase gate for superconducting qubits," *New J. Phys.* **15**, 115012 (2013).

- ⁷¹R. Versluis, S. Poletto, N. Khammassi, B. Tarasinski, N. Haider, D. J. Michalak, A. Bruno, K. Bertels, and L. DiCarlo, "Scalable quantum circuit and control for a superconducting surface code," *Phys. Rev. Appl.* **8**, 034021 (2017).
- ⁷²T. P. Orlando, J. E. Mooij, L. Tian, C. H. van der Wal, L. S. Levitov, S. Lloyd, and J. J. Mazo, "Superconducting persistent-current qubit," *Phys. Rev. B* **60**, 15398–15413 (1999).
- ⁷³J. E. Mooij, T. P. Orlando, L. Levitov, L. Tian, C. H. van der Wal, and S. Lloyd, "Josephson persistent-current qubit," *Science* **285**, 1036–1039 (1999).
- ⁷⁴J. Q. You, J. S. Tsai, and F. Nori, "Hybridized solid-state qubit in the charge-flux regime," *Phys. Rev. B* **73**, 014510 (2006).
- ⁷⁵I. M. Pop, K. Geerlings, G. Catelani, R. J. Schoelkopf, L. I. Glazman, and M. H. Devoret, "Coherent suppression of electromagnetic dissipation due to superconducting quasiparticles," *Nature* **508**, 369 (2014).
- ⁷⁶N. Earnest, S. Chakram, Y. Lu, N. Irons, R. K. Naik, N. Leung, L. Ocola, D. A. Czaplewski, B. Baker, J. Lawrence, J. Koch, and D. I. Schuster, "Realization of a Λ system with metastable states of a capacitively shunted fluxonium," *Phys. Rev. Lett.* **120**, 150504 (2018).
- ⁷⁷Y.-H. Lin, L. B. Nguyen, N. Grabon, J. San Miguel, N. Pankratova, and V. E. Manucharyan, "Demonstration of protection of a superconducting qubit from energy decay," *Phys. Rev. Lett.* **120**, 150503 (2018).
- ⁷⁸J. Bylander, S. Gustavsson, F. Yan, F. Yoshihara, K. Harrabi, G. Fitch, D. G. Cory, Y. Nakamura, J.-S. Tsai, and W. D. Oliver, "Noise spectroscopy through dynamical decoupling with a superconducting flux qubit," *Nat. Phys.* **7**, 565–570 (2011).
- ⁷⁹V. E. Manucharyan, J. Koch, L. I. Glazman, and M. H. Devoret, "Fluxonium: Single cooper-pair circuit free of charge offsets," *Science* **326**, 113–116 (2009).
- ⁸⁰N. A. Masluk, I. M. Pop, A. Kamal, Z. K. Mineev, and M. H. Devoret, "Microwave characterization of Josephson junction arrays: Implementing a low loss superinductance," *Phys. Rev. Lett.* **109**, 137002 (2012).
- ⁸¹V. E. Manucharyan, "Superinductance," Ph.D. thesis (Yale University, 2012).
- ⁸²J. R. Friedman and D. V. Averin, "Aharonov-casher-effect suppression of macroscopic tunneling of magnetic flux," *Phys. Rev. Lett.* **88**, 050403 (2002).
- ⁸³A. J. Kerman, "Metastable superconducting qubit," *Phys. Rev. Lett.* **104**, 027002 (2010).
- ⁸⁴P. Groszkowski, A. D. Paolo, A. L. Grimsmo, A. Blais, D. I. Schuster, A. A. Houck, and J. Koch, "Coherence properties of the $0-\pi$ qubit," *New J. Phys.* **20**, 043053 (2018).
- ⁸⁵R. Barends, J. Kelly, A. Megrant, D. Sank, E. Jeffrey, Y. Chen, Y. Yin, B. Chiaro, J. Mutus, C. Neill, P. O'Malley, P. Roushan, J. Wenner, T. C. White, A. N. Cleland, and J. M. Martinis, "Coherent Josephson qubit suitable for scalable quantum integrated circuits," *Phys. Rev. Lett.* **111**, 080502 (2013).
- ⁸⁶M. W. Johnson, M. H. S. Amin, S. Gildert, T. Lanting, F. Hamze, N. Dickson, R. Harris, A. J. Berkley, J. Johansson, P. Bunyk, E. M. Chapple, C. Enderud, J. P. Hilton, K. Karimi, E. Ladizinsky, N. Ladizinsky, T. Oh, I. Perminov, C. Rich, M. C. Thom, E. Tolkacheva, C. J. S. Truncik, S. Uchaikin, J. Wang, B. Wilson, and G. Rose, "Quantum annealing with manufactured spins," *Nature* **473**, 194–198 (2011).
- ⁸⁷J. Q. You, Y. Nakamura, and F. Nori, "Fast two-bit operations in inductively coupled flux qubits," *Phys. Rev. B* **71**, 024532 (2005).
- ⁸⁸M. Grajcar, Y.-X. Liu, F. Nori, and A. M. Zagoskin, "Switchable resonant coupling of flux qubits," *Phys. Rev. B* **74**, 172505 (2006).
- ⁸⁹A. O. Niskanen, K. Harrabi, F. Yoshihara, Y. Nakamura, S. Lloyd, and J. S. Tsai, "Quantum coherent tunable coupling of superconducting qubits," *Science* **316**, 723–726 (2007).
- ⁹⁰S. Ashhab, A. O. Niskanen, K. Harrabi, Y. Nakamura, T. Picot, P. C. de Groot, C. J. P. M. Harmans, J. E. Mooij, and F. Nori, "Interqubit coupling mediated by a high-excitation-energy quantum object," *Phys. Rev. B* **77**, 014510 (2008).
- ⁹¹F. Yoshihara, T. Fuse, S. Ashhab, K. Kakuyanagi, S. Saito, and K. Semba, "Superconducting qubit-oscillator circuit beyond the ultrastrong-coupling regime," *Nat. Phys.* **13**, 44 (2017).
- ⁹²T. Niemczyk, F. Deppe, H. Huebl, E. P. Menzel, F. Hocke, M. J. Schwarz, J. J. Garcia-Ripoll, D. Zueco, T. Hümmer, E. Solano, A. Marx, and R. Gross, "Circuit quantum electrodynamics in the ultrastrong-coupling regime," *Nat. Phys.* **6**, 772 (2010).
- ⁹³Y. Lu, S. Chakram, N. Leung, N. Earnest, R. K. Naik, Z. Huang, P. Groszkowski, E. Kapit, J. Koch, and D. I. Schuster, "Universal stabilization of a parametrically coupled qubit," *Phys. Rev. Lett.* **119**, 150502 (2017).
- ⁹⁴A. Wallraff, D. I. Schuster, A. Blais, L. Frunzio, J. Majer, S. Kumar, S. M. Girvin, and R. J. Schoelkopf, "Strong coupling of a single photon to a superconducting qubit using circuit quantum electrodynamics," *Nature* **431**, 162–166 (2004).
- ⁹⁵M. Sandberg, C. M. Wilson, F. Persson, T. Bauch, G. Johansson, V. Shumeiko, T. Duty, and P. Delsing, "Tuning the field in a microwave resonator faster than the photon lifetime," *Appl. Phys. Lett.* **92**, 203501 (2008).
- ⁹⁶M. Pierre, I.-M. Svensson, S. Raman Sathyamoorthy, G. Johansson, and P. Delsing, "Storage and on-demand release of microwaves using superconducting resonators with tunable coupling," *Appl. Phys. Lett.* **104**, 232604 (2014).
- ⁹⁷Y. Yin, Y. Chen, D. Sank, P. J. J. O'Malley, T. C. White, R. Barends, J. Kelly, E. Lucero, M. Mariantoni, A. Megrant, C. Neill, A. Vainsencher, J. Wenner, A. N. Korotkov, A. N. Cleland, and J. M. Martinis, "Catch and release of microwave photon states," *Phys. Rev. Lett.* **110**, 107001 (2013).
- ⁹⁸N. Ofek, A. Petrenko, R. Heeres, P. Reinhold, Z. Leghtas, B. Vlastakis, Y. Liu, L. Frunzio, S. M. Girvin, L. Jiang, M. Mirrahimi, M. H. Devoret, and R. J. Schoelkopf, "Extending the lifetime of a quantum bit with error correction in superconducting circuits," *Nature* **536**, 441–445 (2016).
- ⁹⁹C. Wang, Y. Y. Gao, P. Reinhold, R. W. Heeres, N. Ofek, K. Chou, C. Axline, M. Reagor, J. Blumoff, K. M. Sliwa, L. Frunzio, S. M. Girvin, L. Jiang, M. Mirrahimi, M. H. Devoret, and R. J. Schoelkopf, "A Schrödinger cat living in two boxes," *Science* **352**, 1087–1091 (2016).
- ¹⁰⁰C. Axline, M. Reagor, R. Heeres, P. Reinhold, C. Wang, K. Shain, W. Pfaff, Y. Chu, L. Frunzio, and R. J. Schoelkopf, "An architecture for integrating planar and 3D CQED devices," *Appl. Phys. Lett.* **109**, 042601 (2016).
- ¹⁰¹M. Kounalakis, C. Dickel, A. Bruno, N. K. Langford, and G. A. Steele, "Tuneable hopping and nonlinear cross-Kerr interactions in a high-coherence superconducting circuit," *npj Quantum Inf.* **4**, 38 (2018).
- ¹⁰²S. J. Weber, G. O. Samach, D. Hover, S. Gustavsson, D. K. Kim, A. Melville, D. Rosenberg, A. P. Sears, F. Yan, J. L. Yoder, W. D. Oliver, and A. J. Kerman, "Coherent coupled qubits for quantum annealing," *Phys. Rev. Appl.* **8**, 014004 (2017).
- ¹⁰³Y. Chen, C. Neill, P. Roushan, N. Leung, M. Fang, R. Barends, J. Kelly, B. Campbell, Z. Chen, B. Chiaro, A. Dunsworth, E. Jeffrey, A. Megrant, J. Y. Mutus, P. J. J. O'Malley, C. M. Quintana, D. Sank, A. Vainsencher, J. Wenner, T. C. White, M. R. Geller, A. N. Cleland, and J. M. Martinis, "Qubit architecture with high coherence and fast tunable coupling," *Phys. Rev. Lett.* **113**, 220502 (2014).
- ¹⁰⁴M. Roth, M. Ganzhorn, N. Moll, S. Filipp, G. Salis, and S. Schmidt, "Analysis of a parametrically driven exchange-type gate and a two-photon excitation gate between superconducting qubits," *Phys. Rev. A* **96**, 062323 (2017).
- ¹⁰⁵N. Didier, E. A. Sete, M. P. da Silva, and C. Rigetti, "Analytical modeling of parametrically modulated transmon qubits," *Phys. Rev. A* **97**, 022330 (2018).
- ¹⁰⁶F. Yan, D. Campbell, P. Krantz, M. Kjaergaard, D. Kim, J. L. Yoder, D. Hover, A. Sears, A. J. Kerman, T. P. Orlando, S. Gustavsson, and W. D. Oliver, "Distinguishing coherent and thermal photon noise in a circuit quantum electrodynamical system," *Phys. Rev. Lett.* **120**, 260504 (2018).
- ¹⁰⁷N. Didier, J. Bourassa, and A. Blais, "Fast quantum nondemolition readout by parametric modulation of longitudinal qubit-oscillator interaction," *Phys. Rev. Lett.* **115**, 203601 (2015).
- ¹⁰⁸H. Ball, W. D. Oliver, and M. J. Biercuk, "The role of master clock stability in quantum information processing," *npj Quantum Inf.* **2**, 16033 (2016).
- ¹⁰⁹R. K. Wangsness, "Sublattice effects in magnetic resonance," *Phys. Rev.* **91**, 1085–1091 (1953).
- ¹¹⁰F. Bloch, "Generalized theory of relaxation," *Phys. Rev.* **105**, 1206–1222 (1957).
- ¹¹¹A. G. Redfield, "On the theory of relaxation processes," *IBM J. Res. Dev.* **1**, 19–31 (1957).
- ¹¹²G. Ithier, "Manipulation, readout and analysis of the decoherence of a superconducting quantum bit," Ph.D. thesis (Université Pierre et Marie Curie — Paris VI, 2005).
- ¹¹³G. Ithier, E. Collin, P. Joyez, P. J. Meeson, D. Vion, D. Esteve, F. Chiarello, A. Shnirman, Y. Makhlin, J. Schrieffer, and G. Schön, "Decoherence in a superconducting quantum bit circuit," *Phys. Rev. B* **72**, 134519 (2005).

- ¹¹⁴N. F. Ramsey, "A molecular beam resonance method with separated oscillating fields," *Phys. Rev.* **78**, 695–699 (1950).
- ¹¹⁵E. L. Hahn, "Spin echoes," *Phys. Rev.* **80**, 580–594 (1950).
- ¹¹⁶A. Siegman, *Lasers* (University Science Books, 1986).
- ¹¹⁷D. M. Berns, W. D. Oliver, S. O. Valenzuela, A. V. Shytov, K. K. Berggren, L. S. Levitov, and T. P. Orlando, "Coherent quasiclassical dynamics of a persistent current qubit," *Phys. Rev. Lett.* **97**, 150502 (2006).
- ¹¹⁸G. Catelani, J. Koch, L. Frunzio, R. J. Schoelkopf, M. H. Devoret, and L. I. Glazman, "Quasiparticle relaxation of superconducting qubits in the presence of flux," *Phys. Rev. Lett.* **106**, 077002 (2011).
- ¹¹⁹G. Catelani, S. E. Nigg, S. M. Girvin, R. J. Schoelkopf, and L. I. Glazman, "Decoherence of superconducting qubits caused by quasiparticle tunneling," *Phys. Rev. B* **86**, 184514 (2012).
- ¹²⁰S. Gustavsson, F. Yan, G. Catelani, J. Bylander, A. Kamal, J. Birenbaum, D. Hover, D. Rosenberg, G. Samach, A. P. Sears, S. J. Weber, J. L. Yoder, J. Clarke, A. J. Kerman, F. Yoshihara, Y. Nakamura, T. P. Orlando, and W. D. Oliver, "Suppressing relaxation in superconducting qubits by quasiparticle pumping," *Science* **354**, 1573–1577 (2016).
- ¹²¹H. Nyquist, "Thermal agitation of electric charge in conductors," *Phys. Rev.* **32**, 110–113 (1928).
- ¹²²J. B. Johnson, "Thermal agitation of electricity in conductors," *Phys. Rev.* **32**, 97–109 (1928).
- ¹²³H. A. Haus, *Electromagnetic Noise and Quantum Optical Measurements*, 1st ed. (Springer-Verlag, Berlin/Heidelberg, 2000).
- ¹²⁴A. A. Clerk, M. H. Devoret, S. M. Girvin, F. Marquardt, and R. J. Schoelkopf, "Introduction to quantum noise, measurement, and amplification," *Rev. Mod. Phys.* **82**, 1155–1208 (2010).
- ¹²⁵S. Gustavsson, J. Bylander, F. Yan, W. D. Oliver, F. Yoshihara, and Y. Nakamura, "Noise correlations in a flux qubit with tunable tunnel coupling," *Phys. Rev. B* **84**, 014525 (2011).
- ¹²⁶F. Yoshihara, Y. Nakamura, F. Yan, S. Gustavsson, J. Bylander, W. D. Oliver, and J.-S. Tsai, "Flux qubit noise spectroscopy using rabi oscillations under strong driving conditions," *Phys. Rev. B* **89**, 020503 (2014).
- ¹²⁷F. Yan, J. Bylander, S. Gustavsson, F. Yoshihara, K. Harrabi, D. G. Cory, T. P. Orlando, Y. Nakamura, J.-S. Tsai, and W. D. Oliver, "Spectroscopy of low-frequency noise and its temperature dependence in a superconducting qubit," *Phys. Rev. B* **85**, 174521 (2012).
- ¹²⁸F. Yan, S. Gustavsson, J. Bylander, X. Jin, F. Yoshihara, D. G. Cory, Y. Nakamura, T. P. Orlando, and W. D. Oliver, "Rotating-frame relaxation as a noise spectrum analyser of a superconducting qubit undergoing driven evolution," *Nat. Commun.* **4**, 2337 (2013).
- ¹²⁹Y. Sung, F. Beaudoin, L. Norris, F. Yan, D. Kim, J. Qiu, U. von Lüepke, J. L. Yoder, T. Orlando, L. Viola, S. Gustavsson, and W. Oliver, "Non-Gaussian noise spectroscopy with a superconducting qubit sensor," preprint [arXiv:1903.01043](https://arxiv.org/abs/1903.01043) (2019).
- ¹³⁰C. Wang, C. Axline, Y. Y. Gao, T. Brecht, Y. Chu, L. Frunzio, M. H. Devoret, and R. J. Schoelkopf, "Surface participation and dielectric loss in superconducting qubits," *Appl. Phys. Lett.* **107**, 162601 (2015).
- ¹³¹O. Dial, D. T. McClure, S. Poletto, G. A. Keefe, M. B. Rothwell, J. M. Gambetta, D. W. Abraham, J. M. Chow, and M. Steffen, "Bulk and surface loss in superconducting transmon qubits," *Supercond. Sci. Technol.* **29**, 044001 (2016).
- ¹³²O. Astafiev, Y. A. Pashkin, Y. Nakamura, T. Yamamoto, and J. S. Tsai, "Quantum noise in the josephson charge qubit," *Phys. Rev. Lett.* **93**, 267007 (2004).
- ¹³³R. H. Koch, D. P. DiVincenzo, and J. Clarke, "Model for 1/f flux noise in squids and qubits," *Phys. Rev. Lett.* **98**, 267003 (2007).
- ¹³⁴F. C. Wellstood, C. Urbina, and J. Clarke, "Low-frequency noise in DC superconducting quantum interference devices below 1 K," *Appl. Phys. Lett.* **50**, 772–774 (1987).
- ¹³⁵D. H. Slichter, R. Vijay, S. J. Weber, S. Boutin, M. Boissonneault, J. M. Gambetta, A. Blais, and I. Siddiqi, "Measurement-induced qubit state mixing in circuit qed from up-converted dephasing noise," *Phys. Rev. Lett.* **109**, 153601 (2012).
- ¹³⁶R. C. Bialczak, R. McDermott, M. Ansmann, M. Hofheinz, N. Katz, E. Lucero, M. Neeley, A. D. O'Connell, H. Wang, A. N. Cleland, and J. M. Martinis, "1/f flux noise in josephson phase qubits," *Phys. Rev. Lett.* **99**, 187006 (2007).
- ¹³⁷S. M. Anton, C. Müller, J. S. Birenbaum, S. R. O'Kelley, A. D. Fefferman, D. S. Golubev, G. C. Hilton, H.-M. Cho, K. D. Irwin, F. C. Wellstood, G. Schön, A. Shnirman, and J. Clarke, "Pure dephasing in flux qubits due to flux noise with spectral density scaling as 1/f²," *Phys. Rev. B* **85**, 224505 (2012).
- ¹³⁸B. Pokharel, N. Anand, B. Fortman, and D. A. Lidar, "Demonstration of fidelity improvement using dynamical decoupling with superconducting qubits," *Phys. Rev. Lett.* **121**, 220502 (2018).
- ¹³⁹C. M. Quintana, Y. Chen, D. Sank, A. G. Petukhov, T. C. White, D. Kafri, B. Chiaro, A. Megrant, R. Barends, B. Campbell, Z. Chen, A. Dunsworth, A. G. Fowler, R. Graff, E. Jeffrey, J. Kelly, E. Lucero, J. Y. Mutus, M. Neeley, C. Neill, P. J. J. O'Malley, P. Roushan, A. Shabani, V. N. Smelyanskiy, A. Vainsencher, J. Wenner, H. Neven, and J. M. Martinis, "Observation of classical-quantum crossover of 1/f flux noise and its paramagnetic temperature dependence," *Phys. Rev. Lett.* **118**, 057702 (2017).
- ¹⁴⁰P. Kumar, S. Sendelbach, M. A. Beck, J. W. Freeland, Z. Wang, H. Wang, C. C. Yu, R. Q. Wu, D. P. Pappas, and R. McDermott, "Origin and reduction of 1/f magnetic flux noise in superconducting devices," *Phys. Rev. Appl.* **6**, 041001 (2016).
- ¹⁴¹S. E. de Graaf, A. A. Adamyan, T. Lindström, D. Erts, S. E. Kubatkin, A. Y. Tzalenchuk, and A. V. Danilov, "Direct identification of dilute surface spins on Al₂O₃: Origin of flux noise in quantum circuits," *Phys. Rev. Lett.* **118**, 057703 (2017).
- ¹⁴²D. I. Schuster, A. Wallraff, A. Blais, L. Frunzio, R.-S. Huang, J. Majer, S. M. Girvin, and R. J. Schoelkopf, "AC stark shift and dephasing of a superconducting qubit strongly coupled to a cavity field," *Phys. Rev. Lett.* **94**, 123602 (2005).
- ¹⁴³J.-H. Yeh, J. LeFebvre, S. Premaratne, F. C. Wellstood, and B. S. Palmer, "Microwave attenuators for use with quantum devices below 100 mK," *J. Appl. Phys.* **121**, 224501 (2017).
- ¹⁴⁴X. Y. Jin, A. Kamal, A. P. Sears, T. Gudmundsen, D. Hover, J. Miloshi, R. Slattery, F. Yan, J. Yoder, T. P. Orlando, S. Gustavsson, and W. D. Oliver, "Thermal and residual excited-state population in a 3D transmon qubit," *Phys. Rev. Lett.* **114**, 240501 (2015).
- ¹⁴⁵K. Serniak, M. Hays, G. de Lange, S. Diamond, S. Shankar, L. D. Burkhardt, L. Frunzio, M. Houzet, and M. H. Devoret, "Hot nonequilibrium quasiparticles in transmon qubits," *Phys. Rev. Lett.* **121**, 157701 (2018).
- ¹⁴⁶J. Q. You, X. Hu, S. Ashhab, and F. Nori, "Low-decoherence flux qubit," *Phys. Rev. B* **75**, 140515 (2007).
- ¹⁴⁷A. J. Kerman and W. D. Oliver, "High-fidelity quantum operations on superconducting qubits in the presence of noise," *Phys. Rev. Lett.* **101**, 070501 (2008).
- ¹⁴⁸J. M. Martinis, S. Nam, J. Aumentado, K. M. Lang, and C. Urbina, "Decoherence of a superconducting qubit due to bias noise," *Phys. Rev. B* **67**, 094510 (2003).
- ¹⁴⁹G. S. Uhrig, "Keeping a quantum bit alive by optimized π -pulse sequences," *Phys. Rev. Lett.* **98**, 100504 (2007).
- ¹⁵⁰L. Cywinski, R. M. Lutchyn, C. P. Nave, and S. Das Sarma, "How to enhance dephasing time in superconducting qubits," *Phys. Rev. B* **77**, 174509 (2008).
- ¹⁵¹M. J. Biercuk, H. Uys, A. P. VanDevender, N. Shiga, W. M. Itano, and J. J. Bollinger, "Experimental Uhrig dynamical decoupling using trapped ions," *Phys. Rev. A* **79**, 062324 (2009).
- ¹⁵²H. Uys, M. J. Biercuk, and J. J. Bollinger, "Optimized noise filtration through dynamical decoupling," *Phys. Rev. Lett.* **103**, 040501 (2009).
- ¹⁵³H. Y. Carr and E. M. Purcell, "Effects of diffusion on free precession in nuclear magnetic resonance experiments," *Phys. Rev.* **94**, 630–638 (1954).
- ¹⁵⁴S. Meiboom and D. Gill, "Modified spin-echo method for measuring nuclear relaxation times," *Rev. Sci. Instrum.* **29**, 688 (1958).
- ¹⁵⁵S. Gustavsson, J. Bylander, F. Yan, P. Forn-Díaz, V. Bolkhovsky, D. Braje, G. Fitch, K. Harrabi, D. Lennon, J. Miloshi, P. Murphy, R. Slattery, S. Spector, B. Turek, T. Weir, P. B. Welander, F. Yoshihara, D. G. Cory, Y. Nakamura, T. P. Orlando, and W. D. Oliver, "Driven dynamics and rotary echo of a qubit tunably coupled to a harmonic oscillator," *Phys. Rev. Lett.* **108**, 170503 (2012).
- ¹⁵⁶S. Gustavsson, F. Yan, J. Bylander, F. Yoshihara, Y. Nakamura, T. P. Orlando, and W. D. Oliver, "Dynamical decoupling and dephasing in interacting two-level systems," *Phys. Rev. Lett.* **109**, 010502 (2012).
- ¹⁵⁷D. T. Sank, "Fast, accurate state measurement in superconducting qubits," Ph.D. thesis (University of California, Santa Barbara, 2014).

- ¹⁵⁸M. Loretz, J. M. Boss, T. Rosskopf, H. J. Mamin, D. Rugar, and C. L. Degen, "Spurious harmonic response of multipulse quantum sensing sequences," *Phys. Rev. X* **5**, 021009 (2015).
- ¹⁵⁹D. Slepian and H. O. Pollak, "Prolate spheroidal wave functions, Fourier analysis and uncertainty—I," *Bell Syst. Tech. J.* **40**, 43–63 (1961).
- ¹⁶⁰R. Schoelkopf, A. Clerk, S. Girvin, K. Lehnert, and M. Devoret, *Quantum Noise in Mesoscopic Physics, Qubits as Spectrometers of Quantum Noise*, Part of the NATO Science Series Book Series (NAII, Vol. 97) (Springer, 2002), pp. 175–203.
- ¹⁶¹J. M. Sage, V. Bolkhovsky, W. D. Oliver, B. Turek, and P. B. Welander, "Study of loss in superconducting coplanar waveguide resonators," *J. Appl. Phys.* **109**, 063915 (2011).
- ¹⁶²C. M. Quintana, A. Megrant, Z. Chen, A. Dunsworth, B. Chiaro, R. Barends, B. Campbell, Y. Chen, I.-C. Hoi, E. Jeffrey, J. Kelly, J. Y. Mutus, P. J. J. O'Malley, C. Neill, P. Roushan, D. Sank, A. Vainsencher, J. Wenner, T. C. White, A. N. Cleland, and J. M. Martinis, "Characterization and reduction of microfabrication-induced decoherence in superconducting quantum circuits," *Appl. Phys. Lett.* **105**, 062601 (2014).
- ¹⁶³A. Kamal, J. L. Yoder, F. Yan, T. J. Gudmundsen, D. Hover, A. P. Sears, P. Welander, T. P. Orlando, S. Gustavsson, and W. D. Oliver, "Improved superconducting qubit coherence with high-temperature substrate annealing," e-print [arXiv:1606.09262](https://arxiv.org/abs/1606.09262).
- ¹⁶⁴S. M. Anton, J. S. Birenbaum, S. R. O'Kelley, V. Bolkhovsky, D. A. Braje, G. Fitch, M. Neeley, G. C. Hilton, H.-M. Cho, K. D. Irwin, F. C. Wellstood, W. D. Oliver, A. Shnirman, and J. Clarke, "Magnetic flux noise in DC squids: Temperature and geometry dependence," *Phys. Rev. Lett.* **110**, 147002 (2013).
- ¹⁶⁵S. Sendelbach, D. Hover, A. Kittel, M. Mück, J. M. Martinis, and R. McDermott, "Magnetism in squids at millikelvin temperatures," *Phys. Rev. Lett.* **100**, 227006 (2008).
- ¹⁶⁶R.-P. Riwar, A. Hosseinkhani, L. D. Burkhardt, Y. Y. Gao, R. J. Schoelkopf, L. I. Glazman, and G. Catelani, "Normal-metal quasiparticle traps for superconducting qubits," *Phys. Rev. B* **94**, 104516 (2016).
- ¹⁶⁷S. Krinner, S. Storz, P. Kurpiers, P. Magnard, J. Heinsoo, R. Keller, J. Luetolf, C. Eichler, and A. Wallraff, "Engineering cryogenic setups for 100-qubit scale superconducting circuit systems," e-print [arXiv:1806.07862](https://arxiv.org/abs/1806.07862).
- ¹⁶⁸R. Barends, J. Wenner, M. Lenander, Y. Chen, R. C. Bialczak, J. Kelly, E. Lucero, P. O'Malley, M. Mariantoni, D. Sank, H. Wang, T. C. White, Y. Yin, J. Zhao, A. N. Cleland, J. M. Martinis, and J. J. A. Baselmans, "Minimizing quasiparticle generation from stray infrared light in superconducting quantum circuits," *Appl. Phys. Lett.* **99**, 113507 (2011).
- ¹⁶⁹A. D. Córcoles, J. M. Chow, J. M. Gambetta, C. Rigetti, J. R. Rozen, G. A. Keefe, M. Beth Rothwell, M. B. Ketchen, and M. Steffen, "Protecting superconducting qubits from radiation," *Appl. Phys. Lett.* **99**, 181906 (2011).
- ¹⁷⁰Z. Wang, S. Shankar, Z. Mineev, P. Campagne-Ibarcq, A. Narla, and M. Devoret, "Cavity attenuators for superconducting qubits," *Phys. Rev. Appl.* **11**, 014031 (2019).
- ¹⁷¹W. D. Oliver, I. L. Chuang, A. W. Harrow, and P. Shor, <https://quantumcurriculum.mit.edu/> for "Mit xpro quantum curriculum," (2018).
- ¹⁷²M. A. Nielsen and I. L. Chuang, *Quantum Computation and Quantum Information: 10th Anniversary Edition*, 10th ed. (Cambridge University Press, New York, NY, USA, 2011).
- ¹⁷³A. Barenco, C. H. Bennett, R. Cleve, D. P. DiVincenzo, N. Margolus, P. Shor, T. Sleator, J. A. Smolin, and H. Weinfurter, "Elementary gates for quantum computation," *Phys. Rev. A* **52**, 3457–3467 (1995).
- ¹⁷⁴C. P. Williams, *Explorations in Quantum Computing*, 2nd ed. (Springer Publishing Company, Incorporated, 2008).
- ¹⁷⁵Y. A. Kitaev, "Quantum computations: Algorithms and error correction," *Russ. Math. Surv.* **52**, 1191 (1997).
- ¹⁷⁶C. M. Dawson and M. A. Nielsen, "The Solovay-Kitaev algorithm," *Quantum Inf. Comput.* **6**, 81–95 (2006).
- ¹⁷⁷F. T. Chong, D. Franklin, and M. Martonosi, "Programming languages and compiler design for realistic quantum hardware," *Nature* **549**, 180 (2017).
- ¹⁷⁸E. T. Campbell and M. Howard, "Unified framework for magic state distillation and multiqubit gate synthesis with reduced resource cost," *Phys. Rev. A* **95**, 022316 (2017).
- ¹⁷⁹A. Paler, I. Polian, K. Nemoto, and S. J. Devitt, "Fault-tolerant, high-level quantum circuits: Form, compilation and description," *Quantum Sci. Technol.* **2**, 25003 (2017).
- ¹⁸⁰U. Vool and M. H. Devoret, "Introduction to quantum electromagnetic circuits," *Int. J. Circuit Theory Appl.* **45**, 897–934 (2017).
- ¹⁸¹S. M. Girvin, "Circuit QED: Superconducting qubits coupled to microwave photons," in *Quantum Machines: Measurement and Control of Engineered Quantum Systems* (Oxford University Press, 2014), pp. 113–256.
- ¹⁸²N. K. Langford, "Circuit QED—Lecture notes," preprint [arXiv:1310.1897](https://arxiv.org/abs/1310.1897) [quant-ph] (2013).
- ¹⁸³V. Vesterinen, O. P. Saira, A. Bruno, and L. DiCarlo, "Mitigating information leakage in a crowded spectrum of weakly anharmonic qubits," preprint [arXiv:1405.0450](https://arxiv.org/abs/1405.0450) (2014).
- ¹⁸⁴S. Asaad, C. Dickel, N. K. Langford, S. Poletto, A. Bruno, M. A. Rol, D. Deurloo, and L. DiCarlo, "Independent, extensible control of same-frequency superconducting qubits by selective broadcasting," *npj Quantum Inf.* **2**, 16029 (2016).
- ¹⁸⁵C. A. Ryan, B. R. Johnson, D. Ristè, B. Donovan, and T. A. Ohki, "Hardware for dynamic quantum computing," *Rev. Sci. Instrum.* **88**, 104703 (2017).
- ¹⁸⁶D. C. McKay, C. J. Wood, S. Sheldon, J. M. Chow, and J. M. Gambetta, "Efficient Z-gates for quantum computing," *Phys. Rev. A* **96**, 22330 (2017).
- ¹⁸⁷J. Johansson, P. Nation, and F. Nori, "QuTiP 2: A Python framework for the dynamics of open quantum systems," *Comput. Phys. Commun.* **184**, 1234–1240 (2013).
- ¹⁸⁸Z. Chen, "Metrology of quantum control and measurement in superconducting qubits," Ph.D. thesis (University of California, Santa Barbara, 2018).
- ¹⁸⁹F. Motzoi, J. M. Gambetta, P. Rebentrost, and F. K. Wilhelm, "Simple pulses for elimination of leakage in weakly nonlinear qubits," *Phys. Rev. Lett.* **103**, 110501 (2009).
- ¹⁹⁰J. M. Gambetta, F. Motzoi, S. T. Merkel, and F. K. Wilhelm, "Analytic control methods for high-fidelity unitary operations in a weakly nonlinear oscillator," *Phys. Rev. A* **83**, 012308 (2011).
- ¹⁹¹A. De, "Fast quantum control for weakly nonlinear qubits: On two-quadrature adiabatic gates," preprint [arXiv:1509.07905](https://arxiv.org/abs/1509.07905) (2015).
- ¹⁹²F. Motzoi and F. K. Wilhelm, "Improving frequency selection of driven pulses using derivative-based transition suppression," *Phys. Rev. A* **88**, 062318 (2013).
- ¹⁹³Z. Chen, J. Kelly, C. Quintana, R. Barends, B. Campbell, Y. Chen, B. Chiaro, A. Dunsworth, A. Fowler, E. Lucero, E. Jeffrey, A. Megrant, J. Mutus, M. Neeley, C. Neill, P. O'Malley, P. Roushan, D. Sank, A. Vainsencher, J. Wenner, T. White, A. Korotkov, and J. M. Martinis, "Measuring and suppressing quantum state leakage in a superconducting qubit," *Phys. Rev. Lett.* **116**, 020501 (2016).
- ¹⁹⁴J. M. Chow, L. DiCarlo, J. M. Gambetta, F. Motzoi, L. Frunzio, S. M. Girvin, and R. J. Schoelkopf, "Optimized driving of superconducting artificial atoms for improved single-qubit gates," *Phys. Rev. A* **82**, 040305(R) (2010).
- ¹⁹⁵E. Lucero, J. Kelly, R. C. Bialczak, M. Lenander, M. Mariantoni, M. Neeley, A. D. O'Connell, D. Sank, H. Wang, M. Weides, J. Wenner, T. Yamamoto, A. N. Cleland, and J. M. Martinis, "Reduced phase error through optimized control of a superconducting qubit," *Phys. Rev. A* **82**, 042339 (2010).
- ¹⁹⁶S. Gustavsson, O. Zwiir, J. Bylander, F. Yan, F. Yoshihara, Y. Nakamura, T. P. Orlando, and W. D. Oliver, "Improving quantum gate fidelities by using a qubit to measure microwave pulse distortions," *Phys. Rev. Lett.* **110**, 040502 (2013).
- ¹⁹⁷S. Sheldon, E. Magesan, J. M. Chow, and J. M. Gambetta, "Procedure for systematically tuning up cross-talk in the cross-resonance gate," *Phys. Rev. A* **93**, 060302(R) (2016).
- ¹⁹⁸S. Sheldon, L. S. Bishop, E. Magesan, S. Filipp, J. M. Chow, and J. M. Gambetta, "Characterizing errors on qubit operations via iterative randomized benchmarking," *Phys. Rev. A* **93**, 012301 (2016).
- ¹⁹⁹M. Rol, C. Bultink, T. O'Brien, S. de Jong, L. Theis, X. Fu, F. Luthi, R. Vermeulen, J. de Sterke, A. Bruno, D. Deurloo, R. Schouten, F. Wilhelm, and L. DiCarlo, "Restless tuneup of high-fidelity qubit gates," *Phys. Rev. Appl.* **7**, 041001 (2017).
- ²⁰⁰R. Schutjens, F. A. Dagga, D. J. Egger, and F. K. Wilhelm, "Single-qubit gates in frequency-crowded transmon systems," *Phys. Rev. A* **88**, 052330 (2013).

- ²⁰¹L. S. Theis, F. Motzoi, and F. K. Wilhelm, "Simultaneous gates in frequency-crowded multilevel systems using fast, robust, analytic control shapes," *Phys. Rev. A* **93**, 012324 (2016).
- ²⁰²S. H. W. van der Ploeg, A. Izmailkov, A. M. van den Brink, U. Hübner, M. Grajcar, E. Il'ichev, H.-G. Meyer, and A. M. Zagoskin, "Controllable coupling of superconducting flux qubits," *Phys. Rev. Lett.* **98**, 057004 (2007).
- ²⁰³M. S. Allman, F. Altomare, J. D. Whittaker, K. Cicak, D. Li, A. Sirois, J. Strong, J. D. Teufel, and R. W. Simmonds, "rf-SQUID-mediated coherent tunable coupling between a superconducting phase qubit and a lumped-element resonator," *Phys. Rev. Lett.* **104**, 177004 (2010).
- ²⁰⁴S. J. Srinivasan, A. J. Hoffman, J. M. Gambetta, and A. A. Houck, "Tunable coupling in circuit quantum electrodynamics using a superconducting charge qubit with a V-shaped energy level diagram," *Phys. Rev. Lett.* **106**, 083601 (2011).
- ²⁰⁵A. J. Sirois, M. A. Castellanos-Beltran, M. P. DeFeo, L. Ranzani, F. Lecocq, R. W. Simmonds, J. D. Teufel, and J. Aumentado, "Coherent-state storage and retrieval between superconducting cavities using parametric frequency conversion," *Appl. Phys. Lett.* **106**, 172603 (2015).
- ²⁰⁶S. Caldwell, N. Didier, C. A. Ryan, E. A. Sete, A. Hudson, P. Karalekas, R. Manenti, M. Reagor, M. P. da Silva, R. Sinclair, E. Acala, N. Alidoust, J. Angeles, A. Bestwick, M. Block, B. Bloom, A. Bradley, C. Bui, L. Capelluto, R. Chilcott, J. Cordova, G. Crossman, M. Curtis, S. Deshpande, T. E. Bouayadi, D. Girshovich, S. Hong, K. Kuang, M. Lenihan, T. Manning, A. Marchenkov, J. Marshall, R. Maydra, Y. Mohan, W. O'Brien, C. Osborn, J. Otterbach, A. Papageorge, J. P. Paquette, M. Pelstring, A. Polloreno, G. Prawiroatmodjo, V. Rawat, R. Renzas, N. Rubin, D. Russell, M. Rust, D. Scarabelli, M. Scheer, M. Selvanayagam, R. Smith, A. Staley, M. Suska, N. Tezak, D. C. Thompson, T. W. To, M. Vahidpour, N. Vodrahalli, T. Whyland, K. Yadav, W. Zeng, and C. Rigetti, "Parametrically activated entangling gates using transmon qubits," *Phys. Rev. Applied* **10**(3), 034050 (2018).
- ²⁰⁷L. Casparis, N. J. Pearson, A. Kringhøj, T. W. Larsen, F. Kuemmeth, J. Nygård, P. Krogstrup, K. D. Petersson, and C. M. Marcus, "Voltage-controlled superconducting quantum bus," *Phys. Rev. B* **99**(8), 085434 (2019).
- ²⁰⁸A. Blais, R.-S. Huang, A. Wallraff, S. Girvin, and R. Schoelkopf, "Cavity quantum electrodynamics for superconducting electrical circuits: An architecture for quantum computation," *Phys. Rev. A* **69**, 062320 (2004).
- ²⁰⁹J. Majer, J. M. Chow, J. M. Gambetta, J. Koch, B. R. Johnson, J. A. Schreier, L. Frunzio, D. I. Schuster, A. A. Houck, A. Wallraff, A. Blais, M. H. Devoret, S. M. Girvin, and R. J. Schoelkopf, "Coupling superconducting qubits via a cavity bus," *Nature* **449**, 443–447 (2007).
- ²¹⁰G. Wendin and V. S. Shumeiko, "Quantum bits with Josephson junctions (review article)," *Low Temp. Phys.* **33**, 724–744 (2007).
- ²¹¹N. Schuch and J. Siewert, "Natural two-qubit gate for quantum computation using the XY interaction," *Phys. Rev. A* **67**, 032301 (2003).
- ²¹²M. Steffen, M. Ansmann, R. C. Bialczak, N. Katz, E. Lucero, R. McDermott, M. Neeley, E. M. Weig, A. N. Cleland, and J. M. Martinis, "Measurement of the entanglement of two superconducting qubits via state tomography," *Science* **313**, 1423–1425 (2006).
- ²¹³R. C. Bialczak, M. Ansmann, M. Hofheinz, E. Lucero, M. Neeley, A. D. O'Connell, D. Sank, H. Wang, J. Wenner, M. Steffen, A. N. Cleland, and J. M. Martinis, "Quantum process tomography of a universal entangling gate implemented with Josephson phase qubits," *Nat. Phys.* **6**, 409–413 (2010).
- ²¹⁴M. Neeley, R. C. Bialczak, M. Lenander, E. Lucero, M. Marantoni, A. D. O'Connell, D. Sank, H. Wang, M. Weides, J. Wenner, Y. Yin, T. Yamamoto, A. N. Cleland, and J. M. Martinis, "Generation of three-qubit entangled states using superconducting phase qubits," *Nature* **467**, 570–573 (2010).
- ²¹⁵A. Dewes, F. R. Ong, V. Schmitt, R. Lauro, N. Boulant, P. Bertet, D. Vion, and D. Esteve, "Characterization of a two-transmon processor with individual single-shot qubit readout," *Phys. Rev. Lett.* **108**, 057002 (2012).
- ²¹⁶Y. Salathé, M. Mondal, M. Opplinger, J. Heinsoo, P. Kurpiers, A. Potočník, A. Mezzacapo, U. Las Heras, L. Lamata, E. Solano, S. Filipp, and A. Wallraff, "Digital quantum simulation of spin models with circuit quantum electrodynamics," *Phys. Rev. X* **5**, 021027 (2015).
- ²¹⁷L. Casparis, M. R. Connolly, M. Kjaergaard, N. J. Pearson, A. Kringhøj, T. W. Larsen, F. Kuemmeth, T. Wang, C. Thomas, S. Gronin, G. C. Gardner, M. J. Manfra, C. M. Marcus, and K. D. Petersson, "Superconducting gatemon qubit based on a proximitized two-dimensional electron gas," *Nat. Nanotechnol.* **1**, 915–919 (2018).
- ²¹⁸U. L. Heras, A. Mezzacapo, L. Lamata, S. Filipp, A. Wallraff, and E. Solano, "Digital quantum simulation of spin systems in superconducting circuits," *Phys. Rev. Lett.* **112**, 200501 (2014).
- ²¹⁹C. Song, K. Xu, W. Liu, C.-P. Yang, S.-B. Zheng, H. Deng, Q. Xie, K. Huang, Q. Guo, L. Zhang, P. Zhang, D. Xu, D. Zheng, X. Zhu, H. Wang, Y.-A. Chen, C.-Y. Lu, S. Han, and J.-W. Pan, "10-qubit entanglement and parallel logic operations with a superconducting circuit," *Phys. Rev. Lett.* **119**, 180511 (2017).
- ²²⁰F. W. Strauch, P. R. Johnson, A. J. Dragt, C. J. Lobb, J. R. Anderson, and F. C. Wellstood, "Quantum logic gates for coupled superconducting phase qubits," *Phys. Rev. Lett.* **91**, 167005 (2003).
- ²²¹J. Kelly, R. Barends, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, A. Fowler, I.-C. Hoi, E. Jeffrey, A. Megrant, J. Mutus, C. Neill, P. O'Malley, C. Quintana, P. Roushan, D. Sank, A. Vainsencher, J. Wenner, T. White, A. Cleland, and J. M. Martinis, "Optimal quantum control using randomized benchmarking," *Phys. Rev. Lett.* **112**, 240504 (2014).
- ²²²W. D. Oliver, Y. Yu, J. C. Lee, K. K. Berggren, L. S. Levitov, and T. P. Orlando, "Mach-Zehnder interferometry in a strongly driven superconducting qubit," *Science* **310**, 1653–1657 (2005).
- ²²³S. O. Valenzuela, W. D. Oliver, D. M. Berns, K. K. Berggren, L. S. Levitov, and T. P. Orlando, "Microwave-induced cooling of a superconducting qubit," *Science* **314**, 1589–1592 (2006).
- ²²⁴S. Ashhab, J. R. Johansson, A. M. Zagoskin, and F. Nori, "Two-level systems driven by large-amplitude fields," *Phys. Rev. A* **75**, 063414 (2007).
- ²²⁵D. M. Berns, M. S. Rudner, S. O. Valenzuela, K. K. Berggren, W. D. Oliver, L. S. Levitov, and T. P. Orlando, "Amplitude spectroscopy of a solid-state artificial atom," *Nature* **455**, 51 (2008).
- ²²⁶M. S. Rudner, A. V. Shytov, L. S. Levitov, D. M. Berns, W. D. Oliver, S. O. Valenzuela, and T. P. Orlando, "Quantum phase tomography of a strongly driven qubit," *Phys. Rev. Lett.* **101**, 190502 (2008).
- ²²⁷J. Q. You, Y.-X. Liu, and F. Nori, "Simultaneous cooling of an artificial atom and its neighboring quantum system," *Phys. Rev. Lett.* **100**, 047001 (2008).
- ²²⁸M. Grajcar, S. Ashhab, J. R. Johansson, and F. Nori, "Lower limit on the achievable temperature in resonator-based sideband cooling," *Phys. Rev. B* **78**, 035406 (2008).
- ²²⁹J. Bylander, M. S. Rudner, A. V. Shytov, S. O. Valenzuela, D. M. Berns, K. K. Berggren, L. S. Levitov, and W. D. Oliver, "Pulse imaging and nonadiabatic control of solid-state artificial atoms," *Phys. Rev. B* **80**, 220506 (2009).
- ²³⁰W. D. Oliver and S. O. Valenzuela, "Large-amplitude driving of a superconducting artificial atom," *Quantum Inf. Process.* **8**, 261–281 (2009).
- ²³¹S. Shevchenko, S. Ashhab, and F. Nori, "Landau-Zener-Stückelberg interferometry," *Phys. Rep.* **492**, 1–30 (2010).
- ²³²S. Ashhab, P. C. de Groot, and F. Nori, "Speed limits for quantum gates in multiqubit systems," *Phys. Rev. A* **85**, 052327 (2012).
- ²³³M. G. Bason, M. Viteau, N. Malossi, P. Huillery, E. Arimondo, D. Ciampini, R. Fazio, V. Giovannetti, R. Mannella, and O. Morsch, "High-fidelity quantum driving," *Nat. Phys.* **8**, 147–152 (2012).
- ²³⁴J. M. Martinis and M. R. Geller, "Fast adiabatic qubit gates using only σ_z control," *Phys. Rev. A* **90**, 022307 (2014).
- ²³⁵W. Press, W. Teukolsky, T. Vetterling, and B. Flannery, *Numerical Recipes: The Art of Scientific Computing*, 3rd ed. (Cambridge University Press, New York, NY, USA, 2007).
- ²³⁶J. Benhelm, G. Kirchmair, C. F. Roos, and R. Blatt, "Towards fault-tolerant quantum computing with trapped ions," *Nat. Phys.* **4**, 463–466 (2008).
- ²³⁷C. A. Ryan, M. Laforest, and R. Laflamme, "Randomized benchmarking of single- and multi-qubit control in liquid-state NMR quantum information processing," *New J. Phys.* **11**, 013034 (2009).
- ²³⁸E. Magesan, J. M. Gambetta, and J. Emerson, "Scalable and robust randomized benchmarking of quantum processes," *Phys. Rev. Lett.* **106**, 180504 (2011).
- ²³⁹A. D. Córcoles, J. M. Gambetta, J. M. Chow, J. A. Smolin, M. Ware, J. Strand, B. L. T. Plourde, and M. Steffen, "Process verification of two-qubit quantum gates by randomized benchmarking," *Phys. Rev. A* **87**, 030301 (2013).
- ²⁴⁰A. G. Fowler, M. Mariantoni, J. M. Martinis, and A. N. Cleland, "Surface codes: Towards practical large-scale quantum computation," *Phys. Rev. A* **86**, 032324 (2012).
- ²⁴¹Y. Tomita and K. M. Svore, "Low-distance surface codes under realistic quantum noise," *Phys. Rev. A* **90**, 062320 (2014).

- ²⁴²T. E. O'Brien, B. Tarasinski, and L. DiCarlo, "Density-matrix simulation of small surface codes under current and projected experimental noise," *npj Quantum Inf.* **3**, 39 (2017).
- ²⁴³N. H. Nickerson, "Error correcting power of small topological codes," preprint [arXiv:1609.01753](https://arxiv.org/abs/1609.01753) (2016).
- ²⁴⁴E. T. Campbell, B. M. Terhal, and C. Vuillot, "Roads towards fault-tolerant universal quantum computation," *Nature* **549**, 172–179 (2017).
- ²⁴⁵S. Benjamin and J. Kelly, "Solving a wonderful problem," *Nat. Mater.* **14**, 561–563 (2015).
- ²⁴⁶J. Kelly, R. Barends, A. G. Fowler, A. Megrant, E. Jeffrey, T. C. White, D. Sank, J. Y. Mutus, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, E. Lucero, M. Neeley, C. Neill, P. J. J. O'Malley, C. Quintana, P. Roushan, A. Vainsencher, J. Wenner, and J. M. Martinis, "Scalable in-situ qubit calibration during repetitive error detection," *Phys. Rev. A* **94**, 032321 (2016).
- ²⁴⁷S. J. Devitt, W. J. Munro, and K. Nemoto, "Quantum error correction for beginners," *Rep. Prog. Phys.* **76**, 076001 (2013).
- ²⁴⁸D. Gottesman, "An introduction to quantum error correction and fault-tolerant quantum computation," preprint [arXiv:0904.2557](https://arxiv.org/abs/0904.2557) (2009).
- ²⁴⁹*Quantum Error Correction*, edited by D. A. Lidar and T. A. Brun (Cambridge University Press, 2013), p. 666.
- ²⁵⁰B. M. Terhal, "Quantum error correction for quantum memories," *Rev. Mod. Phys.* **87**, 307–346 (2015).
- ²⁵¹D. Ristè, S. Poletto, M.-Z. Huang, A. Bruno, V. Vesterinen, O.-P. Saira, and L. DiCarlo, "Detecting bit-flip errors in a logical qubit using stabilizer measurements," *Nat. Commun.* **6**, 6983 (2015).
- ²⁵²O.-P. Saira, J. Groen, J. Cramer, M. Meretska, G. de Lange, and L. DiCarlo, "Entanglement genesis by ancilla-based parity measurement in 2D circuit QED," *Phys. Rev. Lett.* **112**, 070502 (2014).
- ²⁵³R. Barends, L. Lamata, J. Kelly, L. García-Álvarez, A. G. Fowler, A. Megrant, E. Jeffrey, T. C. White, D. Sank, J. Y. Mutus, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, I.-C. Hoi, C. Neill, P. J. J. O'Malley, C. Quintana, P. Roushan, A. Vainsencher, J. Wenner, E. Solano, and J. M. Martinis, "Digital quantum simulation of fermionic models with a superconducting circuit," *Nat. Commun.* **6**, 7654 (2015).
- ²⁵⁴P. Jordan and E. Wigner, "Über das paulische äquivalenzverbot," *Z. Phys.* **47**, 631–651 (1928).
- ²⁵⁵U. Las Heras, L. García-Álvarez, A. Mezzacapo, E. Solano, and L. Lamata, "Fermionic models with superconducting circuits," *EPJ Quantum Technol.* **2**, 8 (2015).
- ²⁵⁶V. Havlicek, A. D. Córcoles, K. Temme, A. W. Harrow, A. Kandala, J. M. Chow, and J. M. Gambetta, "Supervised learning with quantum enhanced feature spaces," *Nature* **567**, 209–212 (2019).
- ²⁵⁷I. Buluta and F. Nori, "Quantum simulators," *Science* **326**, 108–111 (2009).
- ²⁵⁸I. M. Georgescu, S. Ashhab, and F. Nori, "Quantum simulation," *Rev. Mod. Phys.* **86**, 153–185 (2014).
- ²⁵⁹P. O'Malley, R. Babbush, I. Kivlichan, J. Romero, J. McClean, R. Barends, J. Kelly, P. Roushan, A. Tranter, N. Ding, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, A. Fowler, E. Jeffrey, E. Lucero, A. Megrant, J. Mutus, M. Neeley, C. Neill, C. Quintana, D. Sank, A. Vainsencher, J. Wenner, T. White, P. Coveney, P. Love, H. Neven, A. Aspuru-Guzik, and J. Martinis, "Scalable quantum simulation of molecular energies," *Phys. Rev. X* **6**, 031007 (2016).
- ²⁶⁰M. Baur, A. Fedorov, L. Steffen, S. Filipp, M. P. da Silva, and A. Wallraff, "Benchmarking a quantum teleportation protocol in superconducting circuits using tomography and an entanglement witness," *Phys. Rev. Lett.* **108**, 040502 (2012).
- ²⁶¹L. Steffen, Y. Salathe, M. Oppliger, P. Kurpiers, M. Baur, C. Lang, C. Eichler, G. Puebla-Hellmann, A. Fedorov, and A. Wallraff, "Deterministic quantum teleportation with feed-forward in a solid state system," *Nature* **500**, 319–322 (2013).
- ²⁶²C. Neill, P. Roushan, K. Kechedzhi, S. Boixo, S. V. Isakov, V. Smelyanskiy, A. Megrant, B. Chiaro, A. Dunsworth, K. Arya, R. Barends, B. Burkett, Y. Chen, Z. Chen, A. Fowler, B. Foxen, M. Giustina, R. Graff, E. Jeffrey, T. Huang, J. Kelly, P. Klimov, E. Lucero, J. Mutus, M. Neeley, C. Quintana, D. Sank, A. Vainsencher, J. Wenner, T. C. White, H. Neven, and J. M. Martinis, "A blueprint for demonstrating quantum supremacy with superconducting qubits," *Science* **360**, 195–199 (2018).
- ²⁶³A. W. Harrow, A. Hassidim, and S. Lloyd, "Quantum algorithm for linear systems of equations," *Phys. Rev. Lett.* **103**, 150502 (2009).
- ²⁶⁴Y. Zheng, C. Song, M.-C. Chen, B. Xia, W. Liu, Q. Guo, L. Zhang, D. Xu, H. Deng, K. Huang, Y. Wu, Z. Yan, D. Zheng, L. Lu, J.-W. Pan, H. Wang, C.-Y. Lu, and X. Zhu, "Solving systems of linear equations with a superconducting quantum processor," *Phys. Rev. Lett.* **118**, 210504 (2017).
- ²⁶⁵T. Larsen, K. Petersson, F. Kuemmeth, T. Jespersen, P. Krogstrup, J. Nygård, and C. Marcus, "Semiconductor-nanowire-based superconducting qubit," *Phys. Rev. Lett.* **115**, 127001 (2015).
- ²⁶⁶G. de Lange, B. van Heck, A. Bruno, D. van Woerkom, A. Geresdi, S. Plissard, E. Bakkers, A. Akhmerov, and L. DiCarlo, "Realization of microwave quantum circuits using hybrid superconducting-semiconducting nanowire Josephson elements," *Phys. Rev. Lett.* **115**, 127002 (2015).
- ²⁶⁷J. I.-J. Wang, D. Rodan-Legrain, L. Bretheau, D. L. Campbell, B. Kannan, D. Kim, M. Kjaergaard, P. Krantz, G. O. Samach, F. Yan, J. L. Yoder, K. Watanabe, T. Taniguchi, T. P. Orlando, S. Gustavsson, P. Jarillo-Herrero, and W. D. Oliver, "Coherent control of a hybrid superconducting circuit made with graphene-based van der Waals heterostructures," *Nat. Nanotechnol.* **14**, 120–125 (2019).
- ²⁶⁸L. Casparis, T. Larsen, M. Olsen, F. Kuemmeth, P. Krogstrup, J. Nygård, K. Petersson, and C. Marcus, "Gatemon benchmarking and two-qubit operations," *Phys. Rev. Lett.* **116**, 150505 (2016).
- ²⁶⁹G. S. Paraoanu, "Microwave-induced coupling of superconducting qubits," *Phys. Rev. B* **74**, 140504 (2006).
- ²⁷⁰C. Rigetti and M. Devoret, "Fully microwave-tunable universal gates in superconducting qubits with linear couplings and fixed transition frequencies," *Phys. Rev. B* **81**, 134507 (2010).
- ²⁷¹P. C. de Groot, J. Lisenfeld, R. N. Schouten, S. Ashhab, A. Lupaşcu, C. J. P. M. Harmans, and J. E. Mooij, "Selective darkening of degenerate transitions demonstrated with two superconducting quantum bits," *Nat. Phys.* **6**, 763–766 (2010).
- ²⁷²J. M. Gambetta, "Control of superconducting qubits," in *Lecture Notes of the 44th IFF Spring School*, edited by D. P. DiVincenzo (Forschungszentrum Jülich, 2013).
- ²⁷³J. M. Chow, J. M. Gambetta, A. D. Córcoles, S. T. Merkel, J. A. Smolin, C. Rigetti, S. Poletto, G. A. Keefe, M. B. Rothwell, J. R. Rozen, M. B. Ketchen, and M. Steffen, "Universal quantum gate set approaching fault-tolerant thresholds with superconducting qubits," *Phys. Rev. Lett.* **109**, 060501 (2012).
- ²⁷⁴J. M. Chow, A. D. Córcoles, J. M. Gambetta, C. Rigetti, B. R. Johnson, J. A. Smolin, J. R. Rozen, G. A. Keefe, M. B. Rothwell, M. B. Ketchen, and M. Steffen, "Simple all-microwave entangling gate for fixed-frequency superconducting qubits," *Phys. Rev. Lett.* **107**, 080502 (2011).
- ²⁷⁵J. M. Chow, J. M. Gambetta, E. Magesan, D. W. Abraham, A. W. Cross, B. R. Johnson, N. A. Masluk, C. A. Ryan, J. A. Smolin, S. J. Srinivasan, and M. Steffen, "Implementing a strand of a scalable fault-tolerant quantum computing fabric," *Nat. Commun.* **5**, 4015 (2014).
- ²⁷⁶A. Córcoles, E. Magesan, S. J. Srinivasan, A. W. Cross, M. Steffen, J. M. Gambetta, and J. M. Chow, "Demonstration of a quantum error detection code using a square lattice of four superconducting qubits," *Nat. Commun.* **6**, 6979 (2015).
- ²⁷⁷M. Takita, A. Córcoles, E. Magesan, B. Abdo, M. Brink, A. Cross, J. M. Chow, and J. M. Gambetta, "Demonstration of weight-four parity measurements in the surface code architecture," *Phys. Rev. Lett.* **117**, 210505 (2016).
- ²⁷⁸E. Magesan and J. M. Gambetta, "Effective Hamiltonian models of the cross-resonance gate," preprint [arXiv:1804.04073](https://arxiv.org/abs/1804.04073) (2018).
- ²⁷⁹S. Kirchhoff, T. Keßler, P. J. Liebermann, E. Assémat, S. Machnes, F. Motzoi, and F. K. Wilhelm, "Optimized cross-resonance gate for coupled transmon systems," *Phys. Rev. A* **97**, 042348 (2018).
- ²⁸⁰A. Kandala, A. Mezzacapo, K. Temme, M. Takita, M. Brink, J. M. Chow, and J. M. Gambetta, "Hardware-efficient variational quantum eigensolver for small molecules and quantum magnets," *Nature* **549**, 242–246 (2017).
- ²⁸¹S. Bravyi, J. M. Gambetta, A. Mezzacapo, and K. Temme, "Tapering off qubits to simulate fermionic Hamiltonians," preprint [arXiv:1701.08213](https://arxiv.org/abs/1701.08213) (2017).
- ²⁸²See <https://quantumexperience.ngbluemix.net/qx/editor> for "IBM Quantum Experience."
- ²⁸³M. Takita, A. W. Cross, A. Córcoles, J. M. Chow, and J. M. Gambetta, "Experimental demonstration of fault-tolerant state preparation with superconducting qubits," *Phys. Rev. Lett.* **119**, 180501 (2017).

- ²⁸⁴D. W. Leung, M. A. Nielsen, I. L. Chuang, and Y. Yamamoto, "Approximate quantum error correction can lead to better codes," *Phys. Rev. A* **56**, 2567–2573 (1997).
- ²⁸⁵D. Gottesman, "Quantum fault tolerance in small experiments," preprint [arXiv:1610.03507](https://arxiv.org/abs/1610.03507) (2016).
- ²⁸⁶C. Vuillot, "Is error detection helpful on IBM 5Q chips?," preprint [arXiv:1705.08957](https://arxiv.org/abs/1705.08957) (2017).
- ²⁸⁷D. Ristè, M. P. da Silva, C. A. Ryan, A. W. Cross, A. D. Córcoles, J. A. Smolin, J. M. Gambetta, J. M. Chow, and B. R. Johnson, "Demonstration of quantum advantage in machine learning," *npj Quantum Inf.* **3**, 16 (2017).
- ²⁸⁸D. J. C. MacKay, *Information Theory, Inference, and Learning Algorithms* (Cambridge University Press, 2003), p. 628.
- ²⁸⁹P. Rebentrost, M. Mohseni, and S. Lloyd, "Quantum support vector machine for big data classification," *Phys. Rev. Lett.* **113**, 130503 (2014).
- ²⁹⁰J. Biamonte, P. Wittek, N. Pancotti, P. Rebentrost, N. Wiebe, and S. Lloyd, "Quantum machine learning," *Nature* **549**, 195–202 (2017).
- ²⁹¹S. Poletto, J. M. Gambetta, S. T. Merkel, J. A. Smolin, J. M. Chow, A. D. Córcoles, G. A. Keefe, M. B. Rothwell, J. R. Rozen, D. W. Abraham, C. Rigetti, and M. Steffen, "Entanglement of two superconducting qubits in a waveguide cavity via monochromatic two-photon excitation," *Phys. Rev. Lett.* **109**, 240505 (2012).
- ²⁹²K. Mølmer and A. Sørensen, "Multiparticle entanglement of hot trapped ions," *Phys. Rev. Lett.* **82**, 1835–1838 (1999).
- ²⁹³J. Colless, V. Ramasesh, D. Dahlen, M. Blok, M. Kimchi-Schwartz, J. McClean, J. Carter, W. de Jong, and I. Siddiqi, "Computation of molecular spectra on a quantum processor with an error-resilient algorithm," *Phys. Rev. X* **8**, 011021 (2018).
- ²⁹⁴A. W. Cross and J. M. Gambetta, "Optimized pulse shapes for a resonator-induced phase gate," *Phys. Rev. A* **91**, 032325 (2015).
- ²⁹⁵S. Puri and A. Blais, "High-fidelity resonator-induced phase gate with single-mode squeezing," *Phys. Rev. Lett.* **116**, 180501 (2016).
- ²⁹⁶H. Paik, A. Mezzacapo, M. Sandberg, D. McClure, B. Abdo, A. Córcoles, O. Dial, D. Bogorin, B. Plourde, M. Steffen, A. Cross, J. Gambetta, and J. M. Chow, "Experimental demonstration of a resonator-induced phase gate in a multiqubit circuit-QED system," *Phys. Rev. Lett.* **117**, 250502 (2016).
- ²⁹⁷P. Bertet, C. J. P. M. Harmans, and J. E. Mooij, "Parametric coupling for superconducting qubits," *Phys. Rev. B* **73**, 064512 (2006).
- ²⁹⁸F. Wulschner, J. Goetz, F. R. Koessel, E. Hoffmann, A. Baust, P. Eder, M. Fischer, M. Haeberlein, M. J. Schwarz, M. Pernpeintner, E. Xie, L. Zhong, C. W. Zollitsch, B. Peropadre, J.-J. García-Ripoll, E. Solano, K. G. Fedorov, E. P. Menzel, F. Deppe, A. Marx, and R. Gross, "Tunable coupling of transmission-line microwave resonators mediated by an rf SQUID," *EPJ Quantum Technol.* **3**, 10 (2016).
- ²⁹⁹M. Allman, J. Whittaker, M. Castellanos-Beltran, K. Cicak, F. da Silva, M. DeFeo, F. Lecocq, A. Sirois, J. Teufel, J. Aumentado, and R. Simmonds, "Tunable resonant and nonresonant interactions between a phase qubit and L C resonator," *Phys. Rev. Lett.* **112**, 123601 (2014).
- ³⁰⁰M. Wallquist, V. S. Shumeiko, and G. Wendin, "Selective coupling of superconducting charge qubits mediated by a tunable stripline cavity," *Phys. Rev. B* **74**, 224506 (2006).
- ³⁰¹K. Harrabi, F. Yoshihara, A. O. Niskanen, Y. Nakamura, and J. S. Tsai, "Engineered selection rules for tunable coupling in a superconducting quantum circuit," *Phys. Rev. B* **79**, 020507 (2009).
- ³⁰²H. Wang, M. Mariani, R. C. Bialczak, M. Lenander, E. Lucero, M. Neeley, A. D. O'Connell, D. Sank, M. Weides, J. Wenner, T. Yamamoto, Y. Yin, J. Zhao, J. M. Martinis, and A. N. Cleland, "Deterministic entanglement of photons in two superconducting microwave resonators," *Phys. Rev. Lett.* **106**, 060401 (2011).
- ³⁰³J. D. Whittaker, F. C. S. da Silva, M. S. Allman, F. Lecocq, K. Cicak, A. J. Sirois, J. D. Teufel, J. Aumentado, and R. W. Simmonds, "Tunable-cavity QED with phase qubits," *Phys. Rev. B* **90**, 024513 (2014).
- ³⁰⁴C. K. Andersen and K. Mølmer, "Multifrequency modes in superconducting resonators: Bridging frequency gaps in off-resonant couplings," *Phys. Rev. A* **91**, 023828 (2015).
- ³⁰⁵J. S. Otterbach, R. Manenti, N. Alidoust, A. Bestwick, M. Block, B. Bloom, S. Caldwell, N. Didier, E. S. Fried, S. Hong, P. Karalekas, C. B. Osborn, A. Papageorge, E. C. Peterson, G. Prawiroatmodjo, N. Rubin, C. A. Ryan, D. Scarabelli, M. Scheer, E. A. Sete, P. Sivarajah, R. S. Smith, A. Staley, N. Tezak, W. J. Zeng, A. Hudson, B. R. Johnson, M. Reagor, M. P. da Silva, and C. Rigetti, "Unsupervised machine learning on a hybrid quantum computer," preprint [arXiv:1712.05771](https://arxiv.org/abs/1712.05771) (2017).
- ³⁰⁶V. B. Braginsky and F. Y. Khalili, "Quantum nondemolition measurements: The route from toys to tools," *Rev. Mod. Phys.* **68**, 1–11 (1996).
- ³⁰⁷E. T. Jaynes and F. W. Cummings, "Comparison of quantum and semiclassical radiation theories with application to the beam maser," *Proc. IEEE* **51**, 89–109 (1963).
- ³⁰⁸B. W. Shore and P. L. Knight, "The Jaynes-Cummings model," *J. Mod. Opt.* **40**, 1195–1238 (1993).
- ³⁰⁹C. C. Gerry and P. L. Knight, *Introductory Quantum Optics* (Cambridge University Press, Cambridge, England, 2005).
- ³¹⁰M. Boissonneault, J. M. Gambetta, and A. Blais, "Dispersive regime of circuit QED: Photon-dependent qubit dephasing and relaxation rates," *Phys. Rev. A* **79**, 013819 (2009).
- ³¹¹J. Gambetta, A. Blais, D. I. Schuster, A. Wallraff, L. Frunzio, J. Majer, M. H. Devoret, S. M. Girvin, and R. J. Schoelkopf, "Qubit-photon interactions in a cavity: Measurement-induced dephasing and number splitting," *Phys. Rev. A* **74**, 042318 (2006).
- ³¹²D. Sank, Z. Chen, M. Khezri, J. Kelly, R. Barends, B. Campbell, Y. Chen, B. Chiaro, A. Dunsworth, A. Fowler, E. Jeffrey, E. Lucero, A. Megrant, J. Mutus, M. Neeley, C. Neill, P. J. J. O'Malley, C. Quintana, P. Roushan, A. Vainsencher, T. White, J. Wenner, A. N. Korotkov, and J. M. Martinis, "Measurement-induced state transitions in a superconducting qubit: Beyond the rotating wave approximation," *Phys. Rev. Lett.* **117**, 190503 (2016).
- ³¹³M. D. Reed, L. DiCarlo, B. R. Johnson, L. Sun, D. I. Schuster, L. Frunzio, and R. J. Schoelkopf, "High-fidelity readout in circuit quantum electrodynamics using the Jaynes-Cummings nonlinearity," *Phys. Rev. Lett.* **105**, 173601 (2010).
- ³¹⁴A. J. Kerman, "Quantum information processing using quasiclassical electromagnetic interactions between qubits and electrical resonators," *New J. Phys.* **15**, 123011 (2013).
- ³¹⁵S. Richer and D. DiVincenzo, "Circuit design implementing longitudinal coupling: A scalable scheme for superconducting qubits," *Phys. Rev. B* **93**, 134501 (2016).
- ³¹⁶G. Zhang, Y. Liu, J. J. Raftery, and A. A. Houck, "Suppression of photon shot noise dephasing in a tunable coupling superconducting qubit," *npj Quantum Inf.* **3**, 1 (2017).
- ³¹⁷M. Reed, "Entanglement and quantum error correction with superconducting qubits," Ph.D. thesis (Yale University, 2013).
- ³¹⁸F. Marki and C. Marki, *Mixer Basics Primer—A Tutorial for RF & Microwave Mixers* (Marki Microwave, Inc., 2010).
- ³¹⁹L. Mandel and E. Wolf, *Optical Coherence and Quantum Optics* (Cambridge University Press, 1995).
- ³²⁰C. M. Caves, "Quantum limits on noise in linear amplifiers," *Phys. Rev. D* **26**, 1817–1839 (1982).
- ³²¹M. Simeon, C. W. S. Chang, P. Krantz, J. Bylander, W. Wustmann, V. Shumeiko, and P. Delsing, "Characterization of a multimode coplanar waveguide parametric amplifier," *J. Appl. Phys.* **118**, 154501 (2015).
- ³²²C. Macklin, K. O'Brien, D. Hover, M. E. Schwartz, V. Bolkhovskoy, X. Zhang, W. D. Oliver, and I. Siddiqi, "A near-quantum-limited Josephson traveling-wave parametric amplifier," *Science* **350**, 307–310 (2015).
- ³²³E. M. Purcell, H. C. Torrey, and R. V. Pound, "Resonance absorption by nuclear magnetic moments in a solid," *Phys. Rev.* **69**, 37–38 (1946).
- ³²⁴A. A. Houck, J. A. Schreier, B. R. Johnson, J. M. Chow, J. Koch, J. M. Gambetta, D. I. Schuster, L. Frunzio, M. H. Devoret, S. M. Girvin, and R. J. Schoelkopf, "Controlling the spontaneous emission of a superconducting transmon qubit," *Phys. Rev. Lett.* **101**, 080502 (2008).
- ³²⁵M. D. Reed, B. R. Johnson, A. A. Houck, L. DiCarlo, J. M. Chow, D. I. Schuster, L. Frunzio, and R. J. Schoelkopf, "Fast reset and suppressing spontaneous emission of a superconducting qubit," *Appl. Phys. Lett.* **96**, 203110 (2010).
- ³²⁶E. Jeffrey, D. Sank, J. Y. Mutus, T. C. White, J. Kelly, R. Barends, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, A. Megrant, P. J. O'Malley, C. Neill, P. Roushan, A. Vainsencher, J. Wenner, A. N. Cleland, and J. M. Martinis, "Fast accurate state measurement with superconducting qubits," *Phys. Rev. Lett.* **112**, 1–5 (2014); e-print [arXiv:1401.0257](https://arxiv.org/abs/1401.0257).

- ³²⁷N. T. Bronn, Y. Liu, J. B. Hertzberg, A. D. Córcoles, A. A. Houck, J. M. Gambetta, and J. M. Chow, "Broadband filters for abatement of spontaneous emission in circuit quantum electrodynamics," *Appl. Phys. Lett.* **107**, 172601 (2015).
- ³²⁸I.-C. Hoi, C. M. Wilson, G. Johansson, T. Palomaki, B. Peropadre, and P. Delsing, "Demonstration of a single-photon router in the microwave regime," *Phys. Rev. Lett.* **107**, 073601 (2011).
- ³²⁹K. Inomata, Z. Lin, K. Koshino, W. D. Oliver, J.-S. Tsai, T. Yamamoto, and Y. Nakamura, "Single microwave-photon detector using an artificial Λ -type three-level system," *Nat. Commun.* **7**, 12303 (2016).
- ³³⁰D. M. Pozar, *Microwave Engineering* (John Wiley & Sons, 2004).
- ³³¹H. A. Haus and J. A. Mullen, "Quantum noise in linear amplifiers," *Phys. Rev.* **128**, 2407–2413 (1962).
- ³³²E. Flurin, "The Josephson mixer, a Swiss army knife for microwave quantum optics," Ph.D. thesis (École Normale Supérieure, Paris, 2014).
- ³³³K. Shimoda, H. Takahasi, and C. H. Townes, "Fluctuations in amplification of quanta with application to maser amplifiers," *J. Phys. Soc. Jpn.* **12**, 686–700 (1957).
- ³³⁴A. A. Clerk, S. M. Girvin, and A. D. Stone, "Quantum-limited measurement and information in mesoscopic detectors," *Phys. Rev. B* **67**, 165324 (2003).
- ³³⁵C. C. Bultink, B. Tarasinski, N. Haandbæk, S. Poletto, N. Haider, D. J. Michalak, A. Bruno, and L. DiCarlo, "General method for extracting the quantum efficiency of dispersive qubit readout in circuit QED," *Appl. Phys. Lett.* **112**, 092601 (2018).
- ³³⁶B. Yurke, P. G. Kaminsky, R. E. Miller, E. A. Whittaker, A. D. Smith, A. H. Silver, and R. W. Simon, "Observation of 4.2-K equilibrium-noise squeezing via a Josephson-parametric amplifier," *Phys. Rev. Lett.* **60**, 764–767 (1988).
- ³³⁷C. W. Gardiner, "Inhibition of atomic phase decays by squeezed light: A direct effect of squeezing," *Phys. Rev. Lett.* **56**, 1917–1920 (1986).
- ³³⁸K. W. Murch, S. J. Weber, K. M. Beck, E. Ginossar, and I. Siddiqi, "Reduction of the radiative decay of atomic coherence in squeezed vacuum," *Nature* **499**, 62 (2013).
- ³³⁹D. M. Toyli, A. W. Eddins, S. Boutin, S. Puri, D. Hover, V. Bolkhovskiy, W. D. Oliver, A. Blais, and I. Siddiqi, "Resonance fluorescence from an artificial atom in squeezed vacuum," *Phys. Rev. X* **6**, 031004 (2016).
- ³⁴⁰C. Eichler, D. Bozyigit, C. Lang, M. Baur, L. Steffen, J. M. Fink, S. Filipp, and A. Wallraff, "Observation of two-mode squeezing in the microwave frequency domain," *Phys. Rev. Lett.* **107**, 113601 (2011).
- ³⁴¹A. Roy and M. Devoret, "Introduction to parametric amplification of quantum signals with Josephson circuits," *C. R. Phys.* **17**, 740–755 (2016).
- ³⁴²W. Wustmann and V. Shumeiko, "Parametric resonance in tunable superconducting cavities," *Phys. Rev. B* **87**, 184501 (2013); e-print [arXiv:1302.3484](https://arxiv.org/abs/1302.3484).
- ³⁴³G. J. Dolan, "Offset masks for lift-off photoprocessing," *Appl. Phys. Lett.* **31**, 337–339 (1977).
- ³⁴⁴B. Yurke, L. R. Corruccini, P. G. Kaminsky, L. W. Rupp, A. D. Smith, A. H. Silver, R. W. Simon, and E. A. Whittaker, "Observation of parametric amplification and deamplification in a Josephson parametric amplifier," *Phys. Rev. A* **39**, 2519–2533 (1989).
- ³⁴⁵W. Wustmann and V. Shumeiko, "Nondegenerate parametric resonance in a tunable superconducting cavity," *Phys. Rev. Appl.* **8**, 024018 (2017).
- ³⁴⁶S. Wahlsten, S. Rudner, and T. Claeson, "Arrays of Josephson tunnel junctions as parametric amplifiers," *J. Appl. Phys.* **49**, 4248 (1978).
- ³⁴⁷H. K. Olsson and T. Claeson, "Low-noise Josephson parametric amplification and oscillations at 9 GHz," *J. Appl. Phys.* **64**, 5234–5243 (1988).
- ³⁴⁸I. Siddiqi, R. Vijay, F. Pierre, C. M. Wilson, M. Metcalfe, C. Rigetti, L. Frunzio, and M. H. Devoret, "Rf-driven Josephson bifurcation amplifier for quantum measurement," *Phys. Rev. Lett.* **93**, 207002 (2004).
- ³⁴⁹E. A. Tholén, A. Ergül, E. M. Doherty, F. M. Weber, F. Grégis, and D. B. Haviland, "Nonlinearities and parametric amplification in superconducting coplanar waveguide resonators," *Appl. Phys. Lett.* **90**, 253509 (2007); e-print [arXiv:0702280](https://arxiv.org/abs/0702280).
- ³⁵⁰M. A. Castellanos-Beltran and K. W. Lehnert, "Widely tunable parametric amplifier based on a superconducting quantum interference device array resonator," *Appl. Phys. Lett.* **91**, 083509 (2007).
- ³⁵¹T. Yamamoto, K. Inomata, M. Watanabe, K. Matsuba, T. Miyazaki, W. D. Oliver, Y. Nakamura, and J. S. Tsai, "Flux-driven Josephson parametric amplifier," *Appl. Phys. Lett.* **93**, 042510 (2008).
- ³⁵²M. A. Castellanos-Beltran, K. D. Irwin, G. C. Hilton, L. R. Vale, and K. W. Lehnert, "Amplification and squeezing of quantum noise with a tunable Josephson metamaterial," *Nat. Phys.* **4**, 929 (2008).
- ³⁵³C. Wilson, T. Duty, M. Sandberg, F. Persson, V. Shumeiko, and P. Delsing, "Photon generation in an electromagnetic cavity with a time-dependent boundary," *Phys. Rev. Lett.* **105**, 233907 (2010).
- ³⁵⁴K. M. Sundqvist, S. Kintas, M. Simoen, P. Krantz, M. Sandberg, C. M. Wilson, and P. Delsing, "The pumpistor: A linearized model of a flux-pumped superconducting quantum interference device for use as a negative-resistance parametric amplifier," *Appl. Phys. Lett.* **103**, 102603 (2013).
- ³⁵⁵K. M. Sundqvist and P. Delsing, "Negative-resistance models for parametrically flux-pumped superconducting quantum interference devices," *EPJ Quantum Technol.* **1**, 6 (2014).
- ³⁵⁶M. I. Dykman, C. M. Maloney, V. N. Smelyanskiy, and M. Silverstein, "Fluctuational phase-flip transitions in parametrically driven oscillators," *Phys. Rev. E* **57**, 5202–5212 (1998).
- ³⁵⁷R. Vijay, M. H. Devoret, and I. Siddiqi, "Invited review article: The Josephson bifurcation amplifier," *Rev. Sci. Instrum.* **80**, 111101 (2009).
- ³⁵⁸J. C. Lee, W. D. Oliver, K. K. Berggren, and T. P. Orlando, "Nonlinear resonant behavior of a dispersive readout circuit for a superconducting flux qubit," *Phys. Rev. B* **75**, 144505 (2007).
- ³⁵⁹F. Mallet, F. R. Ong, A. Palacios-Laloy, F. Nguyen, P. Bertet, D. Vion, and D. Esteve, "Single-shot qubit readout in circuit quantum electrodynamics," *Nat. Phys.* **5**, 791–795 (2009).
- ³⁶⁰P. Krantz, A. Bengtsson, M. Simoen, S. Gustavsson, V. Shumeiko, W. D. Oliver, C. M. Wilson, P. Delsing, and J. Bylander, "Single-shot readout of a superconducting qubit using a Josephson parametric oscillator," *Nat. Commun.* **7**, 11417 (2016); e-print [arXiv:1508.02886](https://arxiv.org/abs/1508.02886).
- ³⁶¹P. Krantz, "The Josephson parametric oscillator—From microscopic studies to single-shot qubit readout," Ph.D. thesis (Chalmers University of Technology, 2016).
- ³⁶²Z. R. Lin, K. Inomata, W. D. Oliver, K. Koshino, Y. Nakamura, J. S. Tsai, and T. Yamamoto, "Single-shot readout of a superconducting flux qubit with a flux-driven Josephson parametric amplifier," *Appl. Phys. Lett.* **103**, 132602 (2013).
- ³⁶³Z. R. Lin, K. Inomata, K. Koshino, W. D. Oliver, Y. Nakamura, J. S. Tsai, and T. Yamamoto, "Josephson parametric phase-locked oscillator and its application to dispersive readout of superconducting qubits," *Nat. Commun.* **5**, 4480 (2014); e-print [arXiv:1407.7195](https://arxiv.org/abs/1407.7195).
- ³⁶⁴J. R. Johansson, G. Johansson, C. M. Wilson, and F. Nori, "Dynamical Casimir effect in a superconducting coplanar waveguide," *Phys. Rev. Lett.* **103**, 147003 (2009).
- ³⁶⁵J. R. Johansson, G. Johansson, C. M. Wilson, and F. Nori, "Dynamical Casimir effect in superconducting microwave circuits," *Phys. Rev. A* **82**, 052509 (2010).
- ³⁶⁶C. M. Wilson, G. Johansson, A. Pourkabirian, M. Simoen, J. R. Johansson, T. Duty, F. Nori, and P. Delsing, "Observation of the dynamical Casimir effect in a superconducting circuit," *Nature* **479**, 376 (2011).
- ³⁶⁷P. Krantz, Y. Reshitnyk, W. Wustmann, J. Bylander, S. Gustavsson, W. D. Oliver, T. Duty, V. Shumeiko, and P. Delsing, "Investigation of nonlinear effects in Josephson parametric oscillators used in circuit quantum electrodynamics," *New J. Phys.* **15**, 105002 (2013).
- ³⁶⁸P. Krantz, *Parametrically Pumped Superconducting Circuits* (Chalmers University of Technology, 2013).
- ³⁶⁹I.-M. Svensson, A. Bengtsson, P. Krantz, J. Bylander, V. Shumeiko, and P. Delsing, "Period-tripling subharmonic oscillations in a driven superconducting resonator," *Phys. Rev. B* **96**, 174503 (2017).
- ³⁷⁰I.-M. Svensson, M. Pierre, M. Simoen, W. Wustmann, P. Krantz, A. Bengtsson, G. Johansson, J. Bylander, V. Shumeiko, and P. Delsing, "Microwave photon generation in a doubly tunable superconducting resonator," *J. Phys.: Conf. Ser.* **969**, 012146 (2018).
- ³⁷¹A. Bengtsson, P. Krantz, M. Simoen, I.-M. Svensson, B. Schneider, V. Shumeiko, P. Delsing, and J. Bylander, "Nondegenerate parametric oscillations in a tunable superconducting resonator," *Phys. Rev. B* **97**, 144502 (2018).
- ³⁷²M. Simoen, "Parametric interactions with signals and the vacuum," Ph.D. thesis (Chalmers University of Technology, 2015).

- ³⁷³C. Eichler, Y. Salathe, J. Mlynek, S. Schmidt, and A. Wallraff, "Quantum-limited amplification and entanglement in coupled nonlinear resonators," *Phys. Rev. Lett.* **113**, 110502 (2014).
- ³⁷⁴N. Bergeal, R. Vijay, V. E. Manucharyan, I. Siddiqi, R. J. Schoelkopf, S. M. Girvin, and M. H. Devoret, "Analog information processing at the quantum limit with a Josephson ring modulator," *Nat. Phys.* **6**, 296 (2010).
- ³⁷⁵N. Bergeal, F. Schackert, M. Metcalfe, R. Vijay, V. E. Manucharyan, L. Frunzio, D. E. Prober, R. J. Schoelkopf, S. M. Girvin, and M. H. Devoret, "Phase-preserving amplification near the quantum limit with a Josephson ring modulator," *Nature* **465**, 64 (2010).
- ³⁷⁶B. Abdo, F. Schackert, M. Hatridge, C. Rigetti, and M. Devoret, "Josephson amplifier for qubit readout," *Appl. Phys. Lett.* **99**, 162506 (2011).
- ³⁷⁷B. Abdo, A. Kamal, and M. Devoret, "Nondegenerate three-wave mixing with the Josephson ring modulator," *Phys. Rev. B* **87**, 014508 (2013).
- ³⁷⁸G. Liu, T.-C. Chien, X. Cao, O. Lanes, E. Alperin, D. Pekker, and M. Hatridge, "Josephson parametric converter saturation and higher order effects," *Appl. Phys. Lett.* **111**, 202603 (2017).
- ³⁷⁹Y. Chen, D. Sank, P. O'Malley, T. White, R. Barends, B. Chiaro, J. Kelly, E. Lucero, M. Mariantoni, A. Megrant, C. Neill, A. Vainsencher, J. Wenner, Y. Yin, A. N. Cleland, and J. M. Martinis, "Multiplexed dispersive readout of superconducting phase qubits," *Appl. Phys. Lett.* **101**, 182601 (2012).
- ³⁸⁰M. Jerger, S. Poletto, P. Macha, U. Hübner, E. Il'ichev, and A. V. Ustinov, "Frequency division multiplexing readout and simultaneous manipulation of an array of flux qubits," *Appl. Phys. Lett.* **101**, 042604 (2012).
- ³⁸¹B. J. Chapman, E. I. Rosenthal, J. Kerckhoff, L. R. Vale, G. C. Hilton, and K. W. Lehnert, "Single-sideband modulator for frequency domain multiplexing of superconducting qubit readout," *Appl. Phys. Lett.* **110**, 162601 (2017).
- ³⁸²T. Roy, S. Kundu, M. Chand, A. M. Vadiraj, A. Ranadive, N. Nehra, M. P. Patankar, J. Aumentado, A. A. Clerk, and R. Vijay, "Broadband parametric amplification with impedance engineering: Beyond the gain-bandwidth product," *Appl. Phys. Lett.* **107**, 262601 (2015).
- ³⁸³B. Ho Eom, P. K. Day, H. G. LeDuc, and J. Zmuidzinas, "A wideband, low-noise superconducting amplifier with high dynamic range," *Nat. Phys.* **8**, 623 (2012).
- ³⁸⁴C. Bockstiegel, J. Gao, M. R. Vissers, M. Sandberg, S. Chaudhuri, A. Sanders, L. R. Vale, K. Irwin, and D. P. Pappas, "Development of a broadband NbTiN traveling wave parametric amplifier for MKID readout," *J. Low Temp. Phys.* **176**, 476 (2014).
- ³⁸⁵A. A. Adamyan, S. E. de Graaf, S. E. Kubatkin, and A. V. Danilov, "Superconducting microwave parametric amplifier based on a quasi-fractal slow propagation line," *J. Appl. Phys.* **119**, 083901 (2016).
- ³⁸⁶K. O'Brien, C. Macklin, I. Siddiqi, and X. Zhang, "Resonant phase matching of Josephson junction traveling wave parametric amplifiers," *Phys. Rev. Lett.* **113**, 157001 (2014).
- ³⁸⁷T. C. White, J. Y. Mutus, I.-C. Hoi, R. Barends, B. Campbell, Y. Chen, Z. Chen, B. Chiaro, A. Dunsworth, E. Jeffrey, J. Kelly, A. Megrant, C. Neill, P. J. J. O'Malley, P. Roushan, D. Sank, A. Vainsencher, J. Wenner, S. Chaudhuri, J. Gao, and J. M. Martinis, "Traveling wave parametric amplifier with Josephson junctions using minimal resonator phase matching," *Appl. Phys. Lett.* **106**, 242601 (2015).
- ³⁸⁸N. E. Frattini, V. V. Sivak, A. Lingenfelter, S. Shankar, and M. H. Devoret, "Optimizing the nonlinearity and dissipation of a snail parametric amplifier for dynamic range," *Phys. Rev. Appl.* **10**, 054020 (2018).
- ³⁸⁹E. Farhi, J. Goldstone, S. Gutmann, and M. Sipser, "Quantum computation by adiabatic evolution," preprint [arXiv:0001106](https://arxiv.org/abs/0001106) [quant-ph] (2000).
- ³⁹⁰E. Farhi, J. Goldstone, S. Gutmann, J. Lapan, A. Lundgren, and D. Preda, "A quantum adiabatic evolution algorithm applied to random instances of an NP-complete problem," *Science* **292**, 472–475 (2001).
- ³⁹¹See <https://www.dwavesys.com/d-wave-two-system> for "The D-Wave 2000Q System."
- ³⁹²V. S. Denchev, S. Boixo, S. V. Isakov, N. Ding, R. Babbush, V. Smelyanskiy, J. Martinis, and H. Neven, "What is the computational value of finite-range tunneling?," *Phys. Rev. X* **6**, 031015 (2016).
- ³⁹³T. Albash and D. A. Lidar, "Demonstration of a scaling advantage for a quantum annealer over simulated annealing," *Phys. Rev. X* **8**, 031016 (2018).
- ³⁹⁴J. King, S. Yarkoni, J. Raymond, I. Ozfidan, A. D. King, M. M. Nevisi, J. P. Hilton, and C. C. McGeoch, "Quantum annealing amid local ruggedness and global frustration," *J. Phys. Soc. Jpn.* **88**, 061007 (2019).
- ³⁹⁵M. Reagor, H. Paik, G. Catelani, L. Sun, C. Axline, E. Holland, I. M. Pop, N. A. Masluk, T. Brecht, L. Frunzio, M. H. Devoret, L. Glazman, and R. J. Schoelkopf, "Reaching 10 ms single photon lifetimes for superconducting aluminum cavities," *Appl. Phys. Lett.* **102**, 192604 (2013).
- ³⁹⁶W. Pfaff, C. J. Axline, L. D. Burkhardt, U. Vool, P. Reinhold, L. Frunzio, L. Jiang, M. H. Devoret, and R. J. Schoelkopf, "Controlled release of multiphoton quantum states from a microwave cavity memory," *Nat. Phys.* **13**, 882 (2017).
- ³⁹⁷R. W. Heeres, P. Reinhold, N. Ofek, L. Frunzio, L. Jiang, M. H. Devoret, and R. J. Schoelkopf, "Implementing a universal gate set on a logical qubit encoded in an oscillator," *Nat. Commun.* **8**, 94 (2017).
- ³⁹⁸S. Rosenblum, Y. Y. Gao, P. Reinhold, C. Wang, C. J. Axline, L. Frunzio, S. M. Girvin, L. Jiang, M. Mirrahimi, M. H. Devoret, and R. J. Schoelkopf, "A CNOT gate between multiphoton qubits encoded in two cavities," *Nat. Commun.* **9**, 652 (2018).
- ³⁹⁹L. Hu, Y. Ma, W. Cai, X. Mu, Y. Xu, W. Wang, Y. Wu, H. Wang, Y. P. Song, C.-L. Zou, S. M. Girvin, L.-M. Duan, and L. Sun, "Quantum error correction and universal gate set operation on a binomial bosonic logical qubit," *Nat. Phys.* **15**, 503–508 (2019).
- ⁴⁰⁰S. K. Tolpygo, V. Bolkhovskiy, T. J. Weir, L. M. Johnson, M. A. Gouker, and W. D. Oliver, "Fabrication process and properties of fully-planarized deep-submicron Nb/Al-AlOx/Nb Josephson junctions for VLSI circuits," *IEEE Trans. Appl. Supercond.* **25**, 1101312 (2015).
- ⁴⁰¹J. H. Bejanin, T. G. McConkey, J. R. Rinehart, C. T. Earnest, C. R. H. McRae, D. Shiri, J. D. Bateman, Y. Rohanizadeh, B. Penava, P. Breul, S. Royak, M. Zapatka, A. G. Fowler, and M. Mariantoni, "Three-dimensional wiring for extensible quantum computing: The quantum socket," *Phys. Rev. Appl.* **6**, 044010 (2016).
- ⁴⁰²M. Vahidpour, W. O'Brien, J. T. Whyland, J. Angeles, J. Marshall, D. Scarabelli, G. Crossman, K. Yadav, Y. Mohan, C. Bui, V. Rawat, R. Renzas, N. Vodrahalli, A. Bestwick, and C. Rigetti, "Superconducting through-silicon vias for quantum integrated circuits," preprint [arXiv:1708.02226](https://arxiv.org/abs/1708.02226) (2017).
- ⁴⁰³D. Rosenberg, D. Kim, R. Das, D. Yost, S. Gustavsson, D. Hover, P. Krantz, A. Melville, L. Racz, G. O. Samach, S. J. Weber, F. Yan, J. L. Yoder, A. J. Kerman, and W. D. Oliver, "3D integrated superconducting qubits," *npj Quantum Inf.* **3**, 42 (2017).
- ⁴⁰⁴N. T. Bronn, V. P. Adiga, S. B. Olivadese, X. Wu, J. M. Chow, and D. P. Pappas, "High coherence plane breaking packaging for superconducting qubits," *Quantum Sci. Technol.* **3**, 024007 (2018).
- ⁴⁰⁵B. Foxen, J. Y. Mutus, E. Lucero, R. Graff, A. Megrant, Y. Chen, C. Quintana, B. Burkett, J. Kelly, E. Jeffrey, Y. Yang, A. Yu, K. Arya, R. Barends, Z. Chen, B. Chiaro, A. Dunsworth, A. Fowler, C. Gidney, M. Giustina, T. Huang, P. Klimov, M. Neeley, C. Neill, P. Roushan, D. Sank, A. Vainsencher, J. Wenner, T. C. White, and J. M. Martinis, "Qubit compatible superconducting interconnects," *Quantum Sci. Technol.* **3**, 014005 (2018).
- ⁴⁰⁶T. G. McConkey, J. H. Béjanin, C. T. Earnest, C. R. H. McRae, Z. Pagel, J. R. Rinehart, and M. Mariantoni, "Mitigating leakage errors due to cavity modes in a superconducting quantum computer," *Quantum Sci. Technol.* **3**, 034004 (2018).
- ⁴⁰⁷See <https://github.com/QCoDeS/Qcodes> for "QCoDeS."
- ⁴⁰⁸See https://github.com/DiCarloLab-Delft/PycQED_py3 for "PycQED."
- ⁴⁰⁹See <https://github.com/qkigroup/qkit> for "qKIT."
- ⁴¹⁰See <http://quantum.labber.org/> for "Labber Quantum."
- ⁴¹¹Y. Liu, "Quantum feedback control of multiple superconducting qubits," Ph.D. thesis (Yale University, 2016).
- ⁴¹²See <https://qiskit.org/> for "Qiskit."
- ⁴¹³R. S. Smith, M. J. Curtis, and W. J. Zeng, "A practical quantum instruction set architecture," preprint [arXiv:1608.03355](https://arxiv.org/abs/1608.03355) (2016).
- ⁴¹⁴D. S. Steiger, T. Häner, and M. Troyer, "ProjectQ: An open source software framework for quantum computing," *Quantum* **2**, 49 (2018); e-print [arXiv:1612.08091](https://arxiv.org/abs/1612.08091).
- ⁴¹⁵See <https://github.com/quantumlib/Cirq> for "Cirq."
- ⁴¹⁶J. R. McClean, I. D. Kivlichan, K. J. Sung, D. S. Steiger, Y. Cao, C. Dai, E. S. Fried, C. Gidney, B. Gimby, P. Gokhale, T. Häner, T. Hardikar, V. Havlíček, C. Huang, J. Izaac, Z. Jiang, X. Liu, M. Neeley, T. O'Brien, I. Ozfidan, M. D. Radin, J.

- Romero, N. Rubin, N. P. D. Sawaya, K. Setia, S. Sim, M. Steudtner, Q. Sun, W. Sun, F. Zhang, and R. Babbush, "OpenFermion: The electronic structure package for quantum computers," preprint [arXiv:1710.07629](https://arxiv.org/abs/1710.07629) (2017).
- ⁴¹⁷See <https://github.com/Microsoft/Quantum> for "The Microsoft Quantum Development kit."
- ⁴¹⁸R. LaRose, "Overview and comparison of gate level quantum software platforms," *Quantum* **3**, 130 (2019).
- ⁴¹⁹A. Kandala, K. Temme, A. D. Corcoles, A. Mezzacapo, J. M. Chow, and J. M. Gambetta, "Error mitigation extends the computational reach of a noisy quantum processor," *Nature* **567**, 419–495 (2019).
- ⁴²⁰S. Bravyi and A. Kitaev, "Universal quantum computation with ideal Clifford gates and noisy ancillas," *Phys. Rev. A* **71**, 022316 (2005).
- ⁴²¹C. J. Axline, L. D. Burkhardt, W. Pfaff, M. Zhang, K. Chou, P. Campagne-Ibarcq, P. Reinhold, L. Frunzio, S. M. Girvin, L. Jiang, M. H. Devoret, and R. J. Schoelkopf, "On-demand quantum state transfer and entanglement between remote microwave cavity memories," *Nat. Phys.* **14**, 705–710 (2018).
- ⁴²²P. Kurpiers, P. Magnard, T. Walter, B. Royer, M. Pechal, J. Heinsoo, Y. Salathé, A. Akin, S. Storz, J.-C. Besse, S. Gasparinetti, A. Blais, and A. Wallraff, "Deterministic quantum state transfer and remote entanglement using microwave photons," *Nature* **558**, 264–267 (2018).
- ⁴²³J. Preskill, "Quantum computing and the entanglement frontier," preprint [arXiv:1203.5813](https://arxiv.org/abs/1203.5813) (2012).
- ⁴²⁴A. W. Harrow and A. Montanaro, "Quantum computational supremacy," *Nature* **549**, 203–209 (2017).
- ⁴²⁵A. M. Dalzell, A. W. Harrow, D. E. Koh, and R. L. La Placa, "How many qubits are needed for quantum computational supremacy?," preprint [arXiv:1805.05224](https://arxiv.org/abs/1805.05224) (2018).
- ⁴²⁶S. Boixo, S. V. Isakov, V. N. Smelyanskiy, R. Babbush, N. Ding, Z. Jiang, M. J. Bremner, J. M. Martinis, and H. Neven, "Characterizing quantum supremacy in near-term devices," *Nat. Phys.* **14**, 595–600 (2018).
- ⁴²⁷Even though linear resonant systems cannot be addressed properly, their long coherence times have proven them useful as quantum access memories for storing quantum information, where a nonlinear ancilla system is used as a quantum controller for feeding and extracting excitations to/from the resonant cavity modes.⁴⁵
- ⁴²⁸The critical current is the maximum supercurrent that the junction can support before it switches to the resistive state with nonzero voltage.
- ⁴²⁹Starting from a generic qubit Hamiltonian, $H_0 = E_0|0\rangle\langle 0| + E_1|1\rangle\langle 1|$, we can rewrite in terms of Pauli matrices, and get $H_0 = ((E_0 + E_1)/2)\mathbb{1} - ((E_1 - E_0)/2)\sigma_z$. In the main text, we have ignored the constant offset term.
- ⁴³⁰In reality, superconducting qubits, just like natural atoms, have higher energy levels. These higher levels are outside of the computational subspace, but need to be taken into account for most qubit simulations to get accurate predictions of frequency shifts.
- ⁴³¹This commutation is approximate and has an asymptotic dependence on the qubit-resonator detuning.
- ⁴³²It has been demonstrated that it is still possible to read out the qubit state by applying a very strong resonator drive tone, even though this readout scheme is not QND³¹³.
- ⁴³³It is worth mentioning that the observed qubit frequency is always the Lamb-shifted frequency and not the bare qubit frequency.
- ⁴³⁴When analyzing the readout data, we have the freedom to choose projections.